
ILLUSTRATION SHOWS TYPICAL PARTS ONLY, ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEM.

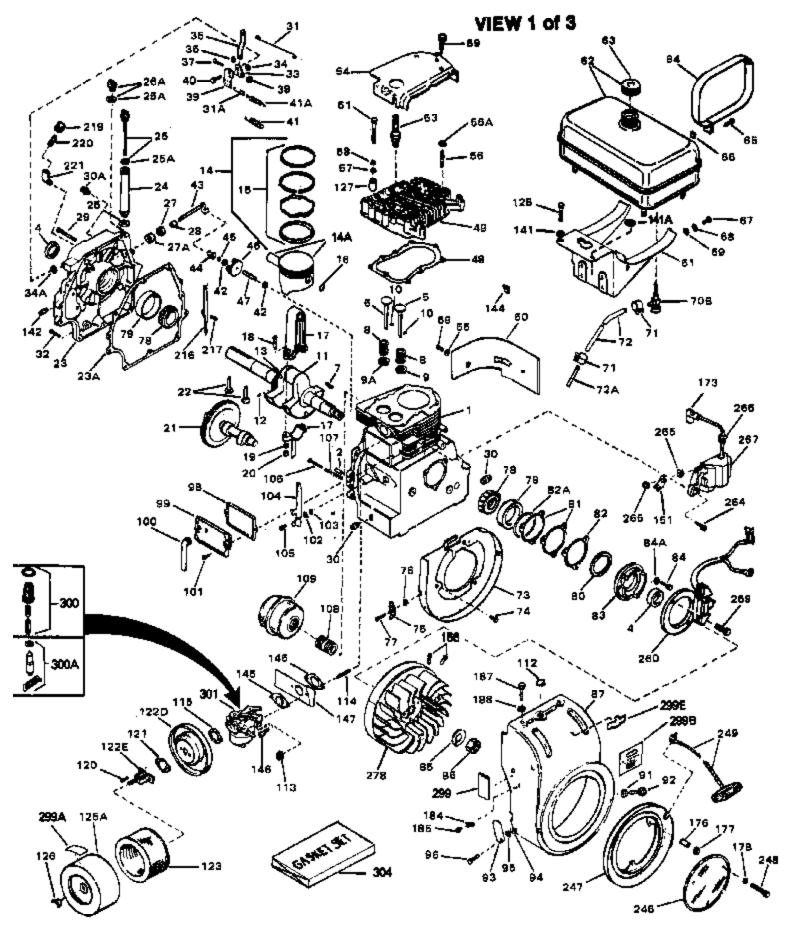


Ref #	Part Number	Qty	Description
1	33039		Cylinder (Incl.2,4,30,47,119) (3-5/16 ")
	27652		Pin, Dowel
	31950		Seal, Oil
	31940		Intake Valve (Std.)
5	31941		Intake Valve (1/32" OS) (Incl. 9)
6	31942		Exhaust Valve (Std.)
6	31943		Exhaust Valve (1/32" OS) (Incl. 9)
	650592		Key, Flywheel
	31944		Spring, Valve
	31945		Cap, Lower valve spring (Std.)
9A	31946		Cap, Lower valve spring (1/32" OS)
9	31946		Cap, Lower valve spring (1/32" OS)
9	31945		Cap, Lower valve spring (Std.)
	20810		Pin, Valve spring retainer
	33397A		
			Crankshaft (Incl. 12, 13, 78 & 79)
	29783		Pin, Crankshaft gear
13	31931		Gear, Crankshaft
14A	32001C		Piston & Pin Ass'y. (Std.)(Incl.16)(3 -5/16")
14A	32002B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32003B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32619B		Piston & Pin Ass'y. (.030" OS) (Incl. 16)
	34508		Piston, Pin & Ring Set (Std.) (3-5/16 " Bore)
	34509		Piston, Pin & Ring Set (.010" OS)
14	34510		Piston, Pin & Ring Set (.020" OS)
14	34850		Piston, Pin & Ring Set (.030" OS)
	34523		Piston, Pin & Ring Set (.040" OS)
	32620B		Piston & Pin Ass'y. (.040" OS) (Incl. 16)
	32004		Ring Set (Std.) (3-5/16" Bore)
	32005		Ring Set (.010" OS)
15	32006		Ring Set (.020" OS)
15	32623		Ring Set (.030" OS)
15	32624		Ring Set (.040" OS)
	32321		Re-Ringing Set, Piston
	31919		Ring, Piston pin retaining
			o , i o
	33093A		Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
	34383		Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
17	34384		Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18	32077		Bolt, Connecting rod
19	26073		Washer, Connecting rod
	28264		Nut Assy., Lock
	32150		Camshaft (MCR)
	31939		Lifter, Valve
	31956A		* Gasket, Cylinder cover
23	32685		Cylinder Cover (Incl.4,25,26A,28,30,3 4 & 43)
25A	29673		* Gasket, Oil fill
26	33069		Dipstick (Incl. 25A)
	32426		Spacer, Governor rod
	650588		Screw, 1/4-20 x 2"
	31927		Oil Drain Plug
	31968		Link, Governor
32	650451		Screw, 1/4-20 x 1"
33	31964		Clamp, Governor lever
	29193		Ring, Retaining
	31963		Lever, Governor adjusting
	650518		
	650544		Screw, 10-24 x 7/8"
38	7975		Nut, 10-24
39	31965		Plate, Governor spring

40	30312	Screw, 10-32 x 1/2"
41	31967	Spring, Governor
42	30590A	Washer, Flat
	32425	Rod Assy., Governor
	31948	Spool, Governor
	29193	•
		Ring, Retaining
	31947	Gear Assy., Governor
	31930	Shaft, Mechanical Governor
	32000A	* Gasket, Cylinder head
49	33034	Head, Cylinder
51	650694A	Screw, 5/16-18 x 2" (Use as required)
51	650711	Screw, 5/16-18 x 1-5/8" (Use as required)
	650628A	Screw, 5/16-18 x 2-3/8" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650714	Screw, $5/16-18 \times 1-5/8$ " (Use as required)
	650697A	
		Screw, 5/16-18 x 2-1/2" (Use as required)
	650692	Screw, 5/16-18 x 1-3/4" (Use as required)
	650603	Screw, 5/16-18 x 5/8" (Use as require d)
	33636	Resistor Spark Plug (RJ-8C)
53	34251	Resistor Spark Plug (RJ-17LM)
54	33035	Cover, Cylinder head
	28537	Washer, Plain
	650691	Washer, Flat (Use as required)
	650690	Washer, Belleville (Use as required)
	8274	
		Washer, Lock (Use as required)
	650128	Screw, 10-24 x 1/2"
	31976	Extension, Blower housing
	31978	Bracket, Fuel tank
63	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
63	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
64	31979	Strap, Fuel tank
	650451	Screw, 1/4-20 x 1"
	650456	
		Nut, Flange whiz-lock, 1/4-20
	650517	Screw, 1/4-20 x 27/32" (Use as required)
	650561	Screw, 1/4-20 x 5/8" (Use as required)
	30063	Screw, 1/4-20 x 1/2" (Use as required)
67	792028	Screw, 5/16-18 x 7/8" (Use as require d)
70B	29683	Strainer & Shut-off, Fuel
71	26460	Clamp, Fuel line (Use as required)
	30962	Fuel Line (Braided) (32") (Use as req uired)
	30965	Fuel Line (Braided) (48") (Use as req uired)
	29774	
		Fuel Line (Braided) (8.25") (Use as required)
	30705	Fuel Line (Braided) (16") (Use as req uired)
	32579	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
78	31932	Bearing, Tapered roller
	31928	Cup, Bearing
	32031	Spacer, Steel (.010" thick) NOTE: Determine the gap
20		
80		between the cover and the machined surface on the sulinder
80		
80		which can be from .001"up to .007" in which case no shim
80		gaskets will be required. Use of gasket must be limited to a
80		which can be from .001"up to .007" in which case no shim


	Part Number 31971	Qty	Description * Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder
			which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
	32599 31972		"O" Ring * Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
83	32577		Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat
	650679		Lockwasher, 5/16" (Use as required)
	792028 650666		Screw, 5/16-18 x 7/8" Washer, Lock
	650594		Nut, Flywheel, 3/4-16
	33044A		Blower Hsg. (Incl.73) (For electric s tarter)
	8274		Washer, Lock
	650595		Screw, 5/16-24 x 3/8"
	8274 650595		Washer, Lock Screw, 5/16-24 x 3/8"
	31958		* Gasket, Breather
	31957		Breather Assy.
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	650597 32042		Screw, 10-24 x 5/8" Nipple, Exhaust pipe
	32042 32043B		Muffler
	33038		Plug, Button (Use as required)
115	27272		* Gasket, Air cleaner
	650399		Screw, 10-32 x 5/8"
	30767		Spacer, Air cleaner
	32810 650513		Cover, Air cleaner Nut, Wing
	650713		Screw, 5/16-18 x 5/8" (Use as require d)
128	650429		Screw, 5/16-18 x 3/4" (Use as require d)
	792028		Screw, 5/16-18 x 7/8" (Use as require d)
	26073		Washer, Flat (Use as required)
	8274 33263		Lockwasher, Split (Use as required) * Gasket, Carburetor
	650451		Screw, 1/4-20 x 1"
	34061		Baffle, Air
	610908		Terminal, Female
	730201		Trigger Pin Kit (Use as required)
	610118 31992		Cover, Spark plug (Use as required)
	8345		Spacer, Screen Washer, 1/4 plain (Use as required)
	27070		Washer, Lock 1/4 E.T. (Use as required)
	650675		Washer, Flat 1/4 (Use as required)

Ref #	Part Number Qty	Description
184	27793	Clip, Conduit
185	28942	Screw, 10-32 x 3/8"
187	650713	Screw, 5/16-18 x 5/8"
188	26073	Washer, Flat
246	33776	Screen, Starter pulley
247	31980	Pulley, Starter
248	650680	Screw, 1/4-20 x 1-1/2"
249	32046	Rope Assy., Starter (Use as required)
264	650661	Screw, 1/4-20 x 3/4"
265	610408	Nut, Hex
266	610750	Grommet, Lead wire
267	610906	Solid State Magneto (Incl.151,173,265,266)(20 Amp)
278	610901	Solid State Flywheel
299	34346	Decal, Instruction
299B	550223	Decal, Name
300A	631021	Inlet Needle, Seat & Clip Assy.
301	631975	Carburetor (Incl. 145) (Refer to Division 5, Section A, page 150 for breakdown)
304	33237A	* Gasket Set (Incl. items marked *)

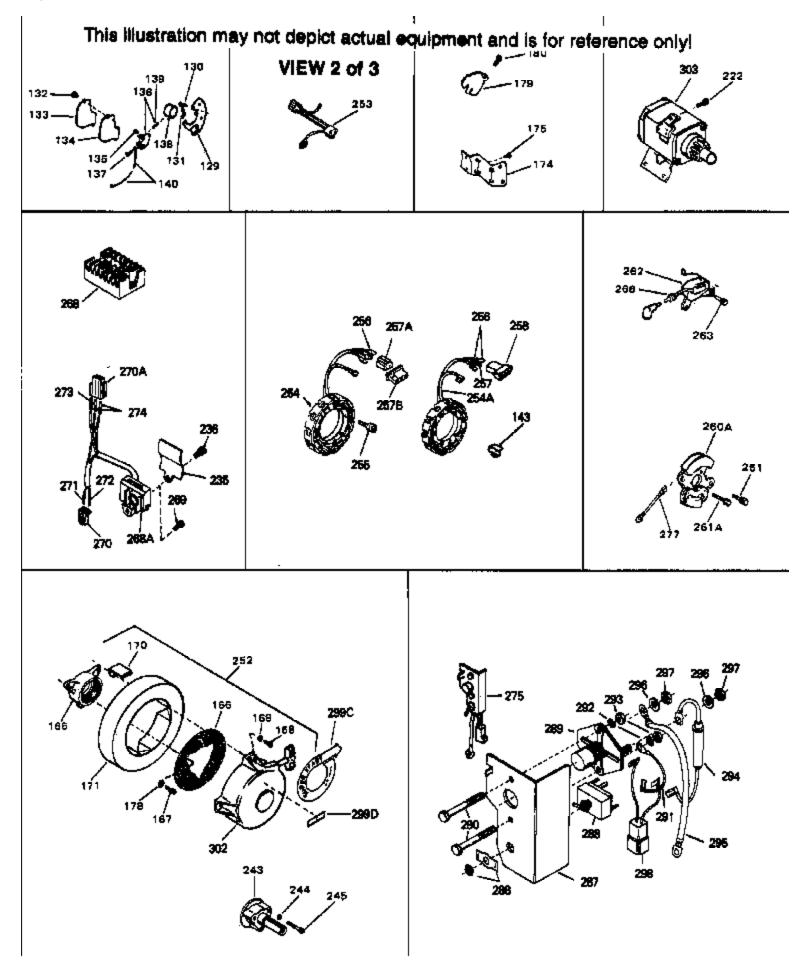

Ref # Part Numb	Qty Description
1782707017865067518065070122279202822265078123534276	Washer, Lock 1/4 E.T. (Use as require d) Washer, Flat 1/4 (Use as required) Screw, 8-18 x 7/16" (Use as required) Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor) Screw,5/16-18 x 11/16"(Use w/33835 st r.motor) Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
236 650736 252 730134	Screw, 10-16 x 3/8" (Use as required) Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
253 33018 254A 610902 255 650521 256 610905 257 610904 257B 610824 258 610903 266 610750 268A 610996 269 30063 270A 610990 270 610921 271 610992 272 610989 273 610992 274 610991 275 730198 287 34614 288 34615 289 34616 290 792026 291 34619 292 27513 293 650864 294 34620 295 34618 296 8274 297 650586 298 34617 303 33835	Harness Assy., Adapter (Use as requir ed) Alternator Coil (20 Amp)(Incl.256,257,258) Screw, 10-32 x 1-1/8" Terminal Flat Connector (Female terminals) (As req.) Connector, Flat Grommet, Lead wire Regulator (20 Amp) (Incl. 270 thru 27 4) Screw, 1/4-20 x 1/2" Connector, Male Connector, Male Connector Terminal, Female Terminal, Female Terminal, Female Terminal, Female Starter Switch Kit(Incl. 287-298) (As req.) Bracket, Starter button Switch, Toggle Switch, Starter Screw, 1/4-20 x 7/8" Wire Assy., Ground Lockwasher, Split Nut, Hex Wire & Fuse Assy. Wire Assy., Starter Lockwasher, Split Nut, Jam Cord Assy., Adapter Electric Starter Motor (12 Vott) NOTE: The 32817 and 33835 starter motors are used interchangeably on the se models. Refer to service numberstamped on end cap of motor, or on decal for identification. Refer to Division 5, Section D for

ILLUSTRATION SHOWS TYPICAL FARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY DEM.

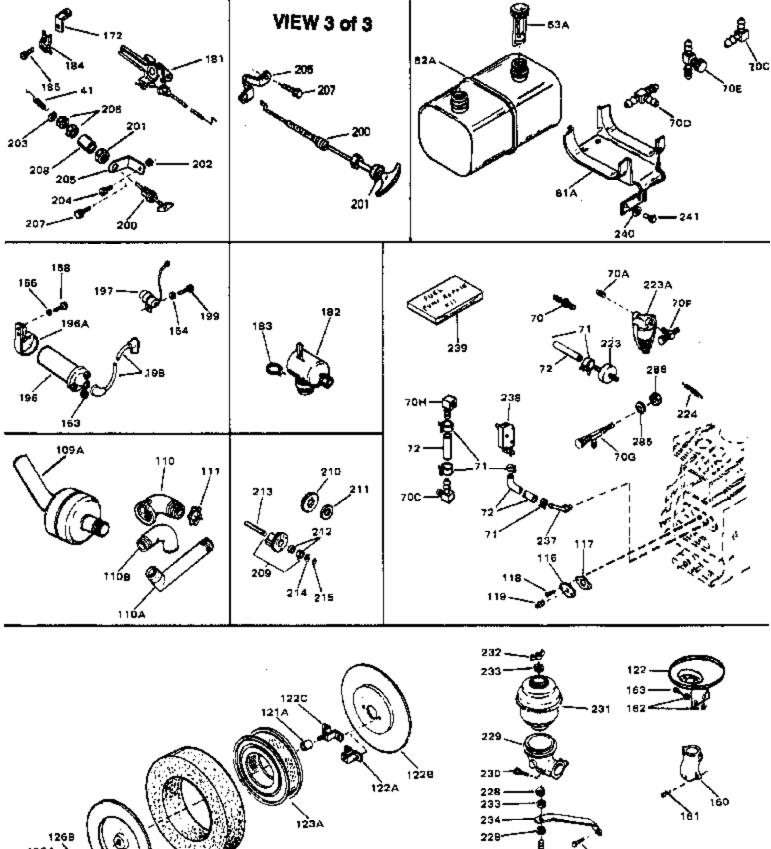

227-

234A

124

126A

Ref #	Part Number C	ty Description
41	31967	Spring, Governor
62A	31977	Fuel Tank (Incl. 63)
71	26460	Clamp, Fuel line (Use as required)
72	30962	Fuel Line (Braided) (32") (Use as req uired)
72	30965	Fuel Line (Braided) (48") (Use as req uired)
72	29774	Fuel Line (Braided) (8.25") (Use as r equired)
72	30705	Fuel Line (Braided) (16") (Use as req uired)
119	28534	Pipe Plug, 1/8-27 (Use as required)
119	9556	Plug, Pipe, 1/8-27 (Use as required)
122C	32907B	Bracket, Air cleaner
122B	34065	Bracket, Air cleaner
123A	32008	Element, Air cleaner
184	27793	Clip, Conduit
185	28942	Screw, 10-32 x 3/8"
200	32421	Control Assy., Speed (Incl. 206)
201	650641	Nut, Jam
205	33597	Bracket, Speed control
206	650456	Nut, Flanged whiz-lock
207	650561	Screw, 1/4-20 x 5/8"