
ILLUSTRATION SHOWS TYPICAL PARTS ONLY, ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEAL

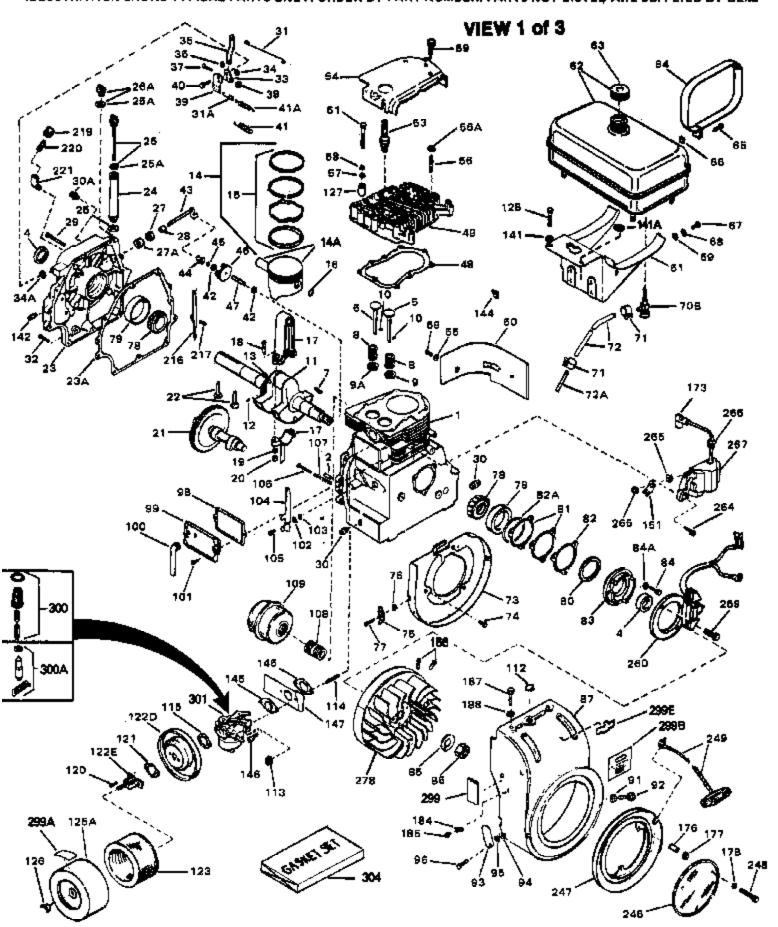


Rof #	Part Number C	Oty Description
	33042	Cylinder (Incl. 2, 4, 30 & 47) (3-1/2 " Bore)
	27652	Pin, Dowel
	31950	Seal, Oil
	31940	Intake Valve (Std.)
	31941	Intake Valve (1/32" OS) (Incl. 9)
	31942	Exhaust Valve (Std.)
6	31943	Exhaust Valve (1/32" OS) (Incl. 9)
7	650592	Key, Flywheel
8	31944	Spring, Valve
	31945	Cap, Lower valve spring (Std.)
	31946	Cap, Lower valve spring (1/32" OS)
	31946	Cap, Lower valve spring (1/32" OS)
	31945	Cap, Lower valve spring (Std.)
	20810	Pin, Valve spring (Stat)
	33390B	. •
		Crankshaft (Incl. 12, 13, 78 & 79)
	29783	Pin, Crankshaft gear
	31931	Gear, Crankshaft
	34511	Piston, Pin & Ring Set (Std.) (3-1/2" Bore)
	34512	Piston, Pin & Ring Set (.010" OS)
14	34513	Piston, Pin & Ring Set (.020" OS)
14	34524	Piston, Pin & Ring Set (.030" OS)
14	34525	Piston, Pin & Ring Set (.040" OS)
14A	32238B	Piston & Pin Ass'y. (Std.)(Incl.16)(3 -1/2")
	32239B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32240B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32621B	Piston & Pin Ass'y. (.030" OS) (Incl. 16)
	32622B	Piston & Pin Ass'y. (.040" OS) (Incl. 16)
	32241	, , , ,
		Ring Set (Std.) (3-1/2" Bore)
	32242	Ring Set (.010" OS)
	32243	Ring Set (.020" OS)
	32625	Ring Set (.030" OS)
	32626	Ring Set (.040" OS)
	32336	Re-Ringing Set, Piston
16	31919	Ring, Piston pin retaining
17	33093A	Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
17	34383	Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
17	34384	Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18	32077	Bolt, Connecting rod
	26073	Washer, Connecting rod
	28264	Nut Assy., Lock
	32150	Camshaft (MCR)
	31939	Lifter, Valve
	32580A	Cover, Cylinder (Incl. 4, 28, 30, 34, & 43)
	31956A	* Gasket, Cylinder cover
	29673	* Gasket, Oil fill
		•
	33069	Dipstick (Incl. 25A)
	32426	Spacer, Governor rod
	650588	Screw, 1/4-20 x 2"
	31927	Oil Drain Plug
	31968	Link, Governor
	650451	Screw, 1/4-20 x 1"
33	31964	Clamp, Governor lever
34	29193	Ring, Retaining
35	31963	Lever, Governor adjusting
	650518	Lockwasher
	650544	Screw, 10-24 x 7/8"
	7975	Nut, 10-24
	31965	Plate, Governor spring
33	0.000	. ia.a, action opining


Dof #	Dort Number	Description
	Part Number Qty	
	30312	Screw, 10-32 x 1/2"
	31967	Spring, Governor
	30590A	Washer, Flat
	32425	Rod Assy., Governor
	31948	Spool, Governor
	29193	Ring, Retaining
	31947	Gear Assy., Governor
	31930	Shaft, Mechanical Governor
	32246A	* Gasket, Cylinder head
	33034	Head, Cylinder
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650711	Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650628A	Screw, 5/16-18 x 2-3/8" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
51	650714	Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650692	Screw, 5/16-18 x 1-3/4" (Use as requi red)
51	650603	Screw, 5/16-18 x 5/8" (Use as require d)
53	33636	Resistor Spark Plug (RJ-8C)
53	34251	Resistor Spark Plug (RJ-17LM)
54	33035	Cover, Cylinder head
55	28537	Washer, Plain
57	650691	Washer, Flat (Use as required)
58	650690	Washer, Belleville (Use as required)
58	8274	Washer, Lock (Use as required)
59	650128	Screw, 10-24 x 1/2"
60	31976	Extension, Blower housing
61	31978	Bracket, Fuel tank
63	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
63	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
64	31979	
	650451	Strap, Fuel tank Screw, 1/4-20 x 1"
	650456	
	650517	Nut, Flange whiz-lock, 1/4-20
	650561	Screw, 1/4-20 x 27/32" (Use as requir ed) Screw, 1/4-20 x 5/8" (Use as required)
	30063	Screw, 1/4-20 x 3/6 (Use as required) Screw, 1/4-20 x 1/2" (Use as required)
		Screw, 5/16-18 x 7/8" (Use as required)
	792028	
	29683 26460	Strainer & Shut-off, Fuel
		Clamp, Fuel line (Use as required)
	30705 30962	Fuel Line (Braided) (16") (Use as required)
		Fuel Line (Braided) (32") (Use as required)
	30965	Fuel Line (Braided) (48") (Use as required)
	29774	Fuel Line (Braided) (8.25") (Use as r equired)
	31975 650564	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	33356 38545	Terminal Crommet Plastic
	28545 650760	Grommet, Plastic
	650760	Screw, 8-32 x 3/8"
	31932	Bearing, Tapered roller
	31928	Cup, Bearing
80	32031	Spacer, Steel (.010" thick) NOTE: Determine the gap
		between the cover and the machined surface on the cylinder
		which can be from .001"up to .007" in which case no shim
		gaskets will be required. Use of gasket must be limited to a
		combined total of .010" thick. Steel spacersmust be used
		as required

-	Part Number 31971	2ty Description * Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
82	31972	* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
	32599 32677	"O" Ring Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat
84A 85 86 87 91 92 93 94 95 96 98 99 100 101 102 103 104 105 106 107 108 109 112 113 114 115 120 121 122D 122E 125A 128 128	650668 650679 650666 650594 33037 8274 650595 32039 650890 26073 650624 31958 31957 35350 650128 28558 31966 31984A 650597 650591 33099 32042 32043B 33038 29752 650587 27272 650399 30767 32378 32376 32009 650513 650713 650429 792028	Screw, 10-32 x 1" Lockwasher, 5/16" (Use as required) Washer, Lock Nut, Flywheel, 3/4-16 Blower Housing Washer, Lock Screw, 5/16-24 x 3/8" Switch, Stop Washer, Shakeproof Washer, Flat Screw, 5/16-24 x 9/16" * Gasket, Breather Breather Assy. Tube, Breather Screw, 10-24 x 1/2" Washer, Wave Bushing, Control lever Lever, Control Screw, 10-24 x 5/8" Screw, 10-24 x 2" Spring Nipple, Exhaust pipe Muffler Plug, Button (Use as required) Nut & Lockwasher Assy. Stud, Carburetor * Gasket, Air cleaner Screw, 10-32 x 5/8" Spacer, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Cover, Air cleaner Nut, Wing Screw, 5/16-18 x 5/8" (Use as require d) Screw, 5/16-18 x 3/4" (Use as require d) Screw, 5/16-18 x 3/4" (Use as require d) Screw, 5/16-18 x 7/8" (Use as require d)
	8274	Lockwasher, Split (Use as required)

Ref #	Part Number C	Oty Description
141	26073	Washer, Flat (Use as required)
145	31960	* Gasket, Carburetor
147	31959	Baffle, Air
156	730201	Trigger Pin Kit (Use as required)
173	610118	Cover, Spark plug (Use as required)
176	31992	Spacer, Screen
177	8345	Washer, 1/4 plain (Use as required)
178	27070	Washer, Lock 1/4 E.T. (Use as require d)
178	650675	Washer, Flat 1/4 (Use as required)
184	27793	Clip, Conduit
185	28942	Screw, 10-32 x 3/8"
187	650713	Screw, 5/16-18 x 5/8"
188	26073	Washer, Flat
246	33776	Screen, Starter pulley
247	31980	Pulley, Starter
248	650680	Screw, 1/4-20 x 1-1/2"
249	32046	Rope Assy., Starter (Use as required)
266	610750	Grommet, Lead wire
278	610758	Flywheel
299B	550223	Decal, Name
299B	32676	Decal, Solid State
299	34346	Decal, Instruction
299A	31752	Decal, Air cleaner
300	32255A	Valve, Seat, Spring & Gasket Assy.
301	631533	Carburetor (Incl. 145) (Refer to Division 5, Section A, page 94 for breakdown)
304	33237A	* Gasket Set (Incl. items marked *)

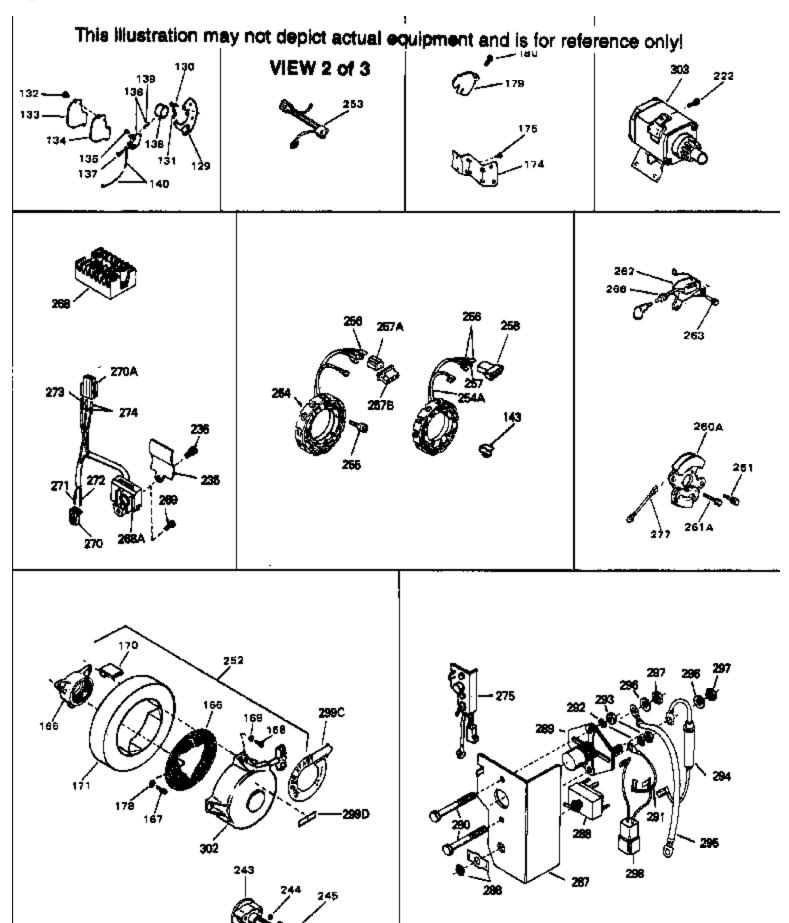

Ref #	Part Number	Qty	Description
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
180	650701		Screw, 8-18 x 7/16" (Use as required)
222	792028		Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
222	650781		Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276		Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
000	050700		6 /
	650736		Screw, 10-16 x 3/8" (Use as required)
252	730134		Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
253	33018		Harness Assy., Adapter (Use as requir ed)
257B	610824		Flat Connector (Female terminals) (As req.)
260A	610759		Solid State Magneto
261	650489		Screw, 1/4-20 x 5/8"
261A	650669		Screw, 5/16-18 x 1-1/4"
262	610760		Solid State Transformer Ass'y.(Incl.1 73,266)
263	650561		Screw, 1/4-20 x 5/8"
266	610750		Grommet, Lead wire
275	730198		Starter Switch Kit(Incl. 287-298) (As req.)
277	30831		Ground Wire (Incl. 75)

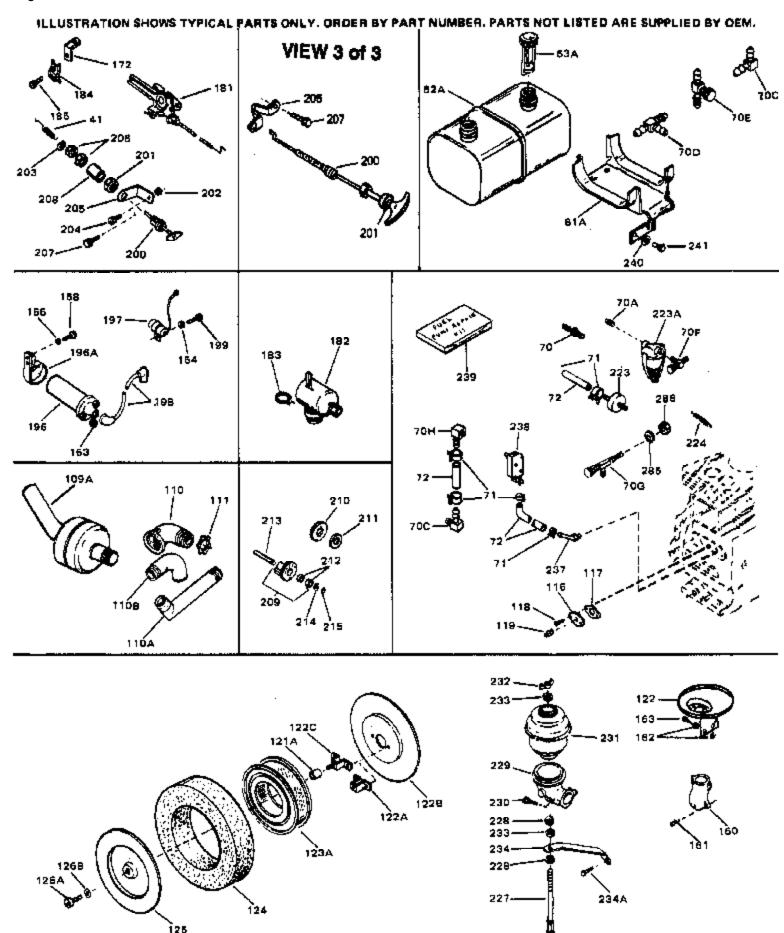

Ref #	Part Number (Qty	Description
41	31967		Spring, Governor
62A	31977		Fuel Tank (Incl. 63)
70	29634		Fitting, Fuel line
71	26460		Clamp, Fuel line (Use as required)
72	30705		Fuel Line (Braided) (16") (Use as req uired)
72	30962		Fuel Line (Braided) (32") (Use as req uired)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
72	29774		Fuel Line (Braided) (8.25") (Use as r equired)
119	28534		Pipe Plug, 1/8-27 (Use as required)
119	9556		Plug, Pipe, 1/8-27 (Use as required)
123A	32008		Element, Air cleaner
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"