ILLUSTRATION SHOWS TYPICAL PARTS ONLY, ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEAL




Dof #	Port Number	A. Dogoription
	Part Number Qt	
	33042	Cylinder (Incl. 2, 4, 30 & 47) (3-1/2 " Bore)
	27652	Pin, Dowel
	31950	Seal, Oil
	31940	Intake Valve (Std.)
	31941	Intake Valve (1/32" OS) (Incl. 9)
6	31942	Exhaust Valve (Std.)
6	31943	Exhaust Valve (1/32" OS) (Incl. 9)
7	650592	Key, Flywheel
8	31944	Spring, Valve
	31946	Cap, Lower valve spring (1/32" OS)
	31945	Cap, Lower valve spring (Std.)
	31945	Cap, Lower valve spring (Std.)
	31946	Cap, Lower valve spring (1/32" OS)
	20810	Pin, Valve spring retainer
	33396	Crankshaft (Incl. 12, 13, 78 & 79)
		,
	29783	Pin, Crankshaft gear
	31931	Gear, Crankshaft
	32238B	Piston & Pin Ass'y. (Std.)(Incl.16)(3 -1/2")
	32239B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32240B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32621B	Piston & Pin Ass'y. (.030" OS) (Incl. 16)
	32622B	Piston & Pin Ass'y. (.040" OS) (Incl. 16)
	34511	Piston, Pin & Ring Set (Std.) (3-1/2" Bore)
14	34512	Piston, Pin & Ring Set (.010" OS)
14	34513	Piston, Pin & Ring Set (.020" OS)
14	34524	Piston, Pin & Ring Set (.030" OS)
14	34525	Piston, Pin & Ring Set (.040" OS)
15	32241	Ring Set (Std.) (3-1/2" Bore)
	32242	Ring Set (.010" OS)
	32243	Ring Set (.020" OS)
	32625	Ring Set (.030" OS)
	32626	Ring Set (.040" OS)
	32336	Re-Ringing Set, Piston
	31919	Ring, Piston pin retaining
	33093A	Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
	34383	Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
	34384	Connecting Rod Assy.(.020" US)(Incl. 1 8, 19,20)
	32077	Bolt, Connecting rod
	26073	Washer, Connecting rod
	28264	Nut Assy., Lock
	32150	Camshaft (MCR)
	31939	Lifter, Valve
	31956A	* Gasket, Cylinder cover
	32685	Cylinder Cover (Incl.4,25,26A,28,30,3 4 & 43)
	31985	Oil Fill Tube
	29673	* Gasket, Oil fill
	29673	* Gasket, Oil fill tube
	33070	Dipstick (Incl. 25A)
28	32426	Spacer, Governor rod
29	650588	Screw, 1/4-20 x 2"
30	31927	Oil Drain Plug
	31968	Link, Governor
	650451	Screw, 1/4-20 x 1"
	31964	Clamp, Governor lever
	29193	Ring, Retaining
	31963	Lever, Governor adjusting
	650518	Lockwasher
	650544	Screw, 10-24 x 7/8"
31	000 11	GOIGN, IU-ZT X 1/U

Dof #	Part Number	Ot /	Description
	7975	Qty	Nut, 10-24
	31965		•
			Plate, Governor spring
	30312		Screw, 10-32 x 1/2"
	31967		Spring, Governor
	30590A		Washer, Flat
	32425		Rod Assy., Governor
	31948		Spool, Governor
	29193		Ring, Retaining
	31947		Gear Assy., Governor
	31930		Shaft, Mechanical Governor
	32246A		* Gasket, Cylinder head
	33034		Head, Cylinder
	650694A		Screw, 5/16-18 x 2" (Use as required)
51	650711		Screw, 5/16-18 x 1-5/8" (Use as requi red)
51	650628A		Screw, 5/16-18 x 2-3/8" (Use as requi red)
51	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
51	650714		Screw, 5/16-18 x 1-5/8" (Use as requi red)
51	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
51	650692		Screw, 5/16-18 x 1-3/4" (Use as requi red)
51	650603		Screw, 5/16-18 x 5/8" (Use as require d)
53	33636		Resistor Spark Plug (RJ-8C)
53	34251		Resistor Spark Plug (RJ-17LM)
	33035		Cover, Cylinder head
	28537		Washer, Plain
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	8274		Washer, Lock (Use as required)
	650128		Screw, 10-24 x 1/2"
	31976		Extension, Blower housing
	31978		Bracket, Fuel tank
	410144B		Fuel Cap (White Plastic)(Std.)(As req uired)
	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
	0.2.0		required)
0.4	0.4070		•
	31979		Strap, Fuel tank
	650451		Screw, 1/4-20 x 1"
	650456		Nut, Flange whiz-lock, 1/4-20
	650517		Screw, 1/4-20 x 27/32" (Use as requir ed)
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30063		Screw, 1/4-20 x 1/2" (Use as required)
	792028		Screw, 5/16-18 x 7/8" (Use as require d)
	29683		Strainer & Shut-off, Fuel
	26460		Clamp, Fuel line (Use as required)
	29774		Fuel Line (Braided) (8.25") (Use as r equired)
	30705		Fuel Line (Braided) (16") (Use as req uired)
	30962		Fuel Line (Braided) (32") (Use as req uired)
	30965		Fuel Line (Braided) (48") (Use as req uired)
	32579		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
78	31932		Bearing, Tapered roller
79	31928		Cup, Bearing
80	32031		Spacer, Steel (.010" thick) NOTE: Determine the gap
			between the cover and the machined surface on the cylinder
			which can be from .001"up to .007" in which case no shim
			gaskets will be required. Use of gasket must be limited to a
			combined total of .010" thick. Steel spacersmust be used
			as required
			·

	Dort Number	Description
	Part Number Qty 31971	Description * Cocket Shim (004/ 005 thick) NOTE: Determine the gap
81	31971	* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
82	31972	* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
	32599 32577	"O" Ring Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat
84	792028	Screw, 5/16-18 x 7/8"
	650679	Lockwasher, 5/16" (Use as required)
	650666	Washer, Lock
	650594	Nut, Flywheel, 3/4-16
	33044A	Blower Hsg. (Incl.73) (For electric s tarter)
	8274	Washer, Lock
	650595	Screw, 5/16-24 x 3/8"
	8274	Washer, Lock
	650624 31958	Screw, 5/16-24 x 9/16" * Gasket, Breather
	31957	Breather Assy.
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	28558	Washer, Wave
	31966	Bushing, Control lever
104	31984A	Lever, Control
105	650597	Screw, 10-24 x 5/8"
	650591	Screw, 10-24 x 2"
	33099	Spring
	33038	Plug, Button (Use as required)
	29752	Nut & Lockwasher Assy.
	650587	Stud, Carburetor
	27272	* Gasket, Air cleaner
	650399	Screw, 10-32 x 5/8"
	30767 32376	Spacer, Air cleaner
	32378	Bracket, Air cleaner Bracket, Air cleaner
	32009	Cover, Air cleaner
	650513	Nut, Wing
	650713	Screw, 5/16-18 x 5/8" (Use as require d)
	650429	Screw, 5/16-18 x 3/4" (Use as require d)
	792028	Screw, 5/16-18 x 7/8" (Use as require d)
141A		Lockwasher, Split (Use as required)
141	26073	Washer, Flat (Use as required)
145	31960	* Gasket, Carburetor
	31959	Baffle, Air
151	33356	Terminal, Ground

Ref #	Part Number	Qty	Description
156	730201	-	Trigger Pin Kit (Use as required)
173	610118		Cover, Spark plug (Use as required)
176	31992		Spacer, Screen
177	8345		Washer, 1/4 plain (Use as required)
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
187	650713		Screw, 5/16-18 x 5/8"
188	26073		Washer, Flat
246	33776		Screen, Starter pulley
247	31980		Pulley, Starter
248	650680		Screw, 1/4-20 x 1-1/2"
249	32046		Rope Assy., Starter (Use as required)
264	650661		Screw, 1/4-20 x 3/4"
265	610408		Nut, Hex
266	610750		Grommet, Lead wire
267	610748		Solid State Magneto (Incl.151,173,265 ,266)
278	610746		Solid State Flywheel
299A	31752		Decal, Air cleaner
299B	32676		Decal, Solid State
299	34346		Decal, Instruction
300	32255A		Valve, Seat, Spring & Gasket Assy.
301	631533		Carburetor (Incl. 145) (Refer to Division 5, Section A, page 94 for breakdown)
			,
304	33237A		* Gasket Set (Incl. items marked *)

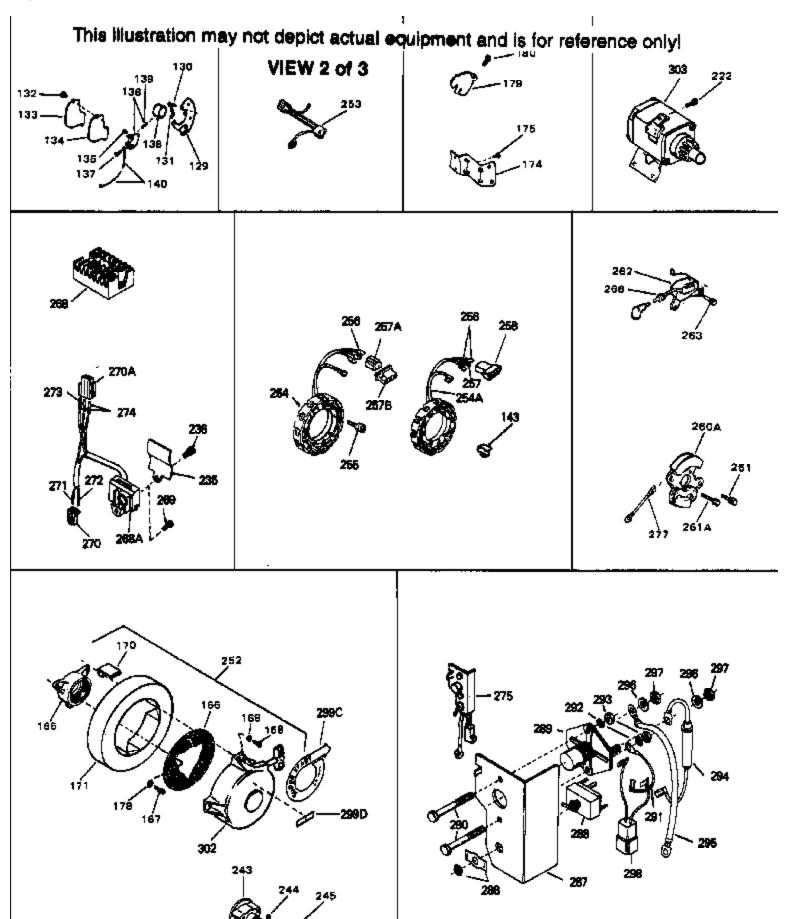

Ref #	Part Number	Qty	Description
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
180	650701		Screw, 8-18 x 7/16" (Use as required)
222	792028		Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
222	650781		Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276		Plate, Cover (Use as required to cover regulator mounting
			hole in blower housing)
236	650736		Screw, 10-16 x 3/8" (Use as required)
	730134		Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use
			as required)
253	33018		Harness Assy., Adapter (Use as requir ed)
	610761		Alternator Coil (Solid State) (10 Amp) (Incl. Nos. 253, 256 &
204	010701		257A)
0=0	0.4.0.0.0		,
	610922		Terminal, Female
	610824		Flat Connector (Female terminals) (As req.)
	610819		Connector, Pyramid (For female termin als)
	610750		Grommet, Lead wire
	730198		Starter Switch Kit(Incl. 287-298) (As req.)
299D	32187		Decal, "Super Start"



Ref #	Part Number Qt	y Description
41	31967	Spring, Governor
62A	31977	Fuel Tank (Incl. 63)
70	29634	Fitting, Fuel line
71	26460	Clamp, Fuel line (Use as required)
72	29774	Fuel Line (Braided) (8.25") (Use as r equired)
72	30705	Fuel Line (Braided) (16") (Use as req uired)
72	30962	Fuel Line (Braided) (32") (Use as req uired)
72	30965	Fuel Line (Braided) (48") (Use as req uired)
119	28534	Pipe Plug, 1/8-27 (Use as required)
119	9556	Plug, Pipe, 1/8-27 (Use as required)
123A	32008	Element, Air cleaner