
## ILLUSTRATION SHOWS TYPICAL PARTS ONLY, ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEAL

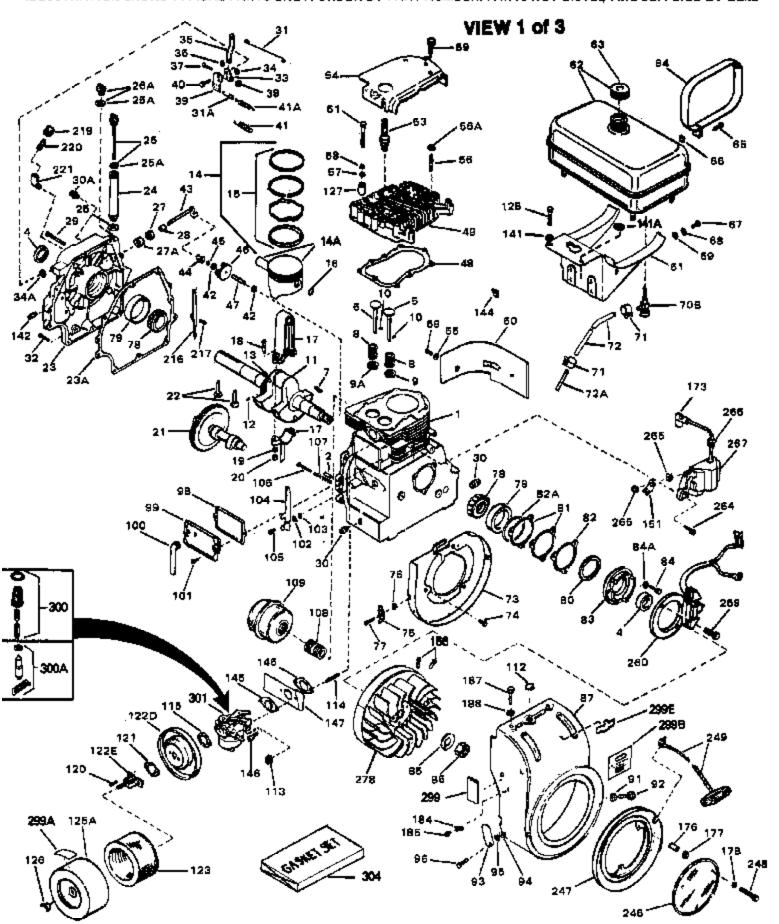


Def // Deat North en	Ot . Decembring
Ref # Part Number	Qty Description
1 33042	Cylinder (Incl. 2, 4, 30 & 47) (3-1/2 " Bore)
2 27652	Pin, Dowel
4 31950	Seal, Oil
5 31940	Intake Valve (Std.)
5 31941	Intake Valve (1/32" OS) (Incl. 9)
6 31942	Exhaust Valve (Std.)
6 31943	Exhaust Valve (1/32" OS) (Incl. 9)
7 650592	Key, Flywheel
8 31944	Spring, Valve
9 31946	Cap, Lower valve spring (1/32" OS)
9 31945	Cap, Lower valve spring (Std.)
9A 31945	Cap, Lower valve spring (Std.)
9A 31946	Cap, Lower valve spring (1/32" OS)
10 20810	Pin, Valve spring retainer
11 33393A	Crankshaft (Incl. 12, 13, 78 & 79)
12 29783	Pin, Crankshaft gear
13 31931	Gear, Crankshaft
14 34511	Piston, Pin & Ring Set (Std.) (3-1/2" Bore)
14 34512	Piston, Pin & Ring Set (.010" OS)
14 34513	Piston, Pin & Ring Set (.020" OS)
14 34524	Piston, Pin & Ring Set (.030" OS)
14 34525	Piston, Pin & Ring Set (.040" OS)
14A 32238B	Piston & Pin Ass'y. (Std.)(Incl.16)(3 -1/2")
14A 32239B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A 32240B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14A 32621B	Piston & Pin Ass'y. (.030" OS) (Incl. 16)
14A 32622B	Piston & Pin Ass'y. (.040" OS) (Incl. 16)
15 32241	Ring Set (Std.) (3-1/2" Bore)
15 32242	Ring Set (July OS)
15 32243	Ring Set (.020" OS)
15 32625	Ring Set (.030" OS)
15 32626	Ring Set (.040" OS)
15 32336	Re-Ringing Set, Piston
	Ring, Piston pin retaining
16 31919 17 33093A	
17 33093A	Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
	Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
17 34384 49 32077	Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18 32077	Bolt, Connecting rod
19 26073	Washer, Connecting rod
20 28264	Nut Assy., Lock
21 32150	Camshaft (MCR)
22 31939	Lifter, Valve
23 32580A	Cover, Cylinder (Incl. 4, 28, 30, 34, & 43)
23A 31956A	* Gasket, Cylinder cover
24 33893A	Oil Fill Tube
25A 33590	"O" Ring
26 33984A	Dipstick (Incl. 25A)
28 32426	Spacer, Governor rod
29 650588	Screw, 1/4-20 x 2"
30A 28483	Oil Drain Plug
30 31927	Oil Drain Plug
30 28483	Oil Drain Plug
31 31968	Link, Governor
32 650451	Screw, 1/4-20 x 1"
33 31964	Clamp, Governor lever
34 29193	Ring, Retaining
35 31963	Lever, Governor adjusting
36 650518	Lockwasher


Ref #	Part Number	Qty	Description
	650544		Screw, 10-24 x 7/8"
38	7975		Nut, 10-24
	31965		Plate, Governor spring
	30312		Screw, 10-32 x 1/2"
	31967		Spring, Governor
	30590A		Washer, Flat
	32425		Rod Assy., Governor
	31948		
			Spool, Governor
	29193		Ring, Retaining
	31947		Gear Assy., Governor
	31930		Shaft, Mechanical Governor
	32246A		* Gasket, Cylinder head
	33034		Head, Cylinder
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650711		Screw, 5/16-18 x 1-5/8" (Use as requi red)
51	650628A		Screw, 5/16-18 x 2-3/8" (Use as requi red)
51	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
51	650714		Screw, 5/16-18 x 1-5/8" (Use as requi red)
51	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
51	650692		Screw, 5/16-18 x 1-3/4" (Use as required)
	650603		Screw, 5/16-18 x 5/8" (Use as require d)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug (RJ-17LM)
	33035		Cover, Cylinder head
	28537		Washer, Plain
	650691		Washer, Flat (Use as required)
	650690		
			Washer, Belleville (Use as required)
	8274		Washer, Lock (Use as required)
	650128		Screw, 10-24 x 1/2"
	31976		Extension, Blower housing
	31978		Bracket, Fuel tank
	410144B		Fuel Cap (White Plastic)(Std.)(As req uired)
63	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
			required)
64	31979		Strap, Fuel tank
	650451		Screw, 1/4-20 x 1"
	650456		Nut, Flange whiz-lock, 1/4-20
	650517		Screw, 1/4-20 x 27/32" (Use as requir ed)
	650561		Screw, 1/4-20 x 5/8" (Use as required )
	30063		
			Screw, 1/4-20 x 1/2" (Use as required )
	792028		Screw, 5/16-18 x 7/8" (Use as require d)
	29683		Strainer & Shut-off, Fuel
	26460		Clamp, Fuel line (Use as required)
	29774		Fuel Line (Braided) (8.25") (Use as r equired)
	30705		Fuel Line (Braided) (16") (Use as req uired)
	30962		Fuel Line (Braided) (32") (Use as req uired)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
73	32579		Baffle, Blower housing
74	650561		Screw, 1/4-20 x 5/8"
78	31932		Bearing, Tapered roller
	31928		Cup, Bearing
	32031		Spacer, Steel (.010" thick) NOTE: Determine the gap
30			between the cover and the machined surface on the cylinder
			which can be from .001"up to .007" in which case no shim
			gaskets will be required. Use of gasket must be limited to a
			combined total of .010" thick. Steel spacersmust be used
			as required
			do roquirou

	72	
82 3197		* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
82A 3259 83 3257		"O" Ring Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat
84 7920 84A 6506 85 6506 86 6505 87 3304 91 8274 92 6505 95 8274 96 6506 98 3195 100 3535 101 6501 102 2855 103 3196 104 3198 105 6505 106 6505 107 3309 108 3204 109 3204 112 3303 113 2975 114 6505 115 2727 120 6503 121 3076 122D 3281 125A 3281 125A 3281 125A 3281 125A 3281 125A 3281 126 6505 128 6504 128 7920 141A 8274 141 2607 145 3196 147 3195	679 666 594 44A 4 595 4 624 58 57 50 128 58 66 84A 597 591 99 42 43B 38 52 587 72 399 67 12 10 513 713 429 028 4 73 60	Screw, 5/16-18 x 7/8" Lockwasher, 5/16" (Use as required) Washer, Lock Nut, Flywheel, 3/4-16 Blower Hsg. (Incl.73) (For electric s tarter) Washer, Lock Screw, 5/16-24 x 3/8" Washer, Lock Screw, 5/16-24 x 9/16" * Gasket, Breather Breather Assy. Tube, Breather Screw, 10-24 x 1/2" Washer, Wave Bushing, Control lever Lever, Control Screw, 10-24 x 5/8" Screw, 10-24 x 2" Spring Nipple, Exhaust pipe Muffler Plug, Button (Use as required) Nut & Lockwasher Assy. Stud, Carburetor * Gasket, Air cleaner Screw, 10-32 x 5/8" Spacer, Air cleaner Cover, Air cleaner Cover, Air cleaner Cover, Air cleaner Nut, Wing Screw, 5/16-18 x 5/8" (Use as require d) Screw, 5/16-18 x 3/4" (Use as require d) Screw, 5/16-18 x 7/8" (Use as require d) Screw, 5/16-18 x 7/8" (Use as require d) Screw, 5/16-18 x 7/8" (Use as require d) Ucokwasher, Split (Use as required) Washer, Flat (Use as required) * Gasket, Carburetor Baffle, Air

Ref #	Part Number	Qty	Description
151	33356	<u> </u>	Terminal, Ground
156	730201		Trigger Pin Kit (Use as required)
173	610118		Cover, Spark plug (Use as required)
176	32426		Spacer, Screen
177	650675		Washer, Flat 1/4"
177	8345		Washer, 1/4 plain (Use as required)
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"
187	650713		Screw, 5/16-18 x 5/8"
188	26073		Washer, Flat
246	33776		Screen, Starter pulley
248	650670		Screw, 1/4-20 x 3/4"
249	32046		Rope Assy., Starter (Use as required)
	650661		Screw, 1/4-20 x 3/4"
265	610408		Nut, Hex
	610750		Grommet, Lead wire
	610748		Solid State Magneto (Incl.151,173,265 ,266)
	610746		Solid State Flywheel
	34346		Decal, Instruction
	31752		Decal, Air cleaner
	550223		Decal, Name
299B	32676		Decal, Solid State
	32411A		Valve, Seat, Spring & Gasket Assy.
301	631498		Carburetor (Incl. 145) (Refer to Division 5, Section A, page 94 for breakdown)
304	33237A		* Gasket Set (Incl. items marked *)

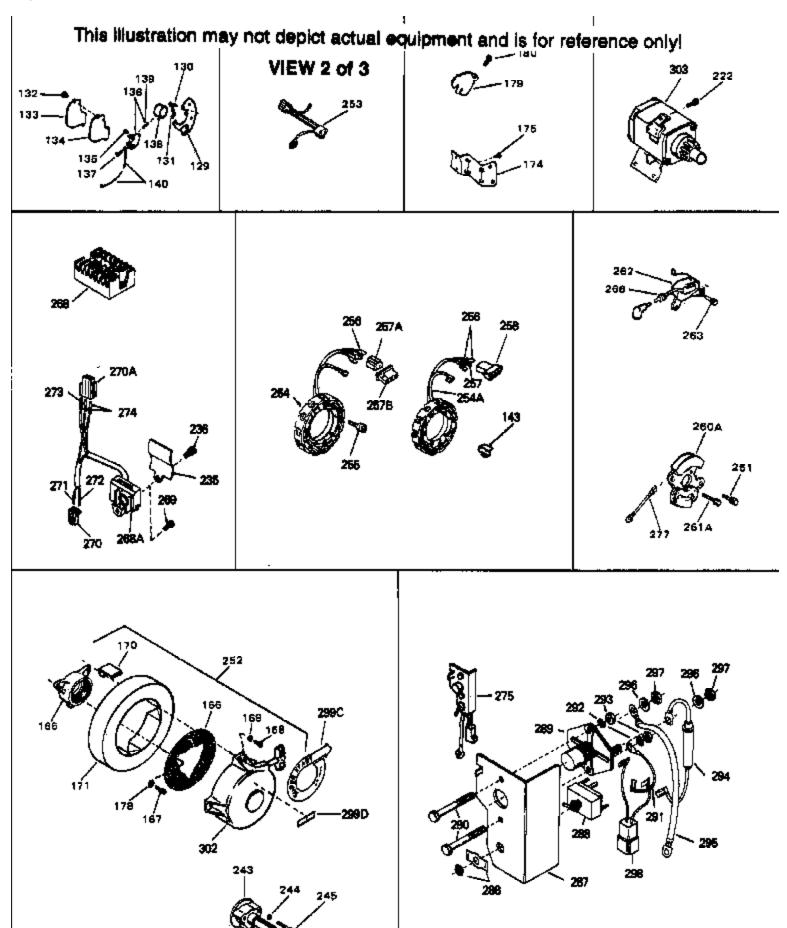

Washer, Lock 1/4 E.T. (Use as require d) Washer, Flat 1/4 (Use as required) Screw, 8-18 x 7/16" (Use as required) Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor) Screw,5/16-18 x 11/16"(Use w/33835 st r.motor) Plate, Cover (Use as required to cover regulator mounting
Washer, Flat 1/4 (Use as required) Screw, 8-18 x 7/16" (Use as required) Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor) Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor) Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
Plate Cover (Lise as required to cover regulator mounting
hole in blower housing)
Screw, 10-16 x 3/8" (Use as required)
Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
Harness Assy., Adapter (Use as requir ed)
Alternator Coil (Solid State) (10 Amp) (Incl. Nos. 253, 256 & 257A)
Screw, 10-32 x 1"
Terminal, Female
Flat Connector (Female terminals) (As req.)
Connector, Pyramid (For female termin als)
Grommet, Lead wire
Solid State Regulator (10 Amp)
Starter Switch Kit(Incl. 287-298) (As req.)
Electric Starter Motor (12 Volt) NOTE: The 32817 and 33835 starter motors are used interchangeably on the se models. Refer to service numberstamped on end cap of motor, or on decal for identification. Refer to Division 5, Section D for breakdown.

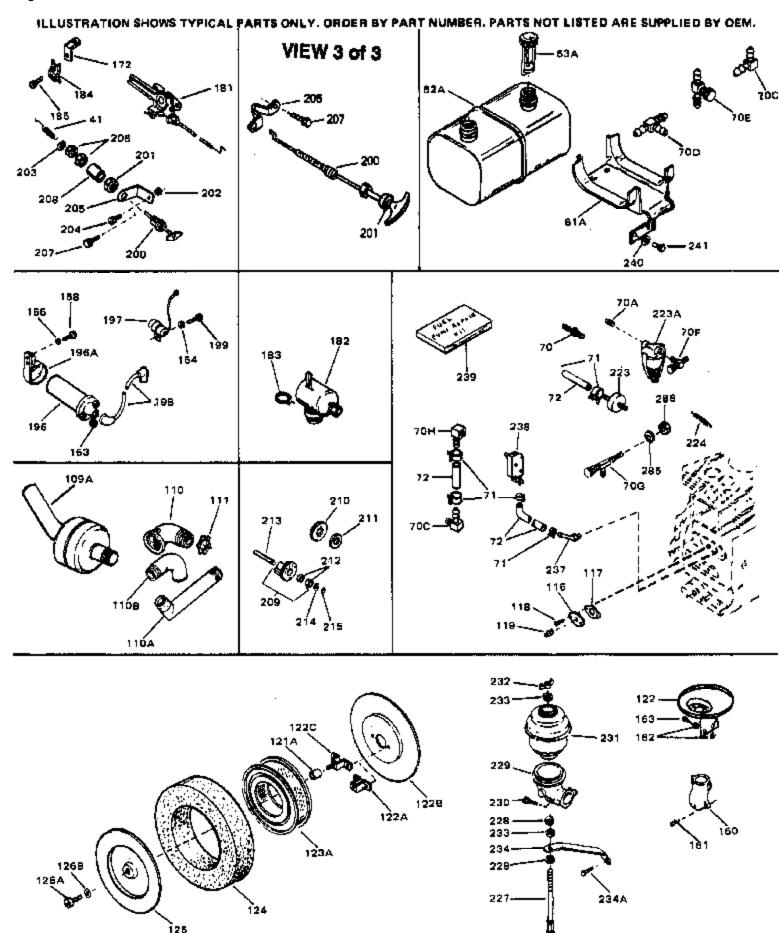

Ref #	Part Number	Qty	Description
41	31967		Spring, Governor
62A	31977		Fuel Tank (Incl. 63)
71	26460		Clamp, Fuel line (Use as required)
72	29774		Fuel Line (Braided) (8.25") (Use as r equired)
72	30705		Fuel Line (Braided) (16") (Use as req uired)
72	30962		Fuel Line (Braided) (32") (Use as req uired)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
110	32141		90 Degree Exhaust Elbow
111	650590		Nut, Conduit
119	28534		Pipe Plug, 1/8-27 (Use as required)
119	9556		Plug, Pipe, 1/8-27 (Use as required)
122C	32907B		Bracket, Air cleaner
123A	32008		Element, Air cleaner
172	31990		Bracket, Choke control
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"
237	32958		Fitting, Fuel
238	32959		Fuel Pump, Impulse
239	33010		Repair Kit, Impulse fuel pump