
## ILLUSTRATION SHOWS TYPICAL PARTS ONLY, ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEAL

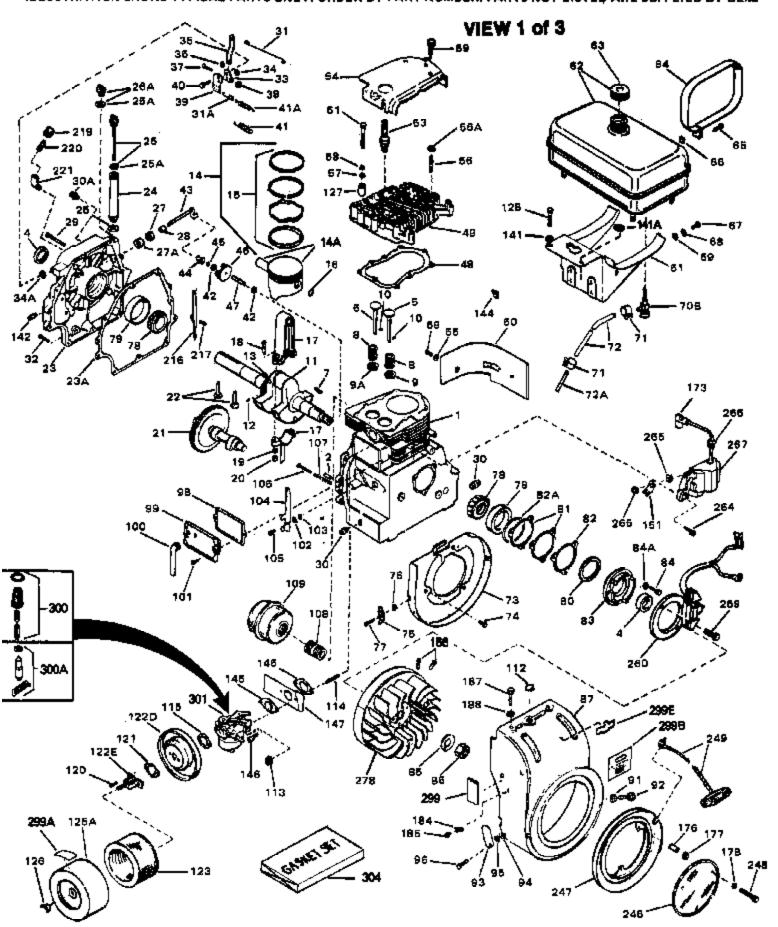


Pof # Port Number	hty Description
	Oty Description  Cylinder (Incl. 2, 4, 30, 8, 47) (3-1/2 " Bore)
1 33042	Cylinder (Incl. 2, 4, 30 & 47) (3-1/2 " Bore)
2 27652	Pin, Dowel
4 31950	Seal, Oil
5 31940	Intake Valve (Std.)
5 31941	Intake Valve (1/32" OS) (Incl. 9)
6 31942	Exhaust Valve (Std.)
6 31943	Exhaust Valve (1/32" OS) (Incl. 9)
7 650592	Key, Flywheel
8 31944	Spring, Valve
9A 31945	Cap, Lower valve spring (Std.)
9A 31946	Cap, Lower valve spring (1/32" OS)
9 31946	Cap, Lower valve spring (1/32" OS)
9 31945	Cap, Lower valve spring (Std.)
10 20810	Pin, Valve spring retainer
11 33497C	Crankshaft (Incl. 12,13,78,79,209,210 & 211)
12 29783	Pin, Crankshaft gear
13 31931	Gear, Crankshaft
14 34511	Piston, Pin & Ring Set (Std.) (3-1/2" Bore)
14 34512	Piston, Pin & Ring Set (.010" OS)
14 34513	Piston, Pin & Ring Set (.020" OS)
14 34524	Piston, Pin & Ring Set (.030" OS)
14 34525	Piston, Pin & Ring Set (.040" OS)
14A 32238B	Piston & Pin Ass'y. (Std.)(Incl.16)(3 -1/2")
14A 32239B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A 32240B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14A 32621B	Piston & Pin Ass'y. (.030" OS) (Incl. 16)
14A 32622B	Piston & Pin Ass'y. (.040" OS) (Incl. 16)
15 32241	Ring Set (Std.) (3-1/2" Bore)
15 32242	Ring Set (.010" OS)
15 32243	Ring Set (.020" OS)
15 32625	Ring Set (.030" OS)
15 32626	Ring Set (.040" OS)
15 32336	Re-Ringing Set, Piston
16 31919	Ring, Piston pin retaining
17 33093A	Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
17 34383	Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
17 34384	Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18 32077	Bolt, Connecting rod
19 26073	Washer, Connecting rod
20 28264	Nut Assy., Lock
21 33470	Camshaft (MCR)
22 31939	Lifter, Valve
23 34002A	Cover, Cylinder (Incl. 4, 30, 119 & 2 13)
23A 31956A	* Gasket, Cylinder cover
25A 29673	* Gasket, Oil fill
26 33069	Dipstick (Incl. 25A)
28 32426	Spacer, Governor rod
29 650492	Screw, 1/4-20 x 2-1/4"
30 31927	Oil Drain Plug
31 31968	Link, Governor
32 650451	Screw, 1/4-20 x 1"
33 31964	Clamp, Governor lever
34 29193	Ring, Retaining
35 31963	Lever, Governor adjusting
36 650518	Lockwasher
37 650544	Screw, 10-24 x 7/8"
38 7975	Nut, 10-24
39 31965	Plate, Governor spring


Pof #	Part Number Qt	y Description
	30312	Screw, 10-32 x 1/2"
	31967	Spring, Governor
	30590A	Washer, Flat
	32425	Rod Assy., Governor
44	31948	Spool, Governor
45	29193	Ring, Retaining
46	31947	Gear Assy., Governor
	31930	Shaft, Mechanical Governor
	32246A	* Gasket, Cylinder head
	33034	Head, Cylinder
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650711	Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650628A	Screw, 5/16-18 x 2-3/8" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
51	650714	Screw, 5/16-18 x 1-5/8" (Use as requi red)
51	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
51	650692	Screw, 5/16-18 x 1-3/4" (Use as requi red)
51	650603	Screw, 5/16-18 x 5/8" (Use as require d)
	33636	Resistor Spark Plug (RJ-8C)
	34251	Resistor Spark Plug (RJ-17LM)
	33035	Cover, Cylinder head
	28537	
		Washer, Plain
	650691	Washer, Flat (Use as required)
	650690	Washer, Belleville (Use as required)
	8274	Washer, Lock (Use as required)
	650128	Screw, 10-24 x 1/2"
60	31976	Extension, Blower housing
63	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
63	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
67	650517	Screw, 1/4-20 x 27/32" (Use as requir ed)
	650561	Screw, 1/4-20 x 5/8" (Use as required )
	30063	Screw, 1/4-20 x 1/2" (Use as required )
	792028	
		Screw, 5/16-18 x 7/8" (Use as require d)
	26460	Clamp, Fuel line (Use as required)
	29774	Fuel Line (Braided) (8.25") (Use as r equired)
	30705	Fuel Line (Braided) (16") (Use as req uired)
72	30962	Fuel Line (Braided) (32") (Use as req uired)
72	30965	Fuel Line (Braided) (48") (Use as req uired)
73	32579	Baffle, Blower housing
74	650561	Screw, 1/4-20 x 5/8"
	31932	Bearing, Tapered roller
	31928	Cup, Bearing
	32031	Spacer, Steel (.010" thick) NOTE: Determine the gap
00	32031	, , ,
		between the cover and the machined surface on the cylinder
		which can be from .001"up to .007" in which case no shim
		gaskets will be required. Use of gasket must be limited to a
		combined total of .010" thick. Steel spacersmust be used
		as required
81	31971	* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap
01	0.0.1	between the cover and the machined surface on the cylinder
		which can be from .001"up to .007" in which case no shim
		gaskets will be required. Use of gasket must be limited to a
		combined total of .010" thick. Steel spacersmust be used
		as req

Dof #	Part Number Oty	Description
		Description  * Cooket Shim ( 005/007 thick) NOTE: Determine the gen
82	31972	* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
	32599 32577	"O" Ring Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat
84	792028	Screw, 5/16-18 x 7/8"
	650679	Lockwasher, 5/16" (Use as required)
	650615	Washer, Flat
	650616	Nut, Flywheel, 3/4-16
	33044A	Blower Hsg. (Incl.73) (For electric s tarter)
	8274	Washer, Lock
92	650595	Screw, 5/16-24 x 3/8"
95	8274	Washer, Lock
96	650624	Screw, 5/16-24 x 9/16"
	31958	* Gasket, Breather
99	31957	Breather Assy.
100	35350	Tube, Breather
101	650128	Screw, 10-24 x 1/2"
102	28558	Washer, Wave
103	31966	Bushing, Control lever
104	31984A	Lever, Control
105	650597	Screw, 10-24 x 5/8"
106	650591	Screw, 10-24 x 2"
107	33099	Spring
	33853	Nipple, Exhaust pipe
	32043B	Muffler
	33038	Plug, Button (Use as required)
	29752	Nut & Lockwasher Assy.
	650587	Stud, Carburetor
	27272	* Gasket, Air cleaner
	650399	Screw, 10-32 x 5/8"
	30767	Spacer, Air cleaner
	32378	Bracket, Air cleaner
	32376	Bracket, Air cleaner
	32009	Cover, Air cleaner
	650513	Nut, Wing
	650713	Screw, 5/16-18 x 5/8" (Use as require d)
	650429	Screw, 5/16-18 x 3/4" (Use as require d)
	792028	Screw, 5/16-18 x 7/8" (Use as require d)
141A		Lockwasher, Split (Use as required)
	26073	Washer, Flat (Use as required)
	31960	* Gasket, Carburetor
	31959	Baffle, Air
	33356	Terminal, Ground
	730201	Trigger Pin Kit (Use as required)
	610118	Cover, Spark plug (Use as required)
	32426	Spacer, Screen
	650675	Washer, Flat 1/4"
177	8345	Washer, 1/4 plain (Use as required)

Ref #	Part Number	Qty	Description
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"
187	650713		Screw, 5/16-18 x 5/8"
188	26073		Washer, Flat
216	33467		Tube, Extension, Oil fill
217	650744		Screw, 10-24 x 7/8"
246	32953		Screen, Starter pulley
248	650670		Screw, 1/4-20 x 3/4"
249	32046		Rope Assy., Starter (Use as required)
264	650661		Screw, 1/4-20 x 3/4"
265	610408		Nut, Hex
266	610750		Grommet, Lead wire
267	610748		Solid State Magneto (Incl.151,173,265 ,266)
278	610746		Solid State Flywheel
299	34346		Decal, Instruction
299B	550223		Decal, Name
299B	32676		Decal, Solid State
299A	31752		Decal, Air cleaner
300	32255A		Valve, Seat, Spring & Gasket Assy.
301	631533		Carburetor (Incl. 145) (Refer to Division 5, Section A, page 94 for breakdown)
304	33237A		* Gasket Set (Incl. items marked *)

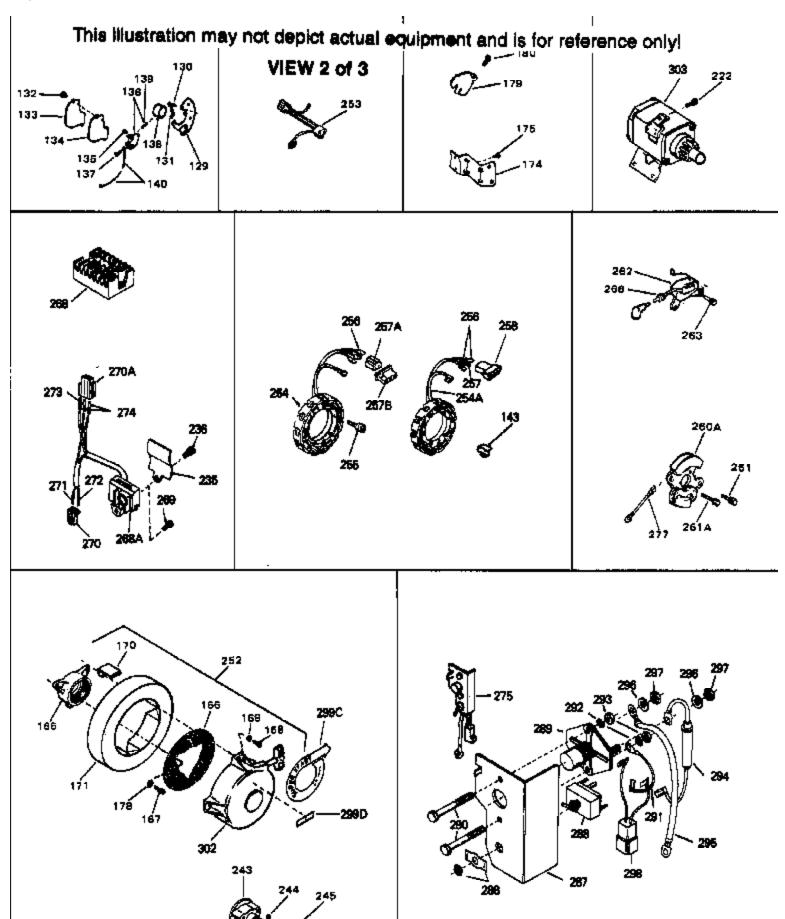

Ref #	Part Number	Qty	Description
	27070		Washer, Lock 1/4 E.T. (Use as require d)
	650675		Washer, Flat 1/4 (Use as required)
	650701		Screw, 8-18 x 7/16" (Use as required)
	792028		Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
	650781		Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276		Plate, Cover (Use as required to cover regulator mounting
			hole in blower housing)
236	650736		Screw, 10-16 x 3/8" (Use as required)
243	32252		Shaft, Flywheel extension
244	27513		Lockwasher
	792051		Screw, 1/4-20 x 1-3/4"
252	730134		Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use
			as required)
253	33018		Harness Assy., Adapter (Use as requir ed)
254	610761		Alternator Coil (Solid State) (10 Amp) (Incl. Nos. 253, 256 &
			257A)
255	650416		Screw, 10-32 x 1"
	610922		Terminal, Female
257B	610824		Flat Connector (Female terminals) (As req.)
257A	610819		Connector, Pyramid (For female termin als)
266	610750		Grommet, Lead wire
	610749		Solid State Regulator (10 Amp)
	730198		Starter Switch Kit(Incl. 287-298) (As req.)
303	33835		Electric Starter Motor (12 Volt) NOTE: The 32817 and 33835
			starter motors are used interchangeably on the se models.
			Refer to service numberstamped on end cap of motor, or on
			decal for identification. Refer to Division 5, Section D for
			breakdown.

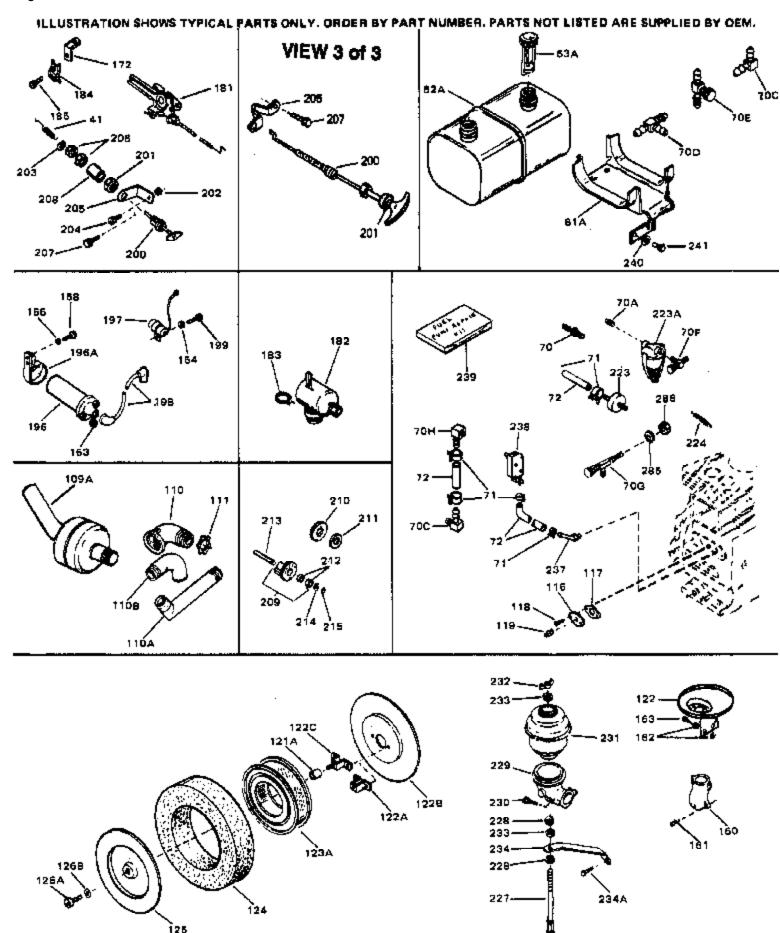

Ref #	Part Number	Qty	Description
41	31967		Spring, Governor
	29634		Fitting, Fuel line
	26460		Clamp, Fuel line (Use as required)
72	29774		Fuel Line (Braided) (8.25") (Use as r equired)
72	30705		Fuel Line (Braided) (16") (Use as req uired)
72	30962		Fuel Line (Braided) (32") (Use as req uired)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
119	28534		Pipe Plug, 1/8-27 (Use as required)
119	9556		Plug, Pipe, 1/8-27 (Use as required)
123A	32008		Element, Air cleaner
172	31990		Bracket, Choke control
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"
209	33500A		Weight Assy. Kit, Counterbalance (Gears have helical teeth which replace straight tooth gears) (Incl. 33965 weight assy. & 33963 gear)
210	33963		Gear, Counterbalance Weight
211	33499		Spacer
212	33501		Bearing, Needle
213	33502		Shaft, Counterbalance
214	33503		Washer, Thrust
215	792017		Ring, Retaining