



Ref # Part Number Qty Description 1 34761 Cylinder (C I liner)(Incl.2,3,4,184)(2-5/8") 2 27652 Pin, Dowel 3 27642 Plug, Oil drain, 1/4-18 4 27876B Seal, Oil 5 32783 Intake Valve (Std.) (Incl. 9) 6 27878A Exhaust Valve (1/32" OS) (Incl. 9) 6 27880A Exhaust Valve (1/32" OS) (Incl. 9) 7 27882 Cap, Upper valve spring 8 27881 Spring, Valve 9 32581 Cap, Lower valve spring 11 31790 Crankshaft (Incl. 12 & 13) Pin, Crankshaft gear Used in early production. This gesserviceable ONLY when itis pinned to the crankshaft.	
2 27652 Pin, Dowel 3 27642 Plug, Oil drain, 1/4-18 4 27876B Seal, Oil 5 32783 Intake Valve (Std.) (Incl. 9) 6 27878A Exhaust Valve (Std.) 6 27880A Exhaust Valve (1/32" OS) (Incl. 9) 7 27882 Cap, Upper valve spring 8 27881 Spring, Valve 9 32581 Cap, Lower valve spring 11 31790 Crankshaft (Incl. 12 & 13) 12 29783 Pin, Crankshaft gear Used in early production. This gear	
3 27642 Plug, Oil drain, 1/4-18 4 27876B Seal, Oil 5 32783 Intake Valve (Std.) (Incl. 9) 5 32784 Intake Valve (1/32" OS) (Incl. 9) 6 27878A Exhaust Valve (Std.) 6 27880A Exhaust Valve (1/32" OS) (Incl. 9) 7 27882 Cap, Upper valve spring 8 27881 Spring, Valve 9 32581 Cap, Lower valve spring 11 31790 Crankshaft (Incl. 12 & 13) 12 29783 Pin, Crankshaft gear Used in early production. This gear	
4 27876B 5 32783 Intake Valve (Std.) (Incl. 9) 5 32784 Intake Valve (1/32" OS) (Incl. 9) 6 27878A Exhaust Valve (Std.) 6 27880A Exhaust Valve (1/32" OS) (Incl. 9) 7 27882 Cap, Upper valve spring 8 27881 Spring, Valve 9 32581 Cap, Lower valve spring Crankshaft (Incl. 12 & 13) 12 29783 Pin, Crankshaft gear Used in early production. This gear	
5 32783 Intake Valve (Std.) (Incl. 9) 5 32784 Intake Valve (1/32" OS) (Incl. 9) 6 27878A Exhaust Valve (Std.) 6 27880A Exhaust Valve (1/32" OS) (Incl. 9) 7 27882 Cap, Upper valve spring 8 27881 Spring, Valve 9 32581 Cap, Lower valve spring 11 31790 Crankshaft (Incl. 12 & 13) 12 29783 Pin, Crankshaft gear Used in early production. This gear	
5 32784 Intake Valve (1/32" OS) (Incl. 9) 6 27878A Exhaust Valve (Std.) 6 27880A Exhaust Valve (1/32" OS) (Incl. 9) 7 27882 Cap, Upper valve spring 8 27881 Spring, Valve 9 32581 Cap, Lower valve spring 11 31790 Crankshaft (Incl. 12 & 13) 12 29783 Pin, Crankshaft gear Used in early production. This gear	
6 27878A Exhaust Valve (Std.) 6 27880A Exhaust Valve (1/32" OS) (Incl. 9) 7 27882 Cap, Upper valve spring 8 27881 Spring, Valve 9 32581 Cap, Lower valve spring 11 31790 Crankshaft (Incl. 12 & 13) 12 29783 Pin, Crankshaft gear Used in early production. This gear	
6 27880A Exhaust Valve (1/32" OS) (Incl. 9) 7 27882 Cap, Upper valve spring 8 27881 Spring, Valve 9 32581 Cap, Lower valve spring 11 31790 Crankshaft (Incl. 12 & 13) 12 29783 Pin, Crankshaft gear Used in early production. This gear	
7 27882 Cap, Upper valve spring 8 27881 Spring, Valve 9 32581 Cap, Lower valve spring 11 31790 Crankshaft (Incl. 12 & 13) 12 29783 Pin, Crankshaft gear Used in early production. This gear	
8 27881 Spring, Valve 9 32581 Cap, Lower valve spring 11 31790 Crankshaft (Incl. 12 & 13) 12 29783 Pin, Crankshaft gear Used in early production. This gear	
9 32581 Cap, Lower valve spring 11 31790 Crankshaft (Incl. 12 & 13) 12 29783 Pin, Crankshaft gear Used in early production. This gear	
11 31790 Crankshaft (Incl. 12 & 13) 12 29783 Pin, Crankshaft gear Used in early production. This gea	
12 29783 Pin, Crankshaft gear Used in early production. This gea	
, , , , , , , , , , , , , , , , , , , ,	
13 27884 Gear, Crankshaft Used in early production. This gear is	
serviceable ONLY when itis pinned to the crankshaft.	
14 34503 Piston, Pin & Ring Set (Std.) (2-5/8" Bore)	
14 34504 Piston, Pin & Ring Set (.010" OS)	
14 34505 Piston, Pin & Ring Set (.020" OS)	
14A 31797B Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)	
14A 31798B Piston & Pin Ass'y. (.010" OS) (lncl. 16)	
14A 31799B Piston & Pin Ass'y. (.020" OS) (Incl. 16)	
15 34854 Ring Set (Std.) (2-5/8" Bore)	
15 34855 Ring Set (.010" OS)	
15 34856 Ring Set (.010 03)	
• , , ,	
16 27888 Ring, Piston pin retaining	
17 31295C Rod Assy., Connecting (Incl. 18)	
18 650662C Screw, Connecting rod (Late production)	
18A 30682 Bolt, Connecting rod (Early productio n)	
19 26073 Connecting rod bolt washer (Early pro duction)	
20 28264 Connecting rod nut (Used on early pro duction)	
21 33156 Camshaft	
22 34034 Lifter, Valve	
23 31451A Cylinder Cover (Incl.24, 105, 246, 24 7 & 248)	
24 28460 Seal, Oil	
26 30684 * Gasket, Cylinder cover	
28 650451 Screw, 1/4-20 x 1"	
29 650599 Screw, 1/4-20 x 1-1/2"	
30 650489 Screw, 1/4-20 x 5/8"	
31 30939A Cover, Cylinder head	
· · · · · · · · · · · · · · · · · · ·	
· ·	
33 30938A Head, Cylinder (Incl. 3 of 36)	
34 33636 Resistor Spark Plug	
35 26073 Washer, Flat (Use as required)	
35 650570 Washer, Flat (Use as required)	
35 650691 Washer, Flat (Use as required)	
36 650697A Screw, 5/16-18 x 2-1/2" (Use as requi red)	
36 650695A Screw, 5/16-18 x 2-1/4" (Use as required)	
36 650694A Screw, 5/16-18 x 2" (Use as required)	
37 650128 Screw, 10-24 x 1/2" (Use as required)	
37 650597 Screw, 10-24 x 5/8" (Use as required)	
38 27896A * Gasket, Breather cover	
39 28423 Body, Breather	
•	
,	
41 28425 Cover, Valve spring	
43 32447 Tube, Breather	
45 27915A * Gasket, Intake	

Ref #	Part Number Qty	Description
46	34712	Flange, Carburetor (Incl. 60)
48	30196	Screw, 5/16-18 x 3/4"
	29918	Lockwasher
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used on early productio n)
	33454	Lever Assy., Governor
	30322	Lock Nut, 8-32 (Use as required)
	29916	Clamp, Governor lever (Use as require d)
	34662	1 '
		Link, Throttle
	29216	Locknut, 10-32
	650517	Screw, 1/4-20 x 13/16"
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
	30699C	Rod Assy., Governor (Incl. 64 & 65)
63	30699B	Rod Assy., Governor (This one piece gov. rod is no longer
		used. It is replaced by 30699C assy., Ref.#63A)
64	30700	Yoke, Governor
65	650494	Screw, 6-40 x 5/16"
	31297	Dipstick (Incl. 68)
	29673	* Gasket, Dipstick
	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Hsg. (For elec.starter)(Incl.1 89,190)
	33876	, , ,
		Gasket, Stator
	31461	Bushing, Crankshaft
	29536	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
81	28820	Screw, 10-32 x 1/2" (Use as required)
81	650521	Screw, 10-32 x 1-1/8" (Use as require d)
82	27272A	* Gasket, Air cleaner
89	730127	Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
		(Use as required)
98	32924	Compression Spring (Used with 650688 screw) (Use as
		required)
QR	31342	Compression Spring (Used with 650549 screw) (Use as
90	31342	required)
00	00500	
98	28569	Compression Spring (Used with 29500 screw)(Use as
		required)
99	650549	Screw, 5-40 x 7/16" (Use as required)
	29500	Screw, 8-32 x 3/4" (Use as required)
	650688	Screw, 10-32 x 1 (Use as required)
	650625	Washer, Thrust
	30884	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
		·
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 106)
	30588A	Spool, Governor
	29193	Ring, Retaining
111D	34158	Bracket, Lower fuel tank
112	34159	Plate, Upper fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	650665	Screw, 1/4-15 x 3/4"
		•

Ref #	Part Number	Qty	Description
114	34186A		Fuel Tank (Incl. 115 & 120)
115	410144B		Fuel Cap (White Plastic)(Standard)(As req.)
	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
	55552		required)
115	24240		• ,
115	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required)
	29774		Fuel Line (Braided 8.25") (Use as req uired)
119	30705		Fuel Line (Braided 16") (Use as requi red)
119	30962		Fuel Line (Braided 32") (Use as requi red)
120	26460		Clamp, Fuel line (Use as required)
121	32401		Muffler
	27930A		* Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	26073		Washer, Flat
	650694A		
			Screw, 5/16-18 x 2" Screw, 8/32 x 5/16" (Forth production)
	650548		Screw, 8-32 x 5/16" (Early production)
	650139		Screw, 8-32 x 1/2" (Early production)
	650542		Screw, 5/16-18 x 3/4"
	29538		Base, Engine mounting
	650128		Screw, 10-24 x 1/2"
148	30622A		Extension, Blower housing
186	27275		Clip, Wire (Use as required)
186	29443		Clip, Fuel line (Use as required)
244	31793		Bearing, Ball
245	31792		Washer, Thrust
246	31855		Retainer, Bearing
	650778		Washer, Lock
	650580		Nut, Lock
	29716		Screw, 1/4-28 x 7/16"
	32125		Cup, Starter
	590417		Screen, Starter cup
	650815		Washer, Belleville
	8116		Nut, Hex
	34768		Decal, Name
			,
	33310		Decal, 5 HP Mini-Bike (Use as require d)
	31517		Decal, H.P. (5 H.P.) (Use as required)
	32173		Decal, H.P. (6 H.P.) (Use as required)
	34346		Decal, Instruction
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
303	632213		Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A,
			page 176 for breakdown)
304	610689A		Magneto NOTE: The complete magneto is not available as
			an assembly. The magneto number is shown for reference
			purposes only. Order component parts individually, as
			shown in parts list. (Refer to Division 5, Section B, page 24
			for breakdown)
000	500400		,
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for
			breakdown)
310	33235A		* Gasket Set (Incl. items marked *)
310			,

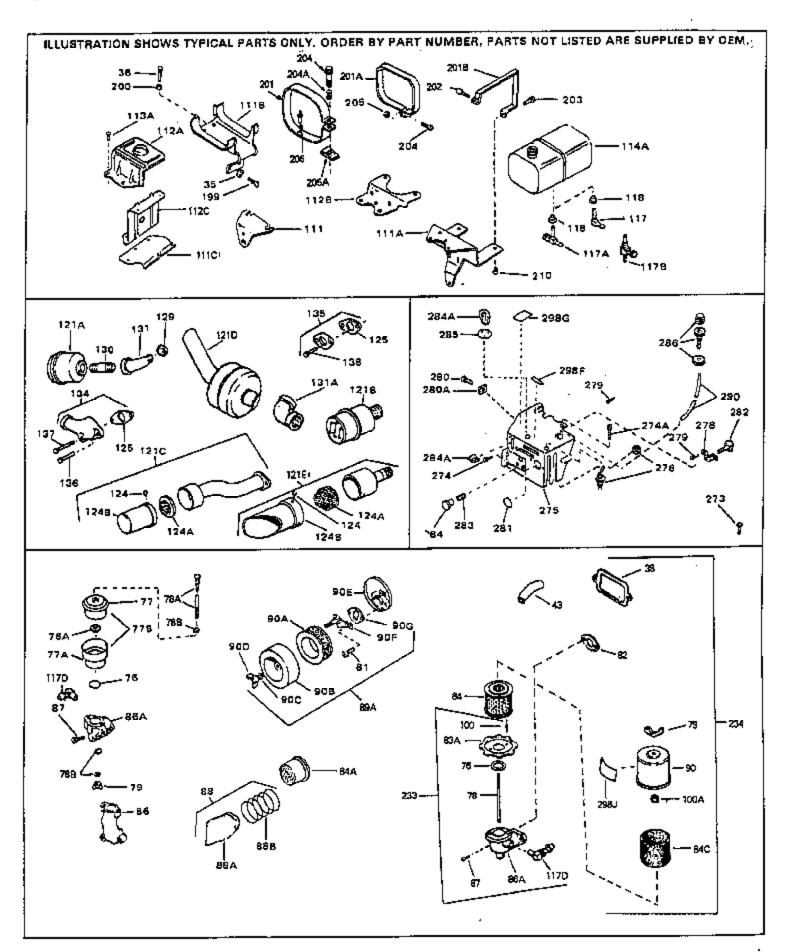

Ref #	Part Number	Qtv	Description
	26073	٠.,	Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	32447		Tube, Breather
	34698A		Gasket, Air cleaner elbow
	650826		Stud, 1/4-20
	650513		Nut, Wing
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	28820 650524		Screw, 10-32 x 1/2" (Use as required)
	650521		Screw, 10-32 x 1-1/8" (Use as require d)
	27272A		* Gasket, Air cleaner
	34699		Bracket, Air cleaner
	34783		Filter, Pre-Air
	34782		Element, Air cleaner
	34780		Elbow, Air cleaner
	34697		Air Cleaner Elbow Assy.(Use in 730561 only.)
	650163		Screw, 10-32 x 7/8"
89A	730128		Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
			298B) (Use as req.)
90	34781		Cover, Air cleaner
	650825		Nut & Lockwasher, 1/4-20
100			Pop Rivet (Purchase locally) (1/8" di a.)
	650665		Screw, 1/4-15 x 3/4"
	30675		Fitting, Breather tube
	391026		Muffler (Incl. 124, 124A & 124B) (This spark arrester
			mufflercan be used on any model)
4044	00474		• ,
	33171		Muffler Screen (Use as required)
	33185		Cover & Tube, Muffler (Use as require d)
	650578		Screw, 8-18 x 3/8"
	27930A		* Gasket, Exhaust
	31288		Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130		Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
233	34819		Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
			730561 ass'y. only)
234	730561		Air Cleaner Kit
			(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
			(Use only on engines with an externally ventedfully
			adjustable carburetor.)
	05005		,
	650687		Screw, 10-32 x 5/16" (Use as required)
298J	34704		Decal, Air cleaner

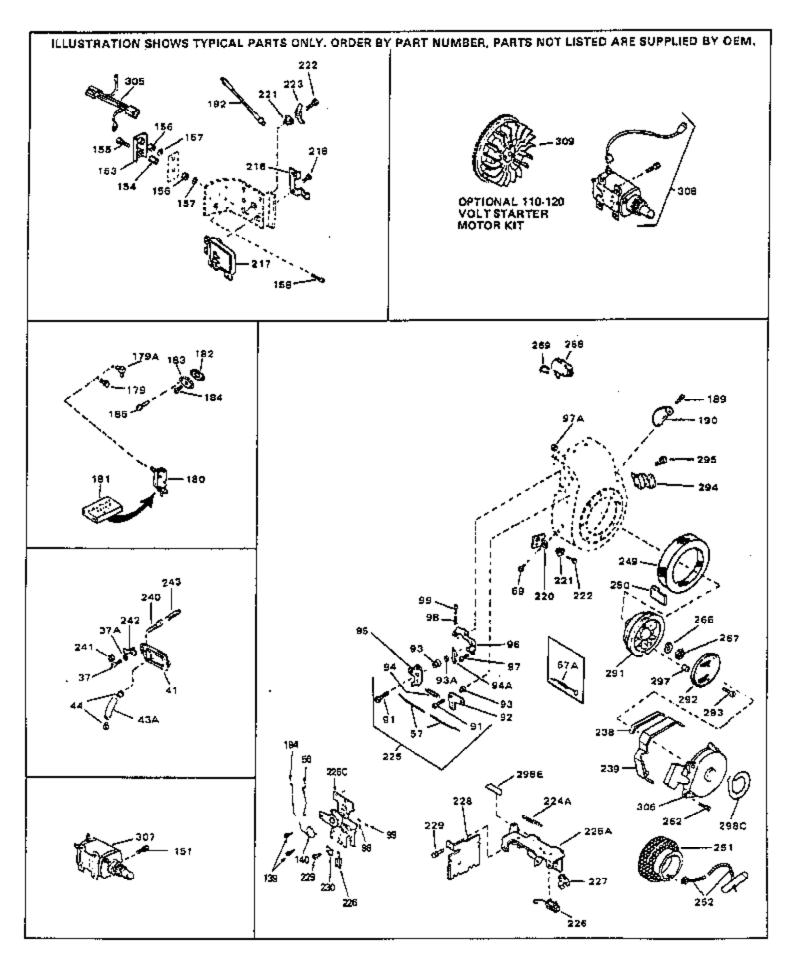

Dof #	Part Number	Otv	Description
	27261	Qιy	Washer, Flat (Use as required)
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	28425		Cover, Valve spring
	32446		Grommet, Breather tube
	34662		Link, Throttle
	29747B		Screw, 5/16-24 x 21/32"
	32924		Compression Spring (Used with 650688 screw) (Use as
30	3232 1		required)
98	31342		Compression Spring (Used with 650549 screw) (Use as required)
98	28569		Compression Spring (Used with 29500 screw)(Use as required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
	29500		Screw, 8-32 x 3/4" (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
139	650821		Screw, 10-32 x 1/2"
140	34663		Spring, Speed control
182	32683A		Gasket, Fuel pump cover (Use as requi red)
183	32955		Cover, Fuel pump pad (Use as required)
184	9556		Plug, Pipe 1/8-27 (Use as required)
185	30063		Screw, 1/4-20 x 1/2" (Use as required)
	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
225C	34664		Control Bracket (Incl. 98, 99, 140 & 226)
227	33177		Terminal (Use as required)
262	29716		Screw, 1/4-28 x 7/16"
266	650815		Washer, Belleville
	8116		Nut, Hex
	33018		Harness Assy., Adapter (Use as requir ed)
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
308	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)