
HH50-95046H Engine Parts List

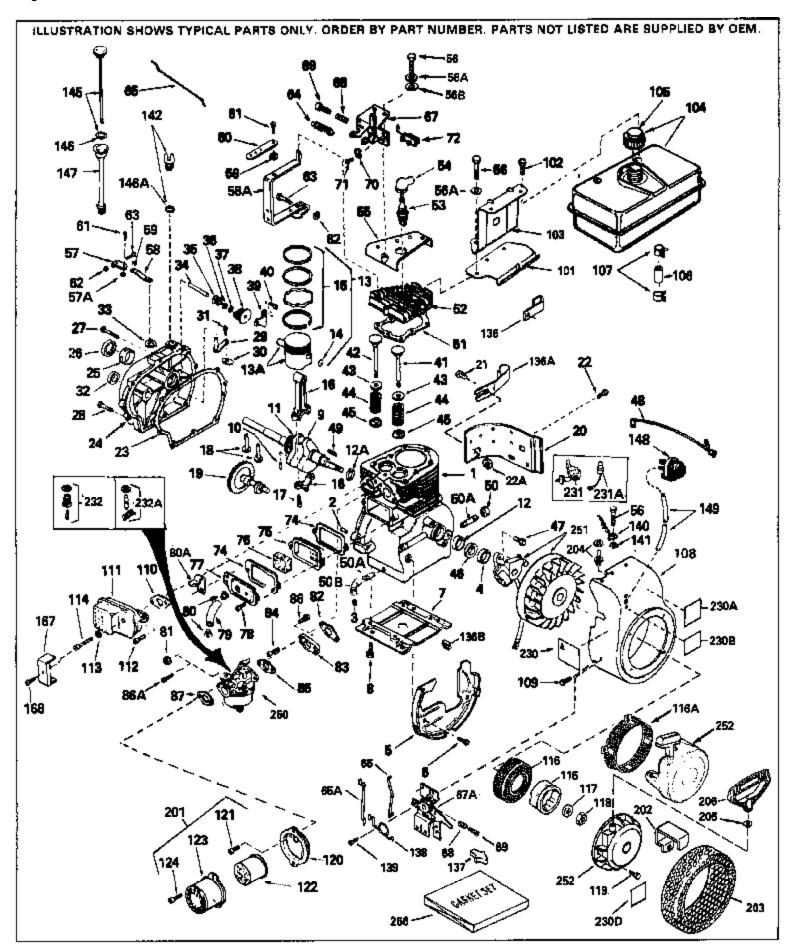

	Part Number	Qty	Description
	34915A		Cylinder (Incl. 2, 3 & 4) (2-5/8" Bor e)
2	27652		Pin, Dowel
3	27642		Pipe plug, 1/4-18
	32630		Seal, Oil
	29536		Blower Housing Baffle (Without electric starter knock out)
5	2000		(Use as required)
5	35256A		Blower Housing Baffle (With electric starter knockout) (As req.)(point ign.)
6	650561		Screw, 1/4-20 x 5/8"
7	29538		Base, Engine mounting
8	650542		Screw, 5/16-18 x 3/4"
	34885		Crankshaft
	29783		Pin, Crankshaft gear (Used on early p rod.)
	27884		Gear, Crankshaft (Used on early production) This gear is
11	27004		serviceable ONLY when it is pinned to the crankshaft.
	650625		Washer Thrust
	31461		Bushing, Crankshaft
13A	31797B		Piston & Pin Ass'y. (Std.)(2-5/8')(In cl.14)
13A	31798B		Piston & Pin Ass'y. (.010" OS) (Incl. 14)
13A	31799B		Piston & Pin Ass'y. (.020" OS) (Incl. 14)
13	34503		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34504		Piston, Pin & Ring Set (.010" OS)
	34505		Piston, Pin & Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	31295C		Rod Assy., Connecting (Incl. 17)
	650662C		Bolt, Connecting rod (Incl. 2 pieces)
	34034		Lifter, Valve
	33156		Camshaft
	30622A		Extension, Blower housing
21	650128		Screw, 10-24 x 1/2"
22	650561		Screw, 1/4-20 x 5/8" (Use as required)
22	30063		Screw, 1/4-20 x 1/2" (Use as required)
	30684		Gasket Cylinder Cover
	31451A		Cylinder Cover (Incl.26, 34, 127A, 12 9 & 130)
	28460		Seal, Oil
	650451		Screw, 1/4-20 x 1"
	650599		Screw, 1/4-20 x 1-1/2"
	30699C		Rod Assy., Governor (Incl. 30 & 31)
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29642		
			Ring, Retaining
	31845		Shaft, Mechanical governor
	30588A		Spool, Governor
	35479		Washer, Flat
	29193		Ring, Retaining
	30591		Gear Assy., Governor
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
41	32783		Intake Valve (Std.)
	32784		Intake Valve (1/32" OS)
	27878A		Exhaust Valve (Std.)
	27880A		Exhaust Valve (1/32" OS)
	27882		Cap, Upper valve spring

		y Description
44	27881	Spring, valve
45	32581	Cap, Lower valve spring
46	33876	Gasket, Stator
	650489	Screw, 1/4-20 x 5/8"
	32589	Key, Flywheel
	28938C	Gasket, Cylinder head
	30938A	Head, Cylinder
	33636	
		Resistor Spark Plug (RJ-8C)
	610118	Cover, Spark plug (Use as required)
	30939A	Cover Assy., Cylinder head
	650690	Washer, Belleville (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
56	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
56A	650691	Washer, Flat (Use as required)
57	29916	Clamp, Governor lever (Use as require d)
57A	30322	Locknut, 8-32
58	33454	Lever Assy., Governor
	29918	Washer, Lock, No. 8 E.T.
	650548	Screw, 8-32 x 5/16"
	29216	Locknut, 10-32
	29826	Screw, 10-32 x 3/4"
	34661	Link, Governor
	34664	Control Bracket (Incl. 68, 69, 72 & 1 38)
	31342	
		Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
	610973	Terminal Assy. (Use as required)
	27896A	Gasket, Valve chamber cover
	28423	Breather Assy., Valve
	28424	Element, Breather
	28425	Cover, Valve spring box
	650128	Screw, 10-24 x 1/2"
	35350	Tube, Breather
80	32446	Grommet, Breather tube
82	27915A	* Gasket, Intake pipe to cylinder
83	34712	Flange, Carburetor (Incl. 86A)
84	30196	Screw, 5/16-18 x 3/4"
	31688A	* Gasket, Carburetor
	650517	Screw, 1/4-20 x 13/16"
	27272A	* Air Cleaner Gasket (Use as required)
	30767	Spacer, Cleaner (Use as required)
	34783	Filter, Pre-air
	34782	Filter, Air cleaner (Incl. 97)
	34782	Pop Rivet (1/8" dia.) (Purchase local ly)
	34699	Bracket, Air cleaner
	34698A	Gasket, Air cleaner
	30675	Fitting, Breather
94A	34819	Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in 730561 assembly only)
94	34780	Elbow, Air cleaner
	650163	Screw, 10-32 x 7/8"
	650826	Stud, 1/4-20 x 6.20, threaded both en ds
	650825	Nut & Lockwasher, 1/4-20
	34781	Cover, Air cleaner
	650513	Nut, Wing, 1/4-20
100		1 val, 1/11 y, 1/7 20

		ty Description
	34158	Bracket, Fuel tank
	650665	Screw, 1/4-14 x 7/8"
	34159	Plate, Fuel tank mounting
104	34186A	Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built with different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 33032 or 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
105	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
	33032	Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as required)
105	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
105	35355	Fuel Cap (Red plastic) (Use as requir ed)
106	29774	Fuel Line (Braided, 8 1/4") (Use as r equired)
	30962	Fuel Line (Braided, 32") (Úse as required)
	26460	Clamp, Fuel line (Use as required)
	32158E	Blower Housing (For electric starter)
	29747B	Screw, 5/16-24 x 21/32"
	34390	Deflector, Exhaust (Optional)
	31287	Muffler
	391026	Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
	33714	Opt.Spark Arrest Muf. (Incl.112,143,14 4,144A)
115	32125	Cup, Starter
116	35009	Screen, Starter cup
117	650815	Washer, Belleville
118	8116	Nut, Hex
	29716	Screw, 1/4-28 x 7/16"
	31793	Bearing, Ball
	31855	Retainer, Bearing
	31792	Washer, Thrust
	650778	Washer, Lock
	650580	Nut, Lock
	34663	Spring, Speed control
	650821	Screw, 10-32 x 1/2"
	30747	Clip, Spark plug shorting
	650890 33171	Lockwasher,Shakeproof, 5/16 Screen, Muffler (Use as required)
	33185	Cover & tube, Muffler (Use as required)
	650578	Screw, 8-18 x 3/8" (Use as required)
	33323	Screen, Muffler (Use as required)
	33700	Cover & Tube, Muffler (Use as require d)
	31297	Dipstick (Incl. 146A)
	29673	* Gasket, Oil fill
	32862	Nut, Conduit
	28443	Nut, Conduit
	29574	Elbow, 45-degree
201B	730561	Air Cleaner Kit
		(Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C) (Used only on engine with an externally vented fully adjustable carburetor)
201	730164	Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 & 230)(As req.)
201	730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124) (Use as required)
		(

HH50-95046H Engine Parts List

230C34764Decal, Instruction230A34768Decal, Name231A30547ABreaker Assy (Used on Std. Point igni tion)231A30548BCondenser232A631021Inlet, Needle Seat & Clip Assy.240611077Alternator (Optional)241650868Screw, 8-18 x 1-1/8' (3 required)(Opt .)242611077Connector, A.C. Lighting (Optional)243530610Tube, Centering (Optional)244590613Alternator Shaft (Optional)245530610Tube, Centering (Optional)24651078Cannector, Natting (Optional)247590613Alternator Shaft (Optional)250632213Carburetor (Ind. 85) (Refer to Division 5, Section A, page 176 for breakdown)251611038Magneto NOTE:252590420ARewind Statter (Refer to Division 5, Section C, page 25 for breakdown)25433328DStatter Motor Kit (110-120 volt) This 110-120 volt statter motor kit may have been added to this engine. It can be added only if cylinder haschilder and tapped statter mounting bosses and a ning gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat25530811AFlywheel (Ring gear flywheel required on engines using 110-120 volt statter motor kits listed above) (Used on Std. point ignition before 1982)255611042Flywheel (Ring gear flywheel required on engines using 110-120 volt statter motor kits listed above) (Used on solid state external ignition)25663225AGasket Set ((Qty	Description
230A34768Decal, Name23130547ABreaker Assy (Used on Std. Point igni tion)231A30548BCondenser232A631021Inlet, Needle Seat & Clip Assy.240611077Atternator (Optional)241650868Screw, 8-18 x 1-1/8" (3 required)(Opt .)242611079Connector, A.C. Liphting (Optional)243590610Tube, Centering (Optional)244590613Atternator Shaft (Optional)245632213Carburetor (Incl. 85) (Refer to DiviSion 5, Section A, page 176 for breakdown)251611038Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)25433328DStarter Moder Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder haschiled and tapped starter mounting boxes and a ring gear flywheel (seergis). Refer to service number stamped on end cap of motor or on decal for identificat25530811AFlywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)255611042Flywheel (Ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on std. point ignition 1982 or later)255611085Flywheel (Mini ming gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on std. point ignition 1982 or later)				
23130547ABreaker Assy (Used on Std. Point igni tion) Condenser231A30548BCondenser240611077Alternator (Optional)241650868Screw, 8-18 x 1-1/8" (S required)(Opt.)242611078Connector, A.C. Lighting (Optional)242611079Connector, D.C. Charging (Optional)243590610Tube, Centering (Optional)244590613Alternator Shaft (Optional)250632213Carburetor (Incl. 85) (Refer to DiviSion 5, Section A, page 176 for breakdown)251611038Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)252590420ARewind Starter (Refer to Division 5, Section C, page 25 for breakdown)25433328DStarter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine, it can be added only if cylinder hascilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat255611042Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)255611085Flywheel (Ming magriflywheel required on engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)255611085Flywheel (Ming magriflywheel required on engines using 110-120 volt starter motor kits				Decal, Instruction
231A305488Condenser232A631021Inlet, Needle Seat & Clip Assy.140650868Screw, 8-18 x 1-1/8" (3 required)(Opt.)242611077Connector, A.C. Lighting (Optional)243590610Tube, Centering (Optional)244590613Alternator Shaft (Optional)245611078Connector, D.C. Charging (Optional)244590613Alternator Shaft (Optional)245632213Carburetor (Incl. 85) (Refer to Division 5, Section A, page 176 for breakdown)251611038Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)252590420ARewind Starter (Refer to Division 5, Section C, page 25 for breakdown)25433328DStarter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder haschilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat255611042Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)255611085Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)				Decal, Name
232A631021Inlet, Needle Seat & Clip Assy.240611077Alternator (Optional)241650668Screw, 8-18 x 1-1/8' (3 required)(Opt.)242611078Connector, A.C. Lighting (Optional)243550610Tube, Centering (Optional)244550613Alternator Shaft (Optional)245632213Alternator Shaft (Optional)251611038Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section C, page 25 for breakdown)252590420ARewind Starter (Refer to Division 5, Section C, page 25 for breakdown)25433328DStarter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hashilled and tapped starter motor wite starter and tapped starter motor wite starter additional double as an ing gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat255611042Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982)255611045Flywheel (Ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982) relater255611085Flywheel (Ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982) relater255611085Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on Std. p				
240611077Alternator (Optional)241650868Screw, 8-18 x 1-1/8" (3 required)(Opt .)242611079Connector, D.C. Charging (Optional)243590610Tube, Centering (Optional)245632213Carburetor (Incl. 85) (Refer to DiviSion 5, Section A, page 176 for breakdown)251611038Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)252590420ARewind Starter (Refer to Division 5, Section C, page 25 for breakdown)25433328DStarter Motor Kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to Section Scient consection and the starter of a motor or on decal for identificat255611042Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)255611085Flywheel (Ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)				
241650868Screw, 8-18 x 1-1/8" (3 required)(Opt .)242611078Connector, A.C. Lighting (Optional)243590610Tube, Centering (Optional)244500613Alternator Shaft (Optional)250632213Carburetor (Ind. 85) (Refer to Division 5, Section A, page 176 for breakdown)251611038Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section C, page 39 for breakdown)252590420ARewind Starter (Refer to Division 5, Section C, page 25 for breakdown)25433328DStarter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder haschilled and tapped starter mounting bosses and a ring gear flywheel requiredon engines using 110-120 volt starter on on decal for identificat255611042Flywheel (Ring gear flywheel required above) (Used on Std. point ignition before 1982)255611085Flywheel (Ring gear flywheel required no engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)	232A	631021		Inlet, Needle Seat & Clip Assy.
242611078 243Connector, A.C. Lighting (Optional)243590610 244Connector, D.C. Charging (Optional)244590613 245Alternator Shaft (Optional)245632213Carburetor (Incl. 85) (Refer to DiviSion 5, Section A, page 176 for breakdown)251611038Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)252590420ARewind Starter (Refer to Division 5, Section C, page 25 for breakdown)25433328DStarter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat255611042Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)255611085Flywheel (Ring gear flywheel required no engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)	240	611077		Alternator (Optional)
242611079Connector, D.C. Charging (Optional)243590613Tube, Centering (Optional)244590613Atternator Shaft (Optional)250632213Carburetor (Incl. 85) (Refer to Division 5, Section A, page 176 for breakdown)251611038Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)252590420ARewind Starter (Refer to Division 5, Section C, page 25 for breakdown)25433328DStarter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat255611042Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)255611085Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)	241	650868		Screw, 8-18 x 1-1/8" (3 required)(Opt .)
243590610Tube, Centering (Optional)244590613Alternator Shaft (Optional)250632213Carburetor (Incl. 85) (Refer to DiviSion 5, Section A, page 176 for breakdown)251611038Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)252590420ARewind Starter (Refer to Division 5, Section C, page 25 for breakdown)25433328DStarter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number starmped on end cap of motor or on decal for identificat25530811AFlywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)255611042Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)255611085Flywheel (Nimmum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)	242	611078		
244590613Alternator Shaft (Optional)250632213Carburetor (Ind. 85) (Refer to DiviSion 5, Section A, page 176 for breakdown)251611038Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)252590420ARewind Starter (Refer to Division 5, Section C, page 25 for breakdown)25433328DStarter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if oylinder hasdrilled and tapped starter motor kit may have been added to this engine. It can be added only if oylinder hasdrilled and tapped starter motor kits listed above) (Used on Std. point ignition before 1982)255611042Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)255611085Flywheel (Ninimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)	242	611079		Connector, D.C. Charging (Optional)
250632213Carburetor (Incl. 85) (Refer to DiviSion 5, Section A, page 176 for breakdown)251611038Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)252590420ARewind Starter (Refer to Division 5, Section C, page 25 for breakdown)25433328DStarter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat25530811AFlywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)255611042Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)255611085Flywheel (Nininum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)				Tube, Centering (Optional)
251611038Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)252590420ARewind Starter (Refer to Division 5, Section C, page 25 for breakdown)25433328DStarter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder haschilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat25530811AFlywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)255611042Flywheel (Ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)255611085Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)	244	590613		Alternator Shaft (Optional)
251611038Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)252590420ARewind Starter (Refer to Division 5, Section C, page 25 for breakdown)25433328DStarter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat25530811AFlywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)255611042Flywheel (Ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)255611085Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)	250	632213		Carburetor (Incl. 85) (Refer to DiviSion 5, Section A, page
 an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown) 252 590420A Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown) 254 33328D Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat 255 30811A Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982) 255 611085 Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later) 				176 for breakdown)
25433328DStarter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat25530811AFlywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)255611042Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)255611085Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid starte rmotor kits listed above) (Used on std. point ignition 1982 or later)	251	611038		an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39
 motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat 255 30811A 255 611042 255 611042 255 611085 255 611085 Flywheel (Ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982) 255 611085 Flywheel (Ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later) 255 611085 Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later) 	252	590420A		
110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)255 611042Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)255 611085Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)	254	33328D		motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for
110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)255 611085Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)	255	30811A		110-120 volt starter motor kits listed above) (Used on Std.
using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)	255	611042		110-120 volt starter motor kits listed above) (Used on Std.
256 33235A Gasket Set (Incl. items marked*)	255	611085		using 110-120 volt starter motor kits listed above) (Used on
	256	33235A		Gasket Set (Incl. items marked*)