
HH50-95048G Engine Parts List #1

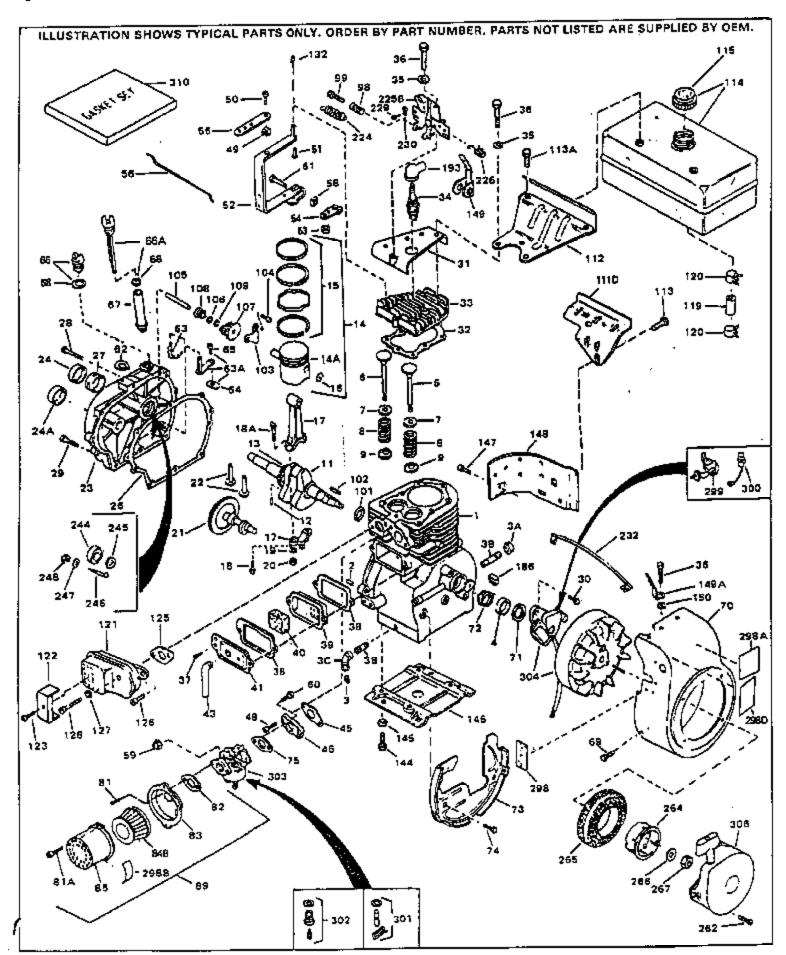


		Description
1	34761	Cylinder (C I liner)(Incl.2,3,4,184)(2-5/8")
2	27652	Pin, Dowel
3	27642	Plug, Oil drain, 1/4-18
	27876B	Seal, Oil
	32783	Intake Valve (Std.) (Incl. 9)
	32784	Intake Valve (1/32" OS) (Incl. 9)
	31469A	Exhaust Valve (Std.) (Incl. 9)
	31470A	Exhaust Valve (1/32" OS) (Incl. 9)
	27882	Cap, Upper valve spring
8	27881	Spring, Valve
9	32581	Cap, Lower valve spring
11	31826	Crankshaft (Incl. 12 & 13)
	29783	Pin, Crankshaft gear Used in early production. This gear is
.2	20100	serviceable ONLY when it is pinned to the crankshaft.
13	27884	Gear, Crankshaft Used in early production. This gear is
		serviceable ONLY when itis pinned to the crankshaft.
	34503	Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34504	Piston, Pin & Ring Set (.010" OS)
14	34505	Piston, Pin & Ring Set (.020" OS)
14A	31797B	Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
	31798B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	31799B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34854	Ring Set (Std.) (2-5/8" Bore)
	34855	Ring Set (.010" OS)
	34856	Ring Set (.020" OS)
16	27888	Ring, Piston pin retaining
17	31295C	Rod Assy., Connecting (Incl. 18)
18	650662C	Screw, Connecting rod (Late productio n)
	30682	Bolt, Connecting rod (Early productio n)
	26073	Connecting rod bolt washer (Early production)
	28264	Connecting rod nut (Used on early pro duction)
	33156	Camshaft
	34034	Lifter, Valve
23	31451A	Cylinder Cover (Incl.24, 105, 246, 24 7 & 248)
24	28460	Seal, Oil
26	30684	* Gasket, Cylinder cover
	650451	Screw, 1/4-20 x 1"
	650599	Screw, 1/4-20 x 1-1/2"
	650489	Screw, 1/4-20 x 5/8"
	30939A	Cover, Cylinder head
	28938C	* Gasket, Cylinder head
	30938A	Head, Cylinder (Incl. 3 of 36)
34	33636	Resistor Spark Plug
	26073	Washer, Flat (Use as required)
	650570	Washer, Flat (Use as required)
	650691	Washer, Flat (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
37	650128	Screw, 10-24 x 1/2" (Use as required)
37	650597	Screw, 10-24 x 5/8" (Use as required)
	27896A	* Gasket, Breather cover
	28423	Body, Breather
	28424	Element, Breather
41	28425	Cover, Valve spring
43	32447 27915A	Tube, Breather


	Part Number	Qty	Description
	34712		Flange, Carburetor (Incl. 60)
	30196		Screw, 5/16-18 x 3/4"
49	29918		Lockwasher
50	650548		Screw, 8-32 x 5/16"
51	30319		Rivet, Split (Used on early productio n)
	33454		Lever Assy., Governor
	30322		Lock Nut, 8-32 (Use as required)
	29916		Clamp, Governor lever (Use as require d)
	34662		Link, Throttle
	29216		
			Locknut, 10-32
	650517		Screw, 1/4-20 x 13/16"
	29826		Screw, 10-32 x 3/4"
	29642		Ring, Retaining
63	30699B		Rod Assy., Governor (This one piece gov. rod is no longer
			used. It is replaced by 30699C assy., Ref.#63A)
63A	30699C		Rod Assy., Governor (Incl. 64 & 65)
64	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	31297		Dipstick (Incl. 68)
	29673		* Gasket, Dipstick
	29747B		Screw, 5/16-24 x 21/32"
	32158E		Blower Hsg. (For elec.starter)(Incl.1 89,190)
	33876		Gasket, Stator
	31461		Bushing, Crankshaft
	29536		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	28820		Screw, 10-32 x 1/2" (Use as required)
81	650521		Screw, 10-32 x 1-1/8" (Use as require d)
82	27272A		* Gasket, Air cleaner
89	730127		Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
			(Use as required)
98	32924		Compression Spring (Used with 650688 screw) (Use as
	02021		required)
00	31342		
90	51542		Compression Spring (Used with 650549 screw) (Use as required)
98	28569		Compression Spring (Used with 29500 screw)(Use as
			required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
	29500		Screw, $8-32 \times 3/4"$ (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
	650625		Washer, Thrust
	30884		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
	30591		Gear Assy., Governor (Incl. 106)
108	30588A		Spool, Governor
	29193		Ring, Retaining
	34158		Bracket, Lower fuel tank
	34159		Plate, Upper fuel tank mtg.
	650665		Screw, 1/4-15 x 3/4"
	650561		Screw, 1/4-20 x 5/8"
113			

		ty Description
114	34186A	Fuel Tank (Incl. 115 & 120)
115	410144B	Fuel Cap (White Plastic)(Standard)(As req.)
115	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required)
115	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required)
	29774	Fuel Line (Braided 8.25") (Use as req uired)
119	30705	Fuel Line (Braided 16") (Use as requi red)
119	30962	Fuel Line (Braided 32") (Use as requi red)
120	26460	Clamp, Fuel line (Use as required)
121	32401	Muffler
125	27930A	* Gasket, Exhaust
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer, Flat
	650694A	Screw, 5/16-18 x 2"
	650548	Screw, 8-32 x 5/16" (Early production)
	650139	Screw, 8-32 x 1/2" (Early production)
	650542	Screw, 5/16-18 x 3/4"
	29538	Base, Engine mounting
	650128	
	30622A	Screw, 10-24 x 1/2"
		Extension, Blower housing
	27275	Clip, Wire (Use as required)
	29443	Clip, Fuel line (Use as required)
	35182	Wire, Ground
	31793	Bearing, Ball
	31792	Washer, Thrust
	31855	Retainer, Bearing
	650778	Washer, Lock
	650580	Nut, Lock
	29716	Screw, 1/4-28 x 7/16"
	32125	Cup, Starter
	35009	Screen, Starter cup
266	650815	Washer, Belleville
267	8116	Nut, Hex
298D	35344	Decal, Control
298A	34768	Decal, Name
298A	33310	Decal, 5 HP Mini-Bike (Use as require d)
298A	31517	Decal, H.P. (5 H.P.) (Use as required)
298A	32173	Decal, H.P. (6 H.P.) (Use as required)
298	34346	Decal, Instruction
	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
	632213	Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A,
000		page 176 for breakdown)
304	610694A	Magneto (w/ring gear for 120 volt sta rter) NOTE: The complete magneto is not available as an assembly. The
		magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
306	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
310	33235A	* Gasket Set (Incl. items marked *)

HH50-95048G Engine Parts List #2

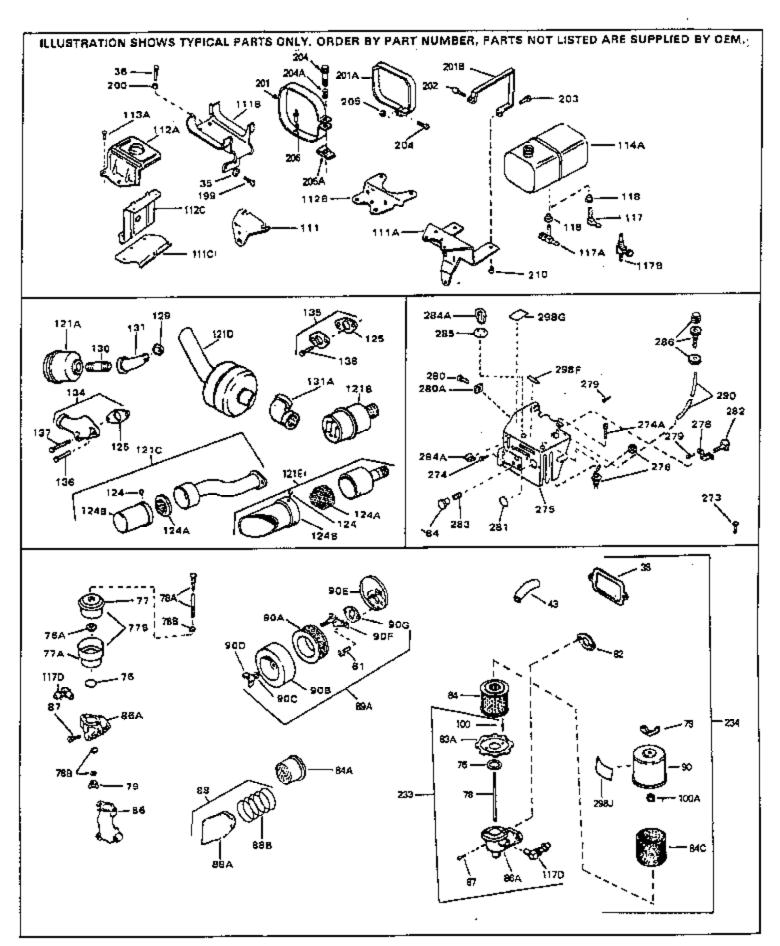

		Aty Description
35	26073	Washer, Flat (Use as required)
35	650570	Washer, Flat (Use as required)
35	650691	Washer, Flat (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
36	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
36	650694A	Screw, 5/16-18 x 2" (Use as required)
38	27896A	* Gasket, Breather cover
43	32447	Tube, Breather
76	34698A	Gasket, Air cleaner elbow
	650826	Stud, 1/4-20
79	650513	Nut, Wing
81	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	28820	Screw, 10-32 x 1/2" (Use as required)
	650521	Screw, 10-32 x 1-1/8" (Use as require d)
	27272A	* Gasket, Air cleaner
	34699	Bracket, Air cleaner
	34782	Element, Air cleaner
	34783	Filter, Pre-Air
	34780	Elbow, Air cleaner
	34697	Air Cleaner Elbow Assy.(Use in 730561 only.)
	650163	Screw, 10-32 x 7/8"
	730128	Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
00/1	730120	298B) (Use as req.)
	34781	Cover, Air cleaner
100		Pop Rivet (Purchase locally) (1/8" di a.)
	650825	Nut & Lockwasher, 1/4-20
	650665	Screw, 1/4-15 x 3/4"
	30675	Fitting, Breather tube
121E	391026	Muffler (Incl. 124, 124A & 124B) (This spark arrester
		mufflercan be used on any model)
124A	33171	Muffler Screen (Use as required)
124B	33185	Cover & Tube, Muffler (Use as require d)
124	650578	Screw, 8-18 x 3/8"
125	27930A	* Gasket, Exhaust
134	31288	Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130	Muf.Adapter Kit(Incl.125 & 138)(As re quired)
136	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	34819	Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
		730561 ass'y. only)
234	730561	Air Cleaner Kit
		(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
		(Use only on engines with an externally ventedfully
		adjustable carburetor.)
273	650687	Screw, 10-32 x 5/16" (Use as required)
284A	32410	Knob, Speed control
20 // (

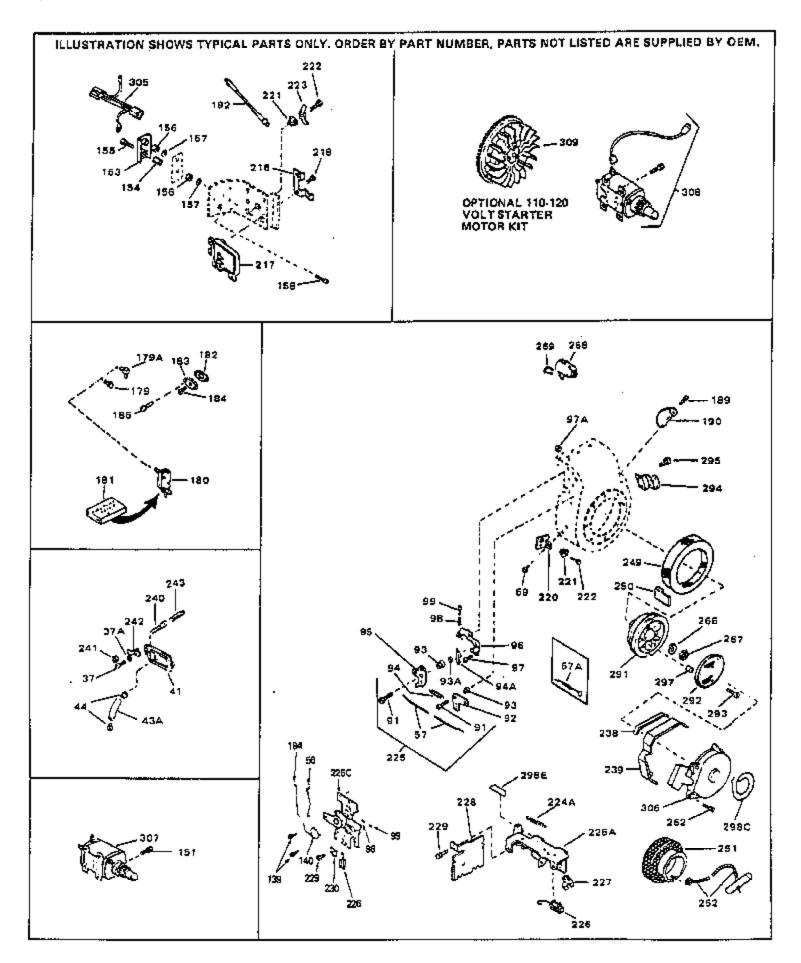

	Part Number	Qty	Description
	27261		Washer, Flat (Use as required)
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	28425		Cover, Valve spring
	32446		Grommet, Breather tube
	34662		Link, Throttle
	29747B		Screw, 5/16-24 x 21/32"
98	32924		Compression Spring (Used with 650688 screw) (Use as required)
98	31342		Compression Spring (Used with 650549 screw) (Use as required)
98	28569		Compression Spring (Used with 29500 screw)(Use as required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
	29500		Screw, 8-32 x 3/4" (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
139	650821		Screw, 10-32 x 1/2"
140	34663		Spring, Speed control
182	32683A		Gasket, Fuel pump cover (Use as required)
183	32955		Cover, Fuel pump pad (Use as required)
184	9556		Plug, Pipe 1/8-27 (Use as required)
185	30063		Screw, 1/4-20 x 1/2" (Use as required)
225	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
225C	34677		Control Bracket (Incl. 98, 99, 140 & 226)
227	33177		Terminal (Use as required)
262	29716		Screw, 1/4-28 x 7/16"
266	650815		Washer, Belleville
267	8116		Nut, Hex
305	33018		Harness Assy., Adapter (Use as requir ed)
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
308	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)