

1 2 3	Part Number 34915A 27652 27642 32630	Qty	Description Cylinder (Incl. 2, 3 & 4) (2-5/8" Bor e) Pin, Dowel Pipe plug, 1/4-18 Seal, Oil
	29536		Blower Housing Baffle (Without electric starter knock out) (Use as required)
5	35256A		Blower Housing Baffle (With electric starter knockout) (As req.)(point ign.)
7 8 9 10 11	650561 29538 650542 34885 29783 27884		Screw, 1/4-20 x 5/8" Base, Engine mounting Screw, 5/16-18 x 3/4" Crankshaft Pin, Crankshaft gear (Used on early p rod.) Gear, Crankshaft (Used on early production) This gear is serviceable ONLY when it is pinned to the crankshaft.
12A 13 13A 13A 13A 13A 14 15 15 15 16 17 18 19 20 21 22 22 23 24 26 27 28 29 30 31 33 34 35 36 37 38 39 40 41 41 42 42	31461 650625 34503 34504 34505 31797B 31798B 31799B 27888 34854 34856 31295C 650662C 34034 33156 30622A 650128 650561 30063 30684 31451A 28460 650451 650599 30699C 30700 650494 29642 31845 30588A 35479 29193 30591 31843A 650836 32783 32784 27878A 27878A 27878A		Bushing, Crankshaft Washer Thrust Piston, Pin & Ring Set (Std.) (2-5/8" Bore) Piston, Pin & Ring Set (.010" OS) Piston, Pin & Ring Set (.020" OS) Piston & Pin Ass'y. (Std.)(2-5/8')(In cl.14) Piston & Pin Ass'y. (.010" OS) (Incl. 14) Piston & Pin Ass'y. (.020" OS) (Incl. 14) Ring, Piston pin retaining Ring, Piston pin retaining Ring Set (.910" OS) Ring Set (.010" OS) Ring Set (.020" OS) Rod Assy., Connecting (Incl. 17) Bolt, Connecting rod (Incl. 2 pieces) Lifter, Valve Camshaft Extension, Blower housing Screw, 10-24 x 1/2" Screw, 1/4-20 x 5/8" (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Gasket Cylinder Cover Cylinder Cover (Incl.26, 34, 127A, 12 9 & 130) Seal, Oil Screw, 1/4-20 x 1" Screw, 1/4-20 x 1-1/2" Rod Assy., Governor (Incl. 30 & 31) Yoke, Governor Screw, 6-40 x 5/16" Ring, Retaining Shaft, Mechanical governor Spool, Governor Washer, Flat Ring, Retaining Gear Assy., Governor Bracket, Governor gear Screw, 10-24 x 1/2" Intake Valve (Std.) Intake Valve (I/32" OS) Exhaust Valve (Std.) Exhaust Valve (Std.) Exhaust Valve (I/32" OS) Cap, Upper valve spring

	Part Number	Qty	Description
44	27881		Spring, valve
	32581		Cap, Lower valve spring
46	33876		Gasket, Stator
47	650489		Screw, 1/4-20 x 5/8"
49	32589		Key, Flywheel
51	28938C		Gasket, Cylinder head
52	30938A		Head, Cylinder
53	34251		Resistor Spark Plug (RJ-17LM)
54	610118		Cover, Spark plug (Use as required)
	30939A		Cover Assy., Cylinder head
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	30322		Locknut, 8-32
	29916		Clamp, Governor lever (Use as require d)
	33454		Lever Assy., Governor
	29918		Washer, Lock, No. 8 E.T.
	650548		Screw, 8-32 x 5/16"
	29216		Locknut, 10-32
	29826		Screw, 10-32 x 3/4"
	34661		Link, Governor
	34677		·
			Control Bracket (Incl. 68, 69, 72 & 1 38)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	610973		Terminal Assy. (Use as required)
	27896A		Gasket, Valve chamber cover
	28423		Breather Assy., Valve
	28424		Element, Breather
	28425		Cover, Valve spring box
	650128		Screw, 10-24 x 1/2"
	35350		Tube, Breather
	32446		Grommet, Breather tube
	27915A		* Gasket, Intake pipe to cylinder
	34712		Flange, Carburetor (Incl. 86A)
	30196		Screw, 5/16-18 x 3/4"
	31688A		* Gasket, Carburetor
	650517		Screw, 1/4-20 x 13/16"
	27272A		* Air Cleaner Gasket (Use as required)
	30767		Spacer, Cleaner (Use as required)
	34783		Filter, Pre-air
89	34782		Filter, Air cleaner (Incl. 97)
90	34782		Pop Rivet (1/8" dia.) (Purchase local ly)
91	34699		Bracket, Air cleaner
92	34698A		Gasket, Air cleaner
93	30675		Fitting, Breather
94	34780		Elbow, Air cleaner
94A	34819		Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
			730561 assembly only)
95	650163		Screw, 10-32 x 7/8"
	650826		Stud, 1/4-20 x 6.20, threaded both en ds
	650825		Nut & Lockwasher, 1/4-20
	34781		Cover, Air cleaner
	650513		Nut, Wing, 1/4-20
	34158		Bracket, Fuel tank
	650665		Screw, 1/4-14 x 7/8"
102			OOIOVV, 1/T-1T A 1/O

Ref #	Part Number	Qty Description
	34159 34186A	Plate, Fuel tank mounting Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built with different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 33032 or 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
	410144B 33032	Fuel Cap (White Plastic)(Std.)(As req uired) Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as required)
105	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
106 107 108 109 111E 111C 111D 111A 115 116 117 118 119 127 127A 128 129 130 137 138 139 140 141 143 143A 143B 144 144A 145 146A 169 170 171 201A	35355 29774 30962 26460 32158E 29747B 34390 391026 33714 29633 32125 35009 650815 8116 29716 31793 31855 31792 650778 650580 32410 34663 650821 30747 650890 650578 33171 33185 33700 33323 311297 29673 32862 30244 29574 730130 730164	Fuel Cap (Red plastic) (Use as required) Fuel Line (Braided, 8 1/4") (Use as r equired) Fuel Line (Braided, 32") (Use as required) Clamp, Fuel line (Use as required) Blower Housing (For electric starter) Screw, 5/16-24 x 21/32" Deflector, Exhaust (Optional) Opt.Spark Arrest Muf.(Incl.143,143A,1 43B) Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A) Mufffler Cup, Starter Screen, Starter cup Washer, Belleville Nut, Hex Screw, 1/4-28 x 7/16" Bearing, Ball Retainer, Bearing Washer, Thrust Washer, Lock Nut, Lock Knob, Speed control Spring, Speed control Spring, Speed control Screw, 10-32 x 1/2" Clip, Spark plug shorting Lockwasher,Shakeproof, 5/16 Screw, 8-18 x 3/8" (Use as required) Screen, Muffler (Use as required) Cover & Tube, Muffler (Use as require d) Cover & Tube, Muffler (Use as require d) Dipstick (Incl. 146A) * Gasket, Oil fill Nut, Conduit Nipple, Pipe Elbow, 45-degree Muffler Adapter Kit (Incl.110,112)(As req.) Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 &
	730164	230)(As req.) Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124)
	730561	(Use as required) Air Cleaner Kit (Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C) (Used only on engine with an externally vented fully adjustable carburetor)
230	34346	Decal, Instruction

Ref #	Part Number	Ωtv	Description
	34704	۵.,	Decal, Instruction
	35344		Decal, Control
	34768		Decal, Name
	30547A		Breaker Assy (Used on Std. Point igni tion)
	30548B		Condenser
	631021		Inlet, Needle Seat & Clip Assy.
	611077		Alternator (Optional)
	650868		Screw, 8-18 x 1-1/8" (3 required)(Opt .)
242	611078		Connector, A.C. Lighting (Optional)
242	611079		Connector, D.C. Charging (Optional)
243	590610		Tube, Centering (Optional)
244	590613		Alternator Shaft (Optional)
250	632213		Carburetor (Incl. 85) (Refer to DiviSion 5, Section A, page 176 for breakdown)
251	611038		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)
252	590420A		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
254	33328D		Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A		Gasket Set (Incl. items marked*)