
HH50-95053H Engine Parts List

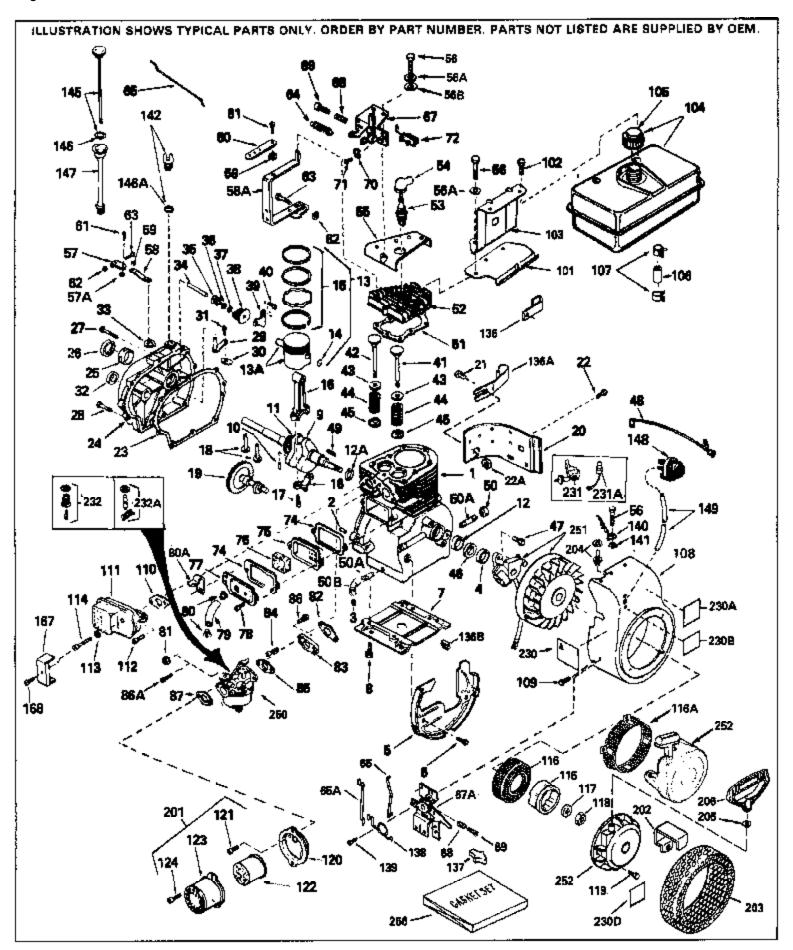

1 34915 2 27652 3 27642 4 32630 5 29530 5 35250	52 42 30	Cylinder (Incl. 2, 3 & 4) (2-5/8" Bor e) Pin, Dowel Pipe plug, 1/4-18
3 27642 4 32630 5 29536 5 35256	42 30	Pipe plug, 1/4-18
4 32630 5 29536 5 35256	30	
5 29536 5 35256	30	
5 29536 5 35256		Seal, Oil
5 35256		Blower Housing Baffle (Without electric starter knock out)
		(Use as required)
		Blower Housing Baffle (With electric starter knockout) (As req.)(point ign.)
6 65056		Screw, 1/4-20 x 5/8"
7 29538	38	Base, Engine mounting
8 65054	542	Screw, 5/16-18 x 3/4"
9 34957	57	Crankshaft
10 29783	33	Pin, Crankshaft gear (Used on early p rod.)
11 27884	34	Gear, Crankshaft (Used on early production) This gear is serviceable ONLY when it is pinned to the crankshaft.
12 31461		Bushing, Crankshaft
12A 65062		Washer Thrust
13 34503)3	Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
13 34504)4	Piston, Pin & Ring Set (.010" OS)
13 34505	05	Piston, Pin & Ring Set (.020" OS)
13A 31797	97B	Piston & Pin Ass'y. (Std.)(2-5/8')(In cl.14)
13A 31798		Piston & Pin Ass'y. (.010" OS) (Incl. 14)
13A 31799		Piston & Pin Ass'y. (.020" OS) (Incl. 14)
14 27888		Ring, Piston pin retaining
15 34854		Ring Set (Std.) (2-5/8" Bore)
15 34855		Ring Set (.010" OS)
15 34856		Ring Set (.020" OS)
16 31295		Rod Assy., Connecting (Incl. 17)
17 65066		Bolt, Connecting rod (Incl. 2 pieces)
18 34034		. ,
19 33156		Lifter, Valve
		Camshaft
20 30622		Extension, Blower housing
21 65012		Screw, 10-24 x 1/2"
22 65056		Screw, 1/4-20 x 5/8" (Use as required)
22 30063		Screw, 1/4-20 x 1/2" (Use as required)
23 30684		Gasket Cylinder Cover
24 31451		Cylinder Cover (Incl.26, 34, 127A, 12 9 & 130)
26 28460	60	Seal, Oil
27 65045	451	Screw, 1/4-20 x 1"
28 65059	599	Screw, 1/4-20 x 1-1/2"
29 30699		Rod Assy., Governor (Incl. 30 & 31)
30 30700	00	Yoke, Governor
31 65049		Screw, 6-40 x 5/16"
33 29642		Ring, Retaining
34 31845		Shaft, Mechanical governor
35 30588		Spool, Governor
36 35479		Washer, Flat
37 29193		Ring, Retaining
38 30591		Gear Assy., Governor
39 31843		Bracket, Governor gear
40 65083		Screw, 10-24 x 1/2"
41 32783		Intake Valve (Std.)
41 32784	34	Intake Valve (1/32" OS)
42 27878	78A	Exhaust Valve (Std.)
42 27880		Exhaust Valve (1/32" OS)
43 27882		Cap, Upper valve spring

	Part Number	Qty	Description
44	27881		Spring, valve
45	32581		Cap, Lower valve spring
46	33876		Gasket, Stator
	650489		Screw, 1/4-20 x 5/8"
	35182		Ground Wire
	32589		Key, Flywheel
	28938C		Gasket, Cylinder head
	30938A		Head, Cylinder
53	33636		Resistor Spark Plug (RJ-8C)
54	610118		Cover, Spark plug (Use as required)
55	30939A		Cover Assy., Cylinder head
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
57	29916		Clamp, Governor lever (Use as require d)
57A	30322		Locknut, 8-32
58	33454		Lever Assy., Governor
	29918		Washer, Lock, No. 8 E.T.
	650548		Screw, 8-32 x 5/16"
	29216		
			Locknut, 10-32
	29826		Screw, 10-32 x 3/4"
	34661		Link, Governor
	34664		Control Bracket (Incl. 68, 69, 72 & 1 38)
68	31342		Spring, Compression
69	650549		Screw, 5-40 x 7/16"
70	27793		Clip, Conduit
	28942		Screw, 10-32 x 3/8"
	610973		
			Terminal Assy. (Use as required)
	27896A		Gasket, Valve chamber cover
	28423		Breather Assy., Valve
	28424		Element, Breather
77	28425		Cover, Valve spring box
78	650128		Screw, 10-24 x 1/2"
79	35350		Tube, Breather
	32446		Grommet, Breather tube
	27915A		* Gasket, Intake pipe to cylinder
	34712		Flange, Carburetor (Incl. 86A)
	30196		Screw, 5/16-18 x 3/4"
	31688A		* Gasket, Carburetor
86A	650517		Screw, 1/4-20 x 13/16"
87	27272A		* Air Cleaner Gasket (Use as required)
87	30767		Spacer, Cleaner (Use as required)
	34783		Filter, Pre-air
	34782		Filter, Air cleaner (Incl. 97)
	34782		Pop Rivet (1/8" dia.) (Purchase local ly)
	34699		Bracket, Air cleaner
	34698A		Gasket, Air cleaner
93	30675		Fitting, Breather
94	34780		Elbow, Air cleaner
	34819		Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
			730561 assembly only)
95	650163		Screw, 10-32 x 7/8"
	650826		Stud, 1/4-20 x 6.20, threaded both en ds
96	000020		
			Nut & Lockwasher, 1/4-20
97	650825 34781		Nut & Lockwasher, 1/4-20 Cover, Air cleaner

		Qty	Description
100	650513		Nut, Wing, 1/4-20
101	34158		Bracket, Fuel tank
102	650665		Screw, 1/4-14 x 7/8"
	34159		Plate, Fuel tank mounting
	34186A		Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built
104	34100A		with different size fuel inlet openings. Tanks with the 1-3/16"
			I.D. opening use fuel cap 33032 or 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
105	410144B		Fuel Cap (White Plastic)(Std.)(As req uired)
	33032		Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as
			required)
105	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
			required)
105	35355		Fuel Cap (Ped plastic) (Lleo as required)
	29774		Fuel Cap (Red plastic) (Use as required)
			Fuel Line (Braided, 8 1/4") (Use as r equired)
	30962		Fuel Line (Braided, 32") (Use as required)
	26460		Clamp, Fuel line (Use as required)
	32158E		Blower Housing (For electric starter)
	29747B		Screw, 5/16-24 x 21/32"
	27930A		* Gasket, Exhaust flange
111D	33714		Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
111C	391026		Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
111F	391006		Muffler Assy. (Incl. 143, 143C & 144A)
111E	34390		Deflector, Exhaust (Optional)
112	30196		Screw, 5/16-18 x 3/4"
	26073		Washer, Flat
	650694A		Screw, 5/16 - 18 x 2"
	32125		Cup, Starter
	35009		Screen, Starter cup
	650815		Washer, Belleville
	8116		Nut, Hex
	29716		Screw, 1/4-28 x 7/16"
	31855		Retainer, Bearing
	31793		Bearing, Ball
	31792		Washer, Thrust
	650778		Washer, Lock
	650580		Nut, Lock
	34663		Spring, Speed control
	650821		Screw, 10-32 x 1/2"
	650578		Screw, 8-18 x 3/8" (Use as required)
	33171		Screen, Muffler (Use as required)
143B	33185		Cover & tube, Muffler (Use as require d)
143C	33172		Cover, Muffler
	33700		Cover & Tube, Muffler (Use as require d)
	33323		Screen, Muffler (Use as required)
	31297		Dipstick (Incl. 146A)
	29673		* Gasket, Oil fill
	730130		Muffler Adapter Kit (Incl.110,112)(As req.)
	730561		Air Cleaner Kit
2010			
			(Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C)
			(Used only on engine with an externally vented fully
			adjustable carburetor)
201	730164		Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 &
_01			230)(As req.)

Ref #	Part Number Qt	y Description
201	730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124) (Use as required)
230A 230C 231A 231 232A 240 241 242 242 242 243 244	34346 34768 34704 30548B 30547A 631021 611077 650868 611078 611079 590610 590613 632213	Decal, Instruction Decal, Name Decal, Instruction Condenser Breaker Assy (Used on Std. Point igni tion) Inlet, Needle Seat & Clip Assy. Alternator (Optional) Screw, 8-18 x 1-1/8" (3 required)(Opt .) Connector, A.C. Lighting (Optional) Connector, D.C. Charging (Optional) Tube, Centering (Optional) Alternator Shaft (Optional) Carburetor (Incl. 85) (Refer to DiviSion 5, Section A, page 176 for breakdown)
251	611038	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)
252	590420A	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
254	33328D	Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A	Gasket Set (Incl. items marked*)