


Dof #	Dowt Ni week ou	٦.,	Description
		Qty	l control of the cont
	34761		Cylinder, (2-5/8" Bore)
	27652		Pin, Dowel
	27642 27070D		Plug, Oil drain, 1/4-18
	27876B		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	31791		Crankshaft (Incl. 12 & 13)
12	29783		Pin, Crankshaft gear Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is
10	27001		serviceable ONLY when itis pinned to the crankshaft.
4.4	0.4500		·
	34503		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34504		Piston, Pin & Ring Set (.010" OS)
	34505		Piston, Pin & Ring Set (.020" OS)
	31797B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
	31798B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	31799B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
15	34856		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
17	31380C		Rod Assy., Connecting (Incl. 18)
18	650662C		Screw, Connecting rod (Late productio n)
18A	30682		Bolt, Connecting rod (Early productio n)
19	26073		Connecting rod bolt washer (Early pro duction)
20	28264		Connecting rod nut (Used on early pro duction)
21	33156		Camshaft
	34034		Lifter, Valve
	31451A		Cylinder Cover (Incl.24, 105, 246, 24 7 & 248)
	28460		Seal, Oil
	30684		* Gasket, Cylinder cover
	650451		Screw, 1/4-20 x 1"
	650599		Screw, 1/4-20 x 1-1/2"
	650489		Screw, 1/4-20 x 5/8"
	30939A		Cover, Cylinder head
	28938C		* Gasket, Cylinder head
	30938A		Head, Cylinder (Incl. 3 of 36)
	33636		Resistor Spark Plug
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		. , ,
			Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650128 650507		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	27915A		* Gasket, Intake
46	30195A		Flange, Carburetor (Incl. 79 & 80)


Ref # Part Number	Qty Description
48 30196	Screw, 5/16-18 x 3/4"
49 29918	Lockwasher
50 650548	Screw, 8-32 x 5/16"
51 30319	
	Rivet, Split (Used on early production)
52 32326A	Lever, Governor (New lever does not need 1 of Ref
	#49,51,53,54,132,133)
53 30322	Lock Nut, 8-32 (Use as required)
54 29916	Clamp, Governor lever (Use as require d)
55 30205	Bracket, Adjusting
56 31710	
	Link, Throttle
58 29216	Locknut, 10-32
59 29752	Nut & Lockwasher, 1/4-28
60 650572	Screw, 1/4-28 x 1-1/8"
61 29826	Screw, 10-32 x 3/4"
62 29642	Ring, Retaining
63A 30699C	Rod Assy., Governor (Incl. 64 & 65)
63 30699B	Rod Assy., Governor (This one piece gov. rod is no longer
	used. It is replaced by 30699C assy., Ref.#63A)
	,
64 30700	Yoke, Governor
65 650494	Screw, 6-40 x 5/16"
66A 31297	Dipstick (Incl. 68)
68 29673	* Gasket, Dipstick
69 29747B	Screw, 5/16-24 x 21/32"
70 32158E	Blower Hsg. (For elec.starter)(Incl.1 89,190)
72 31461	Bushing, Crankshaft
73 29536	Baffle, Blower housing
74 650561	Screw, 1/4-20 x 5/8"
75 31688A	* Gasket, Carburetor
	·
81A 650152	Screw, 8-32 x 3/8"
81 30196	Screw, 5/16-18 x 3/4" (Use as require d)
81 28820	Screw, 10-32 x 1/2" (Use as required)
81 650521	Screw, 10-32 x 1-1/8" (Use as require d)
82 27272A	* Gasket, Air cleaner
83 31691	Bracket, Air cleaner
84B 30727	Element, Air cleaner
85 31715	Body, Air cleaner
89 730127	Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
	(Use as required)
00.00000	
98 28569	Compression Spring (Used with 29500 screw)(Use as
	required)
98 32924	Compression Spring (Used with 650688 screw) (Use as
30 02324	required)
	required)
98 31342	Compression Spring (Used with 650549 screw) (Use as
	required)
00. 050540	
99 650549	Screw, 5-40 x 7/16" (Use as required)
99 29500	Screw, 8-32 x 3/4" (Use as required)
99 650688	Screw, 10-32 x 1 (Use as required)
101 650625	Washer, Thrust
102 30884	Key, Flywheel
103 31843A	Bracket, Governor gear
104 650836	Screw, 10-24 x 1/2"
105 31845	Shaft, Mechanical governor
106 30590A	Washer, Flat
107 30591	Gear Assy., Governor (Incl. 106)
107 30591 108 30588A	Spool, Governor
ILIO SUDAAA	.3000 1500

		Qty	Description
109	29193		Ring, Retaining
111D	34158		Bracket, Lower fuel tank
112	34159		Plate, Upper fuel tank mtg.
113A	650665		Screw, 1/4-15 x 3/4"
	650561		Screw, 1/4-20 x 5/8"
	34186A		Fuel Tank (Incl. 115 & 120)
	410144B		Fuel Cap (White Plastic)(Standard)(As req.)
			• • • • • • • • • • • • • • • • • • • •
110	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required)
115	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required)
440	00==4		. ,
	29774		Fuel Line (Braided 8.25") (Use as req uired)
	30705		Fuel Line (Braided 16") (Use as requi red)
119	30962		Fuel Line (Braided 32") (Use as requi red)
120	26460		Clamp, Fuel line (Use as required)
121	32401		Muffler
125	27930A		* Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	26073		Washer, Flat
	650694A		Screw, 5/16-18 x 2"
	650548		Screw, 8-32 x 5/16" (Early production )
	650139		Screw, 8-32 x 1/2" (Early production)
	650542		Screw, 5/16-18 x 3/4"
	29538		Base, Engine mounting
	650128		Screw, 10-24 x 1/2"
	30622A		Extension, Blower housing
149A	30747		Clip, Shorting
150	650890		Lockwasher
186	27275		Clip, Wire (Use as required)
186	29443		Clip, Fuel line (Use as required)
224	31386		Spring, Extension
	31711B		Control Bracket (Incl. 98, 99 & 226)
	610973		Terminal Assy.
	28942		Screw, 10-32 x 3/8"
	27793		Clip, Conduit
	31793		Bearing, Ball
	31792		
			Washer, Thrust
	31855		Retainer, Bearing
	650778		Washer, Lock
	650580		Nut, Lock
	29716		Screw, 1/4-28 x 7/16"
	32125		Cup, Starter
	590417		Screen, Starter cup
266	650815		Washer, Belleville
267	8116		Nut, Hex
298B	31752		Decal, Air cleaner
	550223		Decal, Name
	33310		Decal, 5 HP Mini-Bike (Use as require d)
	31517		Decal, H.P. (5 H.P.) (Use as required )
	32173		Decal, H.P. (6 H.P.) (Use as required )
	34346		Decal, Instruction
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
303	631828		Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A,
			page 144 for breakdown)

Ref #	Part Number	Qty	Description
304	610689A		Magneto (Refer to Division 5, Section B, page 24 for breakdown)
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
310	33235A		* Gasket Set (Incl. items marked *)

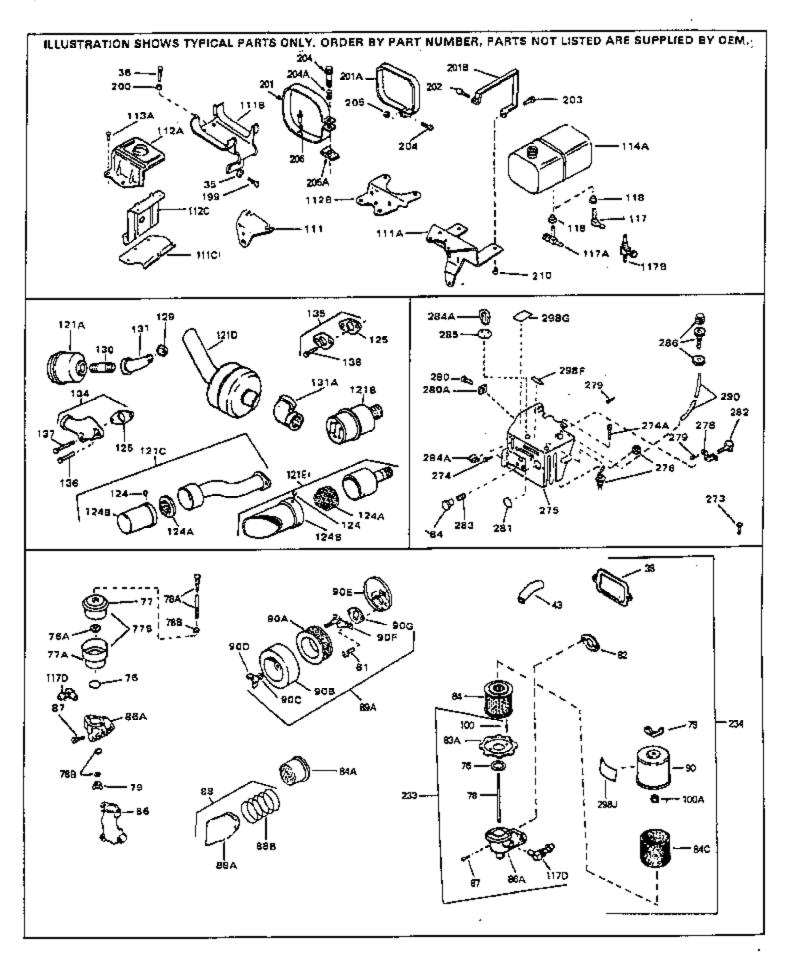

Ref #	Part Number	Qty	Description
35	26073	-	Washer, Flat (Use as required)
35	650570		Washer, Flat (Use as required)
35	650691		Washer, Flat (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	28820		Screw, 10-32 x 1/2" (Use as required)
	650521		Screw, 10-32 x 1-1/8" (Use as require d)
82	27272A		* Gasket, Air cleaner
	34697		Air Cleaner Elbow Assy.(Use in 730561 only.)
89A	730128		Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
			298B) (Use as req.)
113A	650665		Screw, 1/4-15 x 3/4"
	391026		Muffler (Incl. 124, 124A & 124B) (This spark arrester
			mufflercan be used on any model)
1241	33171		Muffler Screen (Use as required)
	33185		Cover & Tube, Muffler (Use as require d)
	650578		Screw, 8-18 x 3/8"
	27930A		* Gasket, Exhaust
	31288		Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130		Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	34819		Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
			730561 ass'y. only)
004	700504		• • • • • • • • • • • • • • • • • • • •
234	730561		Air Cleaner Kit
			(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
			(Use only on engines with an externally ventedfully adjustable carburetor.)
			,
273	650687		Screw, 10-32 x 5/16" (Use as required )

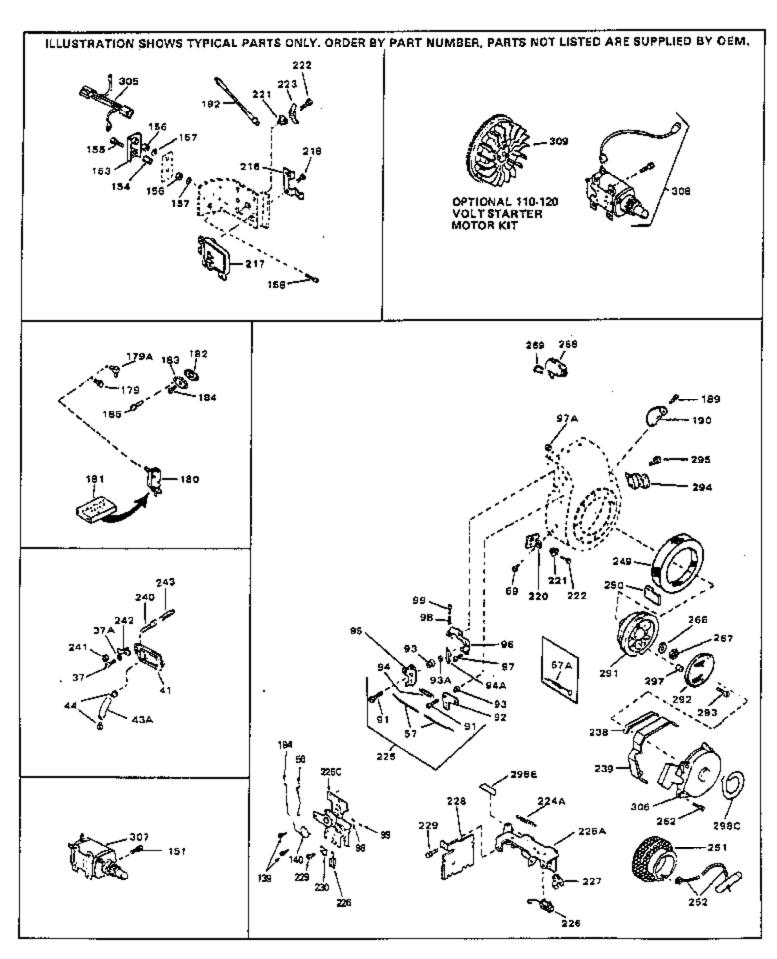

Ref #	Part Number (	Oty Description
	650128	Screw, 10-24 x 1/2" (Use as required)
37	650597	Screw, 10-24 x 5/8" (Use as required)
37A	27261	Washer, Flat (Use as required)
41	28425	Cover, Valve spring
43A	35350	Tube, Breather
56	31710	Link, Throttle
69	29747B	Screw, 5/16-24 x 21/32"
98	28569	Compression Spring (Used with 29500 screw)(Use as
		required)
98	32924	Compression Spring (Used with 650688 screw) (Use as
		required)
98	31342	Compression Spring (Used with 650549 screw) (Use as required)
00	650540	• •
	650549 29500	Screw, 5-40 x 7/16" (Use as required)
	650688	Screw, 8-32 x 3/4" (Use as required)
	32683A	Screw, 10-32 x 1 (Use as required)
	32955	Gasket, Fuel pump cover (Use as required)
	9556	Cover, Fuel pump pad (Use as required)
		Plug, Pipe 1/8-27 (Use as required)
	30063	Screw, 1/4-20 x 1/2" (Use as required)
	730152 610973	Control Bracket(Incl.91 thru 97)(As r eq.)
	33177	Terminal Assy.
	28942	Terminal (Use as required)
	27793	Screw, 10-32 x 3/8" Clip, Conduit
	29716	Screw, 1/4-28 x 7/16"
	650815	Washer, Belleville
	8116	Nut, Hex
	33018	·
	590420	Harness Assy., Adapter (Use as requir ed) Rewind Starter (Refer to Division 5, Section C, page 25 for
300	390420	breakdown)
308	33328D	Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)