



Ref #	Part Number Qt	y Description
1	34761	Cylinder (C I liner)(Incl.2,3,4,184)(2-5/8")
	27652	Pin, Dowel
	27642	Plug, Oil drain, 1/4-18
	27876B	Seal, Oil
5	32783	Intake Valve (Std.) (Incl. 9)
5	32784	Intake Valve (1/32" OS) (Incl. 9)
6	31469A	Exhaust Valve (Std.) (Íncl. 9)
	31470A	Exhaust Valve (1/32" OS) (Incl. 9)
	27878A	Exhaust Valve (Std.)
	27880A	Exhaust Valve (1/32" OS) (Incl. 9)
7	27882	Cap, Upper valve spring
8	27881	Spring, Valve
	32581	Cap, Lower valve spring
	31791	
		Crankshaft (Incl. 12 & 13)
12	29783	Pin, Crankshaft gear Used in early production. This gear is
		serviceable ONLY when itis pinned to the crankshaft.
13	27884	Gear, Crankshaft Used in early production. This gear is
		serviceable ONLY when itis pinned to the crankshaft.
1 /	34503	Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34504	Piston, Pin & Ring Set (.010" OS)
	34505	Piston, Pin & Ring Set (.020" OS)
14A	31797B	Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
14A	31798B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	31799B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34854	Ring Set (Std.) (2-5/8" Bore)
	34855	Ring Set (.010" OS)
15	34856	Ring Set (.020" OS)
16	27888	Ring, Piston pin retaining
	31380C	Rod Assy., Connecting (Incl. 18)
	650662C	Screw, Connecting rod (Late productio n)
		• • • •
	30682	Bolt, Connecting rod (Early productio n)
	26073	Connecting rod bolt washer (Early pro duction)
20	28264	Connecting rod nut (Used on early pro duction)
21	33156	Camshaft
	34034	Lifter, Valve
		•
	31451A	Cylinder Cover (Incl.24, 105, 246, 24 7 & 248)
	28460	Seal, Oil
26	30684	* Gasket, Cylinder cover
	650451	Screw, 1/4-20 x 1"
	650599	Screw, 1/4-20 x 1-1/2"
		•
	650489	Screw, 1/4-20 x 5/8"
	30939A	Cover, Cylinder head
32	28938C	* Gasket, Cylinder head
	30938A	Head, Cylinder (Incl. 3 of 36)
	33636	Resistor Spark Plug
	26073	Washer, Flat (Use as required)
	650570	Washer, Flat (Use as required)
35	650691	Washer, Flat (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	
		Screw, 5/16-18 x 2" (Use as required)
	650128	Screw, 10-24 x 1/2" (Use as required)
	650597	Screw, 10-24 x 5/8" (Use as required)
		· · · ·
37	27896A	* Gasket, Breather cover
37 38	27896A 28423	* Gasket, Breather cover Body, Breather
37 38 39	28423	Body, Breather
37 38 39 40		

		Qty Description
	27915A	* Gasket, Intake
	30195A	Flange, Carburetor (Incl. 79 & 80)
	30196	Screw, 5/16-18 x 3/4"
	29918	Lockwasher
50	650548	Screw, 8-32 x 5/16"
51	30319	Rivet, Split (Used on early productio n)
52	32326A	Lever, Governor (New lever does not need 1 of Ref
		#49,51,53,54,132,133)
50	00000	· · · · ,
	30322	Lock Nut, 8-32 (Use as required)
	29916	Clamp, Governor lever (Use as require d)
	30205	Bracket, Adjusting
	30824	Link, Throttle
	29216	Locknut, 10-32
59	29752	Nut & Lockwasher, 1/4-28
60	650572	Screw, 1/4-28 x 1-1/8"
61	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
	30699C	Rod Assy., Governor (Incl. 64 & 65)
	30699B	Rod Assy., Governor (This one piece gov. rod is no longer
00		used. It is replaced by 30699C assy., Ref.#63A)
	30700	Yoke, Governor
65	650494	Screw, 6-40 x 5/16"
66A	34011A	Dipstick (Incl. 68)
67	33893A	Oil Fill Tube
68	33590	"O" Ring
	29747B	Screw, 5/16-24 x 21/32"
	31754A	Housing, Blower
	31461	Bushing, Crankshaft
	29536	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	28820	Screw, 10-32 x 1/2" (Use as required)
	650521	Screw, 10-32 x 1-1/8" (Use as require d)
	650152	Screw, 8-32 x 3/8"
	27272A	* Gasket, Air cleaner
	31691	Bracket, Air cleaner
	30727	Element, Air cleaner
85	31715	Body, Air cleaner
89	730127	Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
		(Use as required)
08	28569	Compression Spring (Used with 29500 screw)(Use as
90	20009	
		required)
98	32924	Compression Spring (Used with 650688 screw) (Use as
		required)
00	31342	Compression Spring (Used with 650549 screw) (Use as
90	31342	
		required)
99	650549	Screw, 5-40 x 7/16" (Use as required)
	29500	Screw, 8-32 x 3/4" (Use as required)
	650688	Screw, 10-32 x 1 (Use as required)
	650625	Washer, Thrust
	30884	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	31845	Shaft, Mechanical governor

Ref #	Part Number Q	ty Description
106	30590A	Washer, Flat
107	30591	Gear Assy., Governor (Incl. 106)
108	30588A	Spool, Governor
	29193	Ring, Retaining
	30063	Screw, 1/4-20 x 1/2"
	410144B	Fuel Cap (White Plastic)(Standard)(As req.)
	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
113	00002	required)
115	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required)
	29774	Fuel Line (Braided 8.25") (Use as req uired)
	30705	Fuel Line (Braided 16") (Use as required)
	30962	Fuel Line (Braided 32") (Use as requi red)
	26460	Clamp, Fuel line (Use as required)
125	27930A	* Gasket, Exhaust
132	650548	Screw, 8-32 x 5/16" (Early production)
132	650139	Screw, 8-32 x 1/2" (Early production)
144	650542	Screw, 5/16-18 x 3/4"
146	29538	Base, Engine mounting
147	650128	Screw, 10-24 x 1/2"
	30622A	Extension, Blower housing
	27275	Clip, Wire (Use as required)
	29443	Clip, Fuel line (Use as required)
	610973	Terminal Assy.
	28942	Screw, 10-32 x 3/8"
	27793	Clip, Conduit
	35349	Ground Wire
	31793	Bearing, Ball
	31792	•
		Washer, Thrust
	31855	Retainer, Bearing
	650778	Washer, Lock
	650580	Nut, Lock
	650815	Washer, Belleville
	8116	Nut, Hex
	550223	Decal, Name
	33310	Decal, 5 HP Mini-Bike (Use as require d)
	31517	Decal, H.P. (5 H.P.) (Use as required)
298A	32173	Decal, H.P. (6 H.P.) (Use as required)
298	34346	Decal, Instruction
298B	31752	Decal, Air cleaner
299	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
	631824	Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 206for breakdown)
304	610689A	Magneto (Refer to Division 5, Section B, page 24 for breakdown)
040	33235A	* Gasket Set (Incl. items marked *)

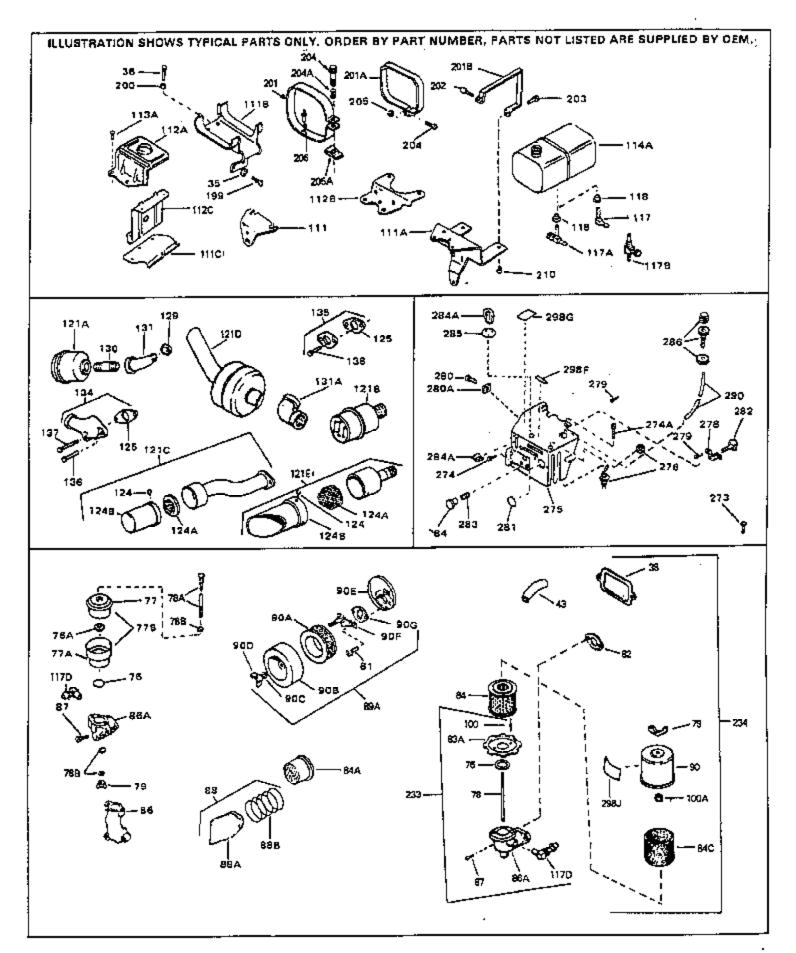

		y Description
	26073	Washer, Flat (Use as required)
	650570	Washer, Flat (Use as required)
	650691	Washer, Flat (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
81	28820	Screw, 10-32 x 1/2" (Use as required)
	650521	Screw, 10-32 x 1-1/8" (Use as require d)
	27272A	* Gasket, Air cleaner
	34697	Air Cleaner Elbow Assy.(Use in 730561 only.)
	31668	Bag, Pre-cleaner
88B	31667	Spring, Pre-cleaner
	730512	Kit, Pre-cleaner (Incl. 88A & 88B)
89A	730128	Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
		298B) (Use as req.)
121F	391026	Muffler (Incl. 124, 124A & 124B) (This spark arrester
1212	001020	mufflercan be used on any model)
10.14	00/7/	· · ·
	33171	Muffler Screen (Use as required)
	33185	Cover & Tube, Muffler (Use as require d)
	650578	Screw, 8-18 x 3/8"
	27930A	* Gasket, Exhaust
	32862	Nut, Conduit (1/4" thick)
	29574	Elbow, Exhaust (90 degree)
	31288	Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130	Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
233	34819	Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
		730561 ass'y. only)
234	730561	Air Cleaner Kit
		(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
		(Use only on engines with an externally ventedfully
		adjustable carburetor.)
070	650687	Screw, 10-32 x 5/16" (Use as required)
213	000007	$O_{O} = VV$, $V_{O} = X J + V + V = (O = A = 1 = V)$

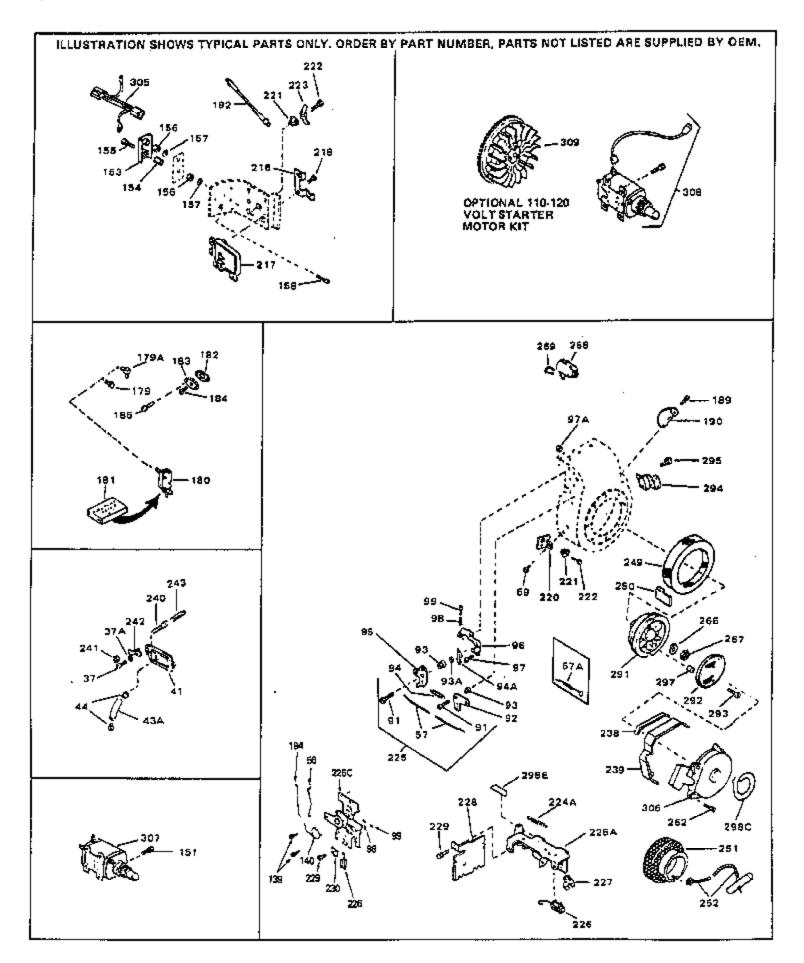

Ref #	Part Number	Qty Description
37 37A 41 43A 56 69 98	650128 650597 27261 28425 35350 30824 29747B 28569	Screw, 10-24 x 1/2" (Use as required) Screw, 10-24 x 5/8" (Use as required) Washer, Flat (Use as required) Cover, Valve spring Tube, Breather Link, Throttle Screw, 5/16-24 x 21/32" Compression Spring (Used with 29500 screw)(Use as required)
	32924	Compression Spring (Used with 650688 screw) (Use as required)
	31342	Compression Spring (Used with 650549 screw) (Use as required)
99 99 182 183 184 185 224A 225 225A 226 227 228 229 230 266 267 291 292 293 293 294 295 297 298C 305	650549 29500 650688 32683A 32955 9556 30063 30826 730152 33110A 610973 33177 30820 28942 27793 650815 8116 31753 31756 650597 31755 28942 31880 32187 33018 33328D	Screw, 5-40 x 7/16" (Use as required) Screw, 8-32 x 3/4" (Use as required) Gasket, Fuel pump cover (Use as required) Cover, Fuel pump pad (Use as required) Plug, Pipe 1/8-27 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Spring, Extension Control Bracket(Incl.91 thru 97)(As r eq.) Control Bracket(Incl.224A & 226) Terminal Assy. Terminal (Use as required) Baffle, Heat Screw, 10-32 x 3/8" Clip, Conduit Washer, Belleville Nut, Hex Pulley, Rope starter Screen, Air Screw, 10-24 x 5/8" Bracket, Guard Screw, 10-32 x 3/8" Spacer, Screen Decal, "Super-start" Harness Assy., Adapter (Use as requir ed) Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)