


D.("	Dad Marilan	Ο.	D
-		Qty	Description Outlined at (C. History) (local 2.2.4.4.9.4) (.2.5 (0!!)
	34761		Cylinder (C I liner)(Incl.2,3,4,184)(2-5/8")
	27652		Pin, Dowel
	27642		Plug, Oil drain, 1/4-18
	27876B		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
6	27878A		Exhaust Valve (Std.)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7	27882		Cap, Upper valve spring
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	31791		Crankshaft (Incl. 12 & 13)
	29783		Pin, Crankshaft gear Used in early production. This gear is
12	20700		serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
14	34503		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
14	34504		Piston, Pin & Ring Set (.010" OS)
14	34505		Piston, Pin & Ring Set (.020" OS)
	31797B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
	31798B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	31799B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (0.010" OS)
	34856		
			Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	31380C		Rod Assy., Connecting (Incl. 18)
	650662C		Screw, Connecting rod (Late productio n)
	30682		Bolt, Connecting rod (Early productio n)
	26073		Connecting rod bolt washer (Early pro duction)
20	28264		Connecting rod nut (Used on early pro duction)
21	33156		Camshaft
22	34034		Lifter, Valve
23	31451A		Cylinder Cover (Incl.24, 105, 246, 24 7 & 248)
24	28460		Seal, Oil
	30684		* Gasket, Cylinder cover
	650451		Screw, 1/4-20 x 1"
	650599		Screw, 1/4-20 x 1-1/2"
	650489		Screw, 1/4-20 x 5/8"
	30939A		Cover, Cylinder head
	28938C		* Gasket, Cylinder head
	30938A		Head, Cylinder (Incl. 3 of 36)
	33636		Resistor Spark Plug
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
35	650691		Washer, Flat (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
			•
	28425		Cover, Valve spring
	27915A		* Gasket, Intake
46	30195A		Flange, Carburetor (Incl. 79 & 80)


Ref #	Part Number C	Oty Description
	30196	Screw, 5/16-18 x 3/4"
	29918	Lockwasher
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used on early production)
52	32326A	Lever, Governor (New lever does not need 1 of Ref
		#49,51,53,54,132,133)
53	30322	Lock Nut, 8-32 (Use as required)
54	29916	Clamp, Governor lever (Use as require d)
55	30205	Bracket, Adjusting
	31710	Link, Throttle
	29216	Locknut, 10-32
	29752	·
		Nut & Lockwasher, 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
	29826	Screw, 10-32 x 3/4"
	29642_	Ring, Retaining
63	30699B	Rod Assy., Governor (This one piece gov. rod is no longer
		used. It is replaced by 30699C assy., Ref.#63A)
63A	30699C	Rod Assy., Governor (Incl. 64 & 65)
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	31297	Dipstick (Incl. 68)
	29673	* Gasket, Dipstick
	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Hsg. (For elec.starter)(Incl.1 89,190)
	31461	Bushing, Crankshaft
	29536	Baffle, Blower housing
74	650561	Screw, 1/4-20 x 5/8"
75	31688A	* Gasket, Carburetor
81	30196	Screw, 5/16-18 x 3/4" (Use as require d)
81	28820	Screw, 10-32 x 1/2" (Use as required)
81	650521	Screw, 10-32 x 1-1/8" (Use as require d)
	650152	Screw, 8-32 x 3/8"
	27272A	* Gasket, Air cleaner
	31691	Bracket, Air cleaner
	30727	Element, Air cleaner
	31715	·
		Body, Air cleaner
89	730127	Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
		(Use as required)
98	28569	Compression Spring (Used with 29500 screw)(Use as
		required)
98	32924	Compression Spring (Used with 650688 screw) (Use as
		required)
00	24242	
98	31342	Compression Spring (Used with 650549 screw) (Use as
		required)
	650549	Screw, 5-40 x 7/16" (Use as required)
99	29500	Screw, 8-32 x 3/4" (Use as required)
99	650688	Screw, 10-32 x 1 (Use as required)
	650625	Washer, Thrust
	30884	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	31845	·
		Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 106)
108	30588A	Spool, Governor

	Part Number Qt	
	29193	Ring, Retaining
	30063	Screw, 1/4-20 x 1/2"
113A	650665	Screw, 1/4-15 x 3/4"
114	34156A	Fuel Tank (Incl. 115 & 120)
115	410144B	Fuel Cap (White Plastic)(Standard)(As req.)
115	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required)
445	04040	
115	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required)
119	29774	Fuel Line (Braided 8.25") (Use as req uired)
	30705	Fuel Line (Braided 16") (Use as requi red)
	30962	Fuel Line (Braided 32") (Use as required)
	26460	Clamp, Fuel line (Use as required)
	32401	Muffler
	27930A	
	30196	* Gasket, Exhaust
		Screw, 5/16-18 x 3/4"
	26073	Washer, Flat
	650694A	Screw, 5/16-18 x 2"
	650548	Screw, 8-32 x 5/16" (Early production)
	650139	Screw, 8-32 x 1/2" (Early production)
	650542	Screw, 5/16-18 x 3/4"
	29538	Base, Engine mounting
147	650128	Screw, 10-24 x 1/2"
148	30622A	Extension, Blower housing
186	27275	Clip, Wire (Use as required)
186	29443	Clip, Fuel line (Use as required)
224	31386	Spring, Extension
	31711B	Control Bracket (Incl. 98, 99 & 226)
	610973	Terminal Assy.
	28942	Screw, 10-32 x 3/8"
	27793	Clip, Conduit
	34235	Ground Wire
	31793	Bearing, Ball
	31792	Washer, Thrust
	31855	Retainer, Bearing
	650778	Washer, Lock
	650580	Nut, Lock
		•
	29716	Screw, 1/4-28 x 7/16"
	32125	Cup, Starter
	590417	Screen, Starter cup
	650815	Washer, Belleville
	8116	Nut, Hex
	550223	Decal, Name
	33310	Decal, 5 HP Mini-Bike (Use as require d)
	31517	Decal, H.P. (5 H.P.) (Use as required)
	32173	Decal, H.P. (6 H.P.) (Use as required)
298	34346	Decal, Instruction
298B	31752	Decal, Air cleaner
299	30547A	Contact Assy., Breaker
300	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
	631828	Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A,
230	-	page 144 for breakdown)
		,
304	610689A	Magneto (Refer to Division 5, Section B, page 24 for
		breakdown)

Ref # Part Number	Qty Description
306 590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
310 33235A	* Gasket Set (Incl. items marked *)

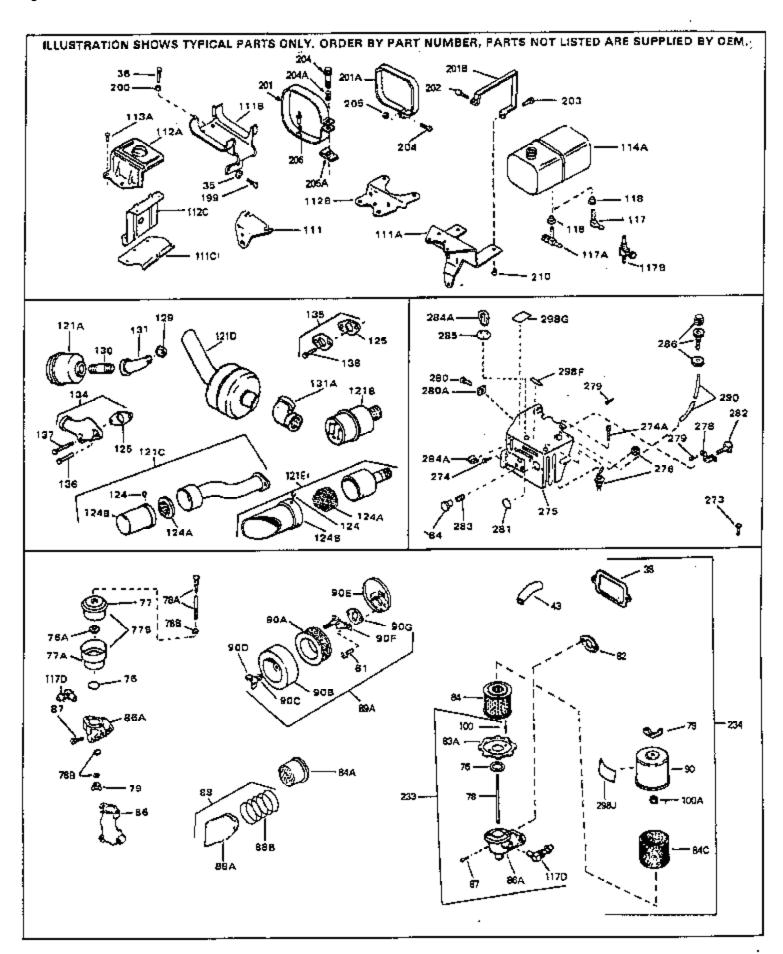

Ref #	Part Number	Qty	Description
	26073	•	Washer, Flat (Use as required)
35	650570		Washer, Flat (Use as required)
35	650691		Washer, Flat (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	28820		Screw, 10-32 x 1/2" (Use as required)
	650521		Screw, 10-32 x 1-1/8" (Use as require d)
	27272A		* Gasket, Air cleaner
	34697		Air Cleaner Elbow Assy.(Use in 730561 only.)
89A	730128		Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
			298B) (Use as req.)
111C	34167		Bracket, Lower fuel tank mtg.
	34168		Bracket, Upper fuel tank
	650665		Screw, 1/4-15 x 3/4"
121E	391026		Muffler (Incl. 124, 124A & 124B) (This spark arrester
			mufflercan be used on any model)
124A	33171		Muffler Screen (Use as required)
	33185		Cover & Tube, Muffler (Use as require d)
	650578		Screw, 8-18 x 3/8"
	27930A		* Gasket, Exhaust
	31288		Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130		Muf.Adapter Kit(Incl.125 & 138)(As re quired)
136	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
137	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
138	30196		Screw, 5/16-18 x 3/4" (Use as require d)
233	34819		Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
			730561 ass'y. only)
234	730561		Air Cleaner Kit
204	750501		(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
			(Use only on engines with an externally ventedfully
			adjustable carburetor.)
0=0	050007		,
2/3	650687		Screw, 10-32 x 5/16" (Use as required)

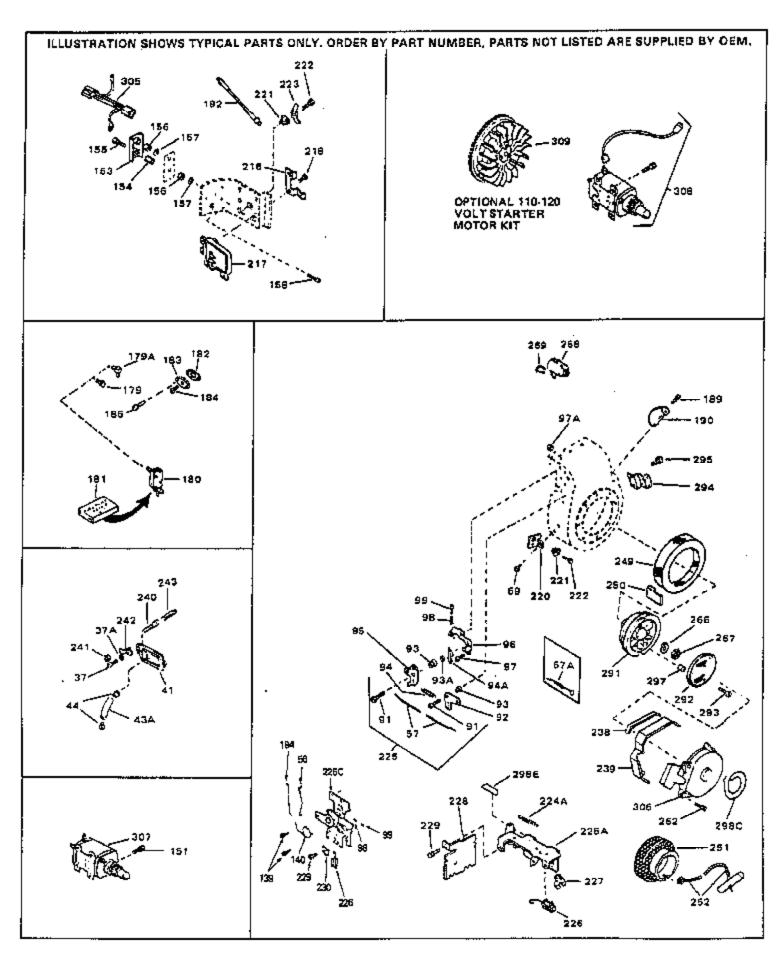

Ref #	Part Number (Qty	Description
37	650128		Screw, 10-24 x 1/2" (Use as required)
37	650597		Screw, 10-24 x 5/8" (Use as required)
37A	27261		Washer, Flat (Use as required)
41	28425		Cover, Valve spring
43A	35350		Tube, Breather
56	31710		Link, Throttle
69	29747B		Screw, 5/16-24 x 21/32"
98	28569		Compression Spring (Used with 29500 screw)(Use as
			required)
98	32924		Compression Spring (Used with 650688 screw) (Use as
			required)
98	31342		Compression Spring (Used with 650549 screw) (Use as
			required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
	29500		Screw, 8-32 x 3/4" (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
	32683A		Gasket, Fuel pump cover (Use as requi red)
	32955		Cover, Fuel pump pad (Use as required)
	9556		Plug, Pipe 1/8-27 (Use as required)
	30063		Screw, 1/4-20 x 1/2" (Use as required)
	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
	610973		Terminal Assy.
	33177		Terminal (Use as required)
	28942		Screw, 10-32 x 3/8"
	27793		Clip, Conduit
	29716		Screw, 1/4-28 x 7/16"
	650815		Washer, Belleville
	8116		Nut, Hex
	33018		Harness Assy., Adapter (Use as requir ed)
	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for
			breakdown)
308	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt
			starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)