



	Part Number Qty	
1	34761	Cylinder (C I liner)(Incl.2,3,4,184)(2-5/8")
2	27652	Pin, Dowel
	27642	Plug, Oil drain, 1/4-18
		•
	27876B	Seal, Oil
	27877A	Intake Valve (Std.) (Incl. 9)
5	27880A	Inake Valve (1/32" OS) (Incl. 9)
6	27878A	Exhaust Valve (Std.)
	27880A	Exhaust Valve (1/32" OS) (Incl. 9)
	27882	Cap, Upper valve spring
	27881	Spring, Valve
9	32581	Cap, Lower valve spring
11	31856A	Crankshaft (Incl. 12 & 13)
	29783	Pin, Crankshaft gear Used in early production. This gear is
12	25/00	serviceable ONLY when it is pinned to the crankshaft.
13	27884	Gear, Crankshaft Used in early production. This gear is
		serviceable ONLY when itis pinned to the crankshaft.
	34503	Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
14	34504	Piston, Pin & Ring Set (.010" OS)
14	34505	Piston, Pin & Ring Set (.020" OS)
	31797B	Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
	31798B	
		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	31799B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
15	34854	Ring Set (Std.) (2-5/8" Bore)
15	34855	Ring Set (.010" OS)
	34856	Ring Set (.020" OS)
	27888	•
		Ring, Piston pin retaining
	31380C	Rod Assy., Connecting (Incl. 18)
18A	30682	Bolt, Connecting rod (Early productio n)
18	650662C	Screw, Connecting rod (Late productio n)
	26073	Connecting rod bolt washer (Early pro duction)
		0 () (
	28264	Connecting rod nut (Used on early pro duction)
	33156	Camshaft
22	34034	Lifter, Valve
23	31303B	Cover, Cylinder (Incl. 24, 27 & 105)
	28427	Seal, Oil
	30684	* Gasket, Cylinder cover
27	31546	Bushing, Crankshaft
28	650451	Screw, 1/4-20 x 1"
	650599	Screw, 1/4-20 x 1-1/2"
	650489	
		Screw, 1/4-20 x 5/8"
	30939A	Cover, Cylinder head
32	28938C	* Gasket, Cylinder head
	30938A	Head, Cylinder (Incl. 3 of 36)
	33636	Resistor Spark Plug
	26073	Washer, Flat (Use as required)
	650570	Washer, Flat (Use as required)
35	650691	Washer, Flat (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
37	650128	Screw, 10-24 x 1/2" (Use as required)
	650597	Screw, 10-24 x 5/8" (Use as required)
	27896A	* Gasket, Breather cover
		HOOV HROOTOOR
39	28423	Body, Breather
39	28423 28424	Element, Breather
39 40		•

D	Part Number	011	Description
	27915A	QIY	* Gasket, Intake
	30195A		Flange, Carburetor (Incl. 79 & 80)
	30196		Screw, 5/16-18 x 3/4"
49	29918		Lockwasher
50	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used on early productio n)
52	32326A		Lever, Governor (New lever does not need 1 of Ref
			#49,51,53,54,132,133)
53	30322		Lock Nut, 8-32 (Use as required)
54	29916		Clamp, Governor lever (Use as require d)
55	30205		Bracket, Adjusting
	30824		Link, Throttle
	29216		Locknut, 10-32
	29752		Nut & Lockwasher, 1/4-28
	650572		Screw, 1/4-28 x 1-1/8"
	29826 29642		Screw, 10-32 x 3/4" Ring, Retaining
	30699C		Rod Assy., Governor (Incl. 64 & 65)
	30699B		Rod Assy., Governor (This one piece gov. rod is no longer
			used. It is replaced by 30699C assy., Ref.#63A)
C1	30700		
	650494		Yoke, Governor Screw, 6-40 x 5/16"
	34012		Dipstick (Incl. 68)
	29673		* Gasket, Dipstick
	29747B		Screw, 5/16-24 x 21/32"
	32158E		Blower Hsg. (For elec.starter)(Incl.1 89,190)
71	33876		Gasket, Stator
	31461		Bushing, Crankshaft
	29536		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
	30196 28820		Screw, 5/16-18 x 3/4" (Use as require d) Screw, 10-32 x 1/2" (Use as required)
	650521		Screw, $10-32 \times 1/2$ (Use as required) Screw, $10-32 \times 1-1/8$ " (Use as required)
	650152		Screw, 8-32 x 3/8"
	27272A		* Gasket, Air cleaner
	31708		Bracket, Air cleaner
85	31715		Body, Air cleaner
89	730127		Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
			(Use as required)
98	28569		Compression Spring (Used with 29500 screw)(Use as
			required)
QR	32924		Compression Spring (Used with 650688 screw) (Use as
50			required)
00	24242		
90	31342		Compression Spring (Used with 650549 screw) (Use as required)
	650549		Screw, 5-40 x 7/16" (Use as required)
	29500		Screw, 8-32 x 3/4" (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
	650625 30884		Washer, Thrust
	30884 31843A		Key, Flywheel Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
	-		,

	Part Number		scription
	30591	Ge	ear Assy., Governor (Incl. 106)
108	30588A	Spo	ool, Governor
109	29193	•	ng, Retaining
	30063		rew, 1/4-20 x 1/2"
	410144B		el Cap (White Plastic)(Standard)(As req.)
115	33032		el Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			juired)
115	34210	-	el Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
	01210		required)
119	29774		el Line (Braided 8.25") (Use as req uired)
119	30705	Fue	el Line (Braided 16") (Use as requi red)
119	30962	Fue	el Line (Braided 32") (Use as requi red)
	26460		amp, Fuel line (Use as required)
121	32401	Mu	uffler
	27930A	* G	Gasket, Exhaust
	30196		rew, 5/16-18 x 3/4"
	26073		asher, Flat
	650694A		rew, 5/16-18 x 2"
	650548		rew, 8-32 x 5/16" (Early production)
	650139		rew, 8-32 x 1/2" (Early production)
	650542	Scr	rew, 5/16-18 x 3/4"
	29538		se, Engine mounting
147	650128	Scr	rew, 10-24 x 1/2"
	30622A	Ext	tension, Blower housing
186	27275	Clip	p, Wire (Use as required)
	29443		p, Fuel line (Use as required)
	27276	Co	ver, Spark Plug
	610973	Ter	rminal Assy.
	28942		rew, 10-32 x 3/8"
	27793		p, Conduit
	34235		ound Wire
	29716		rew, 1/4-28 x 7/16"
	32125	Cu	ıp, Starter
	590417		reen, Starter cup
	650815		asher, Belleville
	8116		it, Hex
	34346		cal, Instruction
	550223		cal, Name
	33310		cal, 5 HP Mini-Bike (Use as require d)
	31517		cal, H.P. (5 H.P.) (Use as required)
	32173		cal, H.P. (6 H.P.) (Use as required)
	30547A		ntact Assy., Breaker
	30548B		ndenser
	631021		et Needle, Seat & Clip Assy.
303	631824		rburetor (Incl. 75 & 301) (Refer to Division 5, Section A, ge 206for breakdown)
304	610689A		agneto (Refer to Division 5, Section B, page 24 for eakdown)
306	590420		wind Starter (Refer to Division 5, Section C, page 25 for eakdown)
310	33235A	* G	Gasket Set (Incl. items marked *)

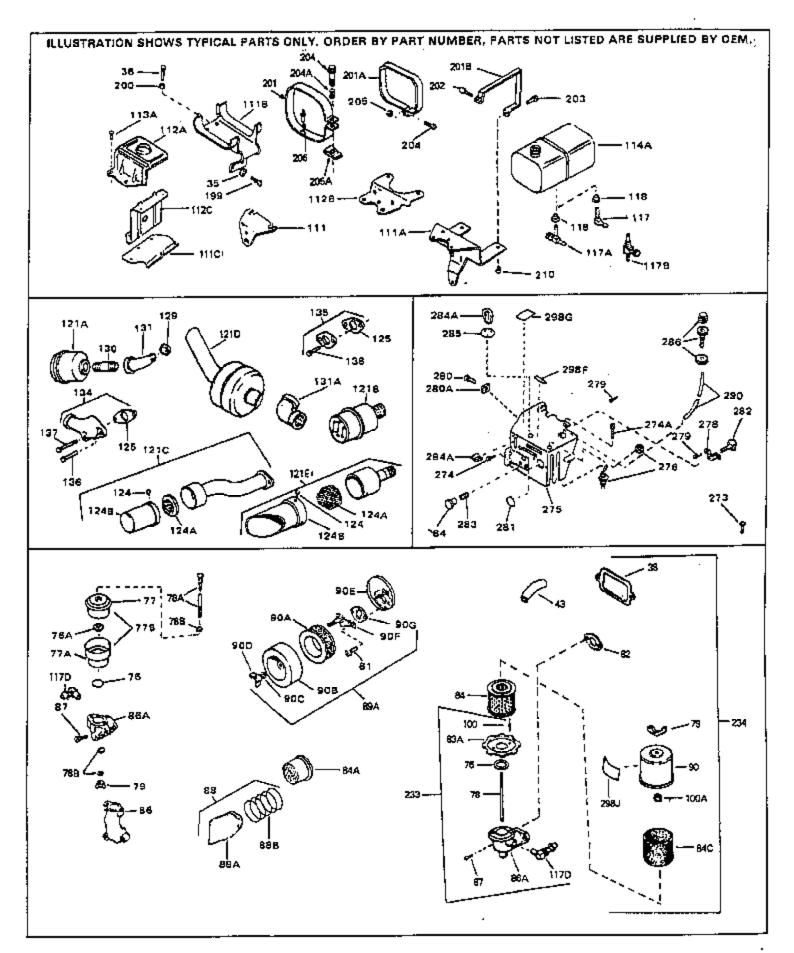

Ref #	Part Number C	ty Description
35	26073	Washer, Flat (Use as required)
35	650570	Washer, Flat (Use as required)
35	650691	Washer, Flat (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A	Screw, 5/16-18 x 2" (Use as required)
38	27896A	* Gasket, Breather cover
43	32447	Tube, Breather
81	30196	Screw, 5/16-18 x 3/4" (Use as require d)
81	28820	Screw, 10-32 x 1/2" (Use as required)
81	650521	Screw, 10-32 x 1-1/8" (Use as require d)
82	27272A	* Gasket, Air cleaner
84A	31700	Element, Air cleaner
86A	34697	Air Cleaner Elbow Assy.(Use in 730561 only.)
89A	730128	Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
		298B) (Use as req.)
111B	34823	Bracket, Lower fuel tank
	31977	Fuel Tank (Incl. 115)
	28584	Fitting, Fuel strainer & elbow
	391026	Muffler (Incl. 124, 124A & 124B) (This spark arrester
	391020	mufflercan be used on any model)
		• •
	33171	Muffler Screen (Use as required)
	33185	Cover & Tube, Muffler (Use as require d)
	650578	Screw, 8-18 x 3/8"
	27930A	* Gasket, Exhaust
	31288	Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130	Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	29212	Screw, 1/4-28 x 7/16"
	650570	Washer, Flat
	31979	Strap, Fuel tank
	650451	Screw, 1/4-20 x 1"
	650456	Nut, 1/4-20
233	34819	Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
		730561 ass'y. only)
234	730561	Air Cleaner Kit
201		(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
		(Use only on engines with an externally ventedfully
		adjustable carburetor.)
	050007	• •
273	650687	Screw, 10-32 x 5/16" (Use as required)

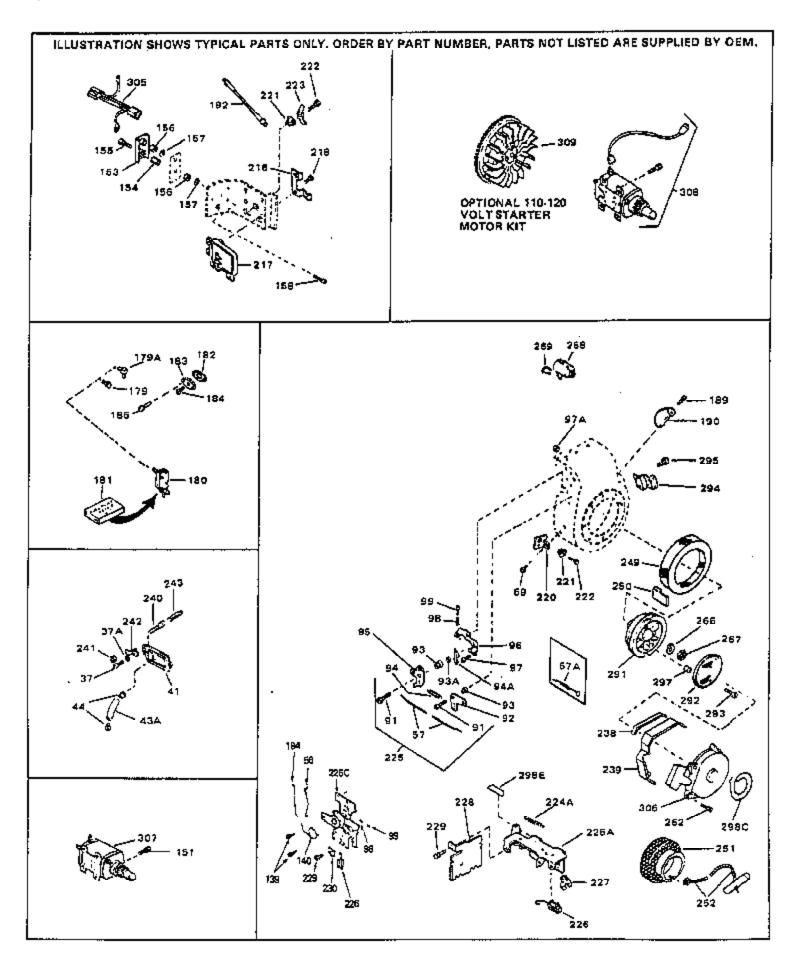

Ref #	Part Number	Qty	Description
37	650128		Screw, 10-24 x 1/2" (Use as required)
37	650597		Screw, 10-24 x 5/8" (Use as required)
37A	27261		Washer, Flat (Use as required)
41	28425		Cover, Valve spring
	32446		Grommet, Breather tube
	30824		Link, Throttle
	29747B		Screw, 5/16-24 x 21/32"
	28569		Compression Spring (Used with 29500 screw)(Use as
50	20003		required)
98	32924		Compression Spring (Used with 650688 screw) (Use as
			required)
98	31342		Compression Spring (Used with 650549 screw) (Use as required)
	650549		Screw, 5-40 x 7/16" (Use as required)
	29500		Screw, 8-32 x 3/4" (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
182	32683A		Gasket, Fuel pump cover (Use as requi red)
183	32955		Cover, Fuel pump pad (Use as required)
184	9556		Plug, Pipe 1/8-27 (Use as required)
185	30063		Screw, 1/4-20 x 1/2" (Use as required)
189	650736		Screw, 10-16 x 3/8"
	33013		Cover, Starter bubble
	30826		Spring, Extension
	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
	33110A		Control Bracket (Incl. 224A & 226)
	610973		Terminal Assy.
	33177		Terminal (Use as required)
	28942		Screw, 10-32 x 3/8"
	27793		Clip, Conduit
			•
	29716		Screw, 1/4-28 x 7/16"
	650815		Washer, Belleville
	8116		Nut, Hex
	33018		Harness Assy., Adapter (Use as requir ed)
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
308	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)