



		_	
		Qty	Description Secription
	34761		Cylinder (C I liner)(Incl.2,3,4,184)(2-5/8")
	27652		Pin, Dowel
	27642		Plug, Oil drain, 1/4-18
	27876B		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
5	32784		Intake Valve (1/32" OS) (Incl. 9)
6	27878A		Exhaust Valve (Std.)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7	27882		Cap, Upper valve spring
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	31856A		Crankshaft (Incl. 12 & 13)
	29783		Pin, Crankshaft gear Used in early production. This gear is
	25.65		serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is
440	0.47070		serviceable ONLY when itis pinned to the crankshaft.
	31797B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
	31798B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	31799B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34503		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34504		Piston, Pin & Ring Set (.010" OS)
	34505		Piston, Pin & Ring Set (.020" OS)
15	34854		Ring Set (Std.) (2-5/8" Bore)
15	34855		Ring Set (.010" OS)
15	34856		Ring Set (.020" OS)
16	27888		Ring, Piston pin retaining
17	34750		Rod Assy., Connecting (Incl. 18)
	30682		Bolt, Connecting rod (Early productio n)
	650662C		Screw, Connecting rod (Late productio n)
	26073		Connecting rod bolt washer (Early pro duction)
	28264		Connecting rod nut (Used on early pro duction)
	33156		Camshaft
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 27 & 105)
	28427		Seal, Oil
	30684		* Gasket, Cylinder cover
	31546		Bushing, Crankshaft
	650451		Screw, 1/4-20 x 1"
	650599		Screw, 1/4-20 x 1-1/2"
	650489		Screw, 1/4-20 x 5/8"
	30939A		Cover, Cylinder head
32	28938C		* Gasket, Cylinder head
33	30938A		Head, Cylinder (Incl. 3 of 36)
34	33636		Resistor Spark Plug
35	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650128 650507		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
43	32447		Tube, Breather

Dof #	Dort Ni wala ay	O+ -	Description
	Part Number	Qty	Description * Cooket Intoke
	27915A		* Gasket, Intake
	34712		Flange, Carburetor (Incl. 60)
	30196		Screw, 5/16-18 x 3/4"
	29918		Lockwasher
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used on early productio n)
52	32326A		Lever, Governor (New lever does not need 1 of Ref
			#49,51,53,54,132,133)
53	30322		Lock Nut, 8-32 (Use as required)
	29916		Clamp, Governor lever (Use as required)
	30205		
			Bracket, Adjusting
	31710		Link, Throttle
	29216		Locknut, 10-32
	650517		Screw, 1/4-20 x 13/16"
	29826		Screw, 10-32 x 3/4"
	29642		Ring, Retaining
	30699C		Rod Assy., Governor (Incl. 64 & 65)
63	30699B		Rod Assy., Governor (This one piece gov. rod is no longer
			used. It is replaced by 30699C assy., Ref.#63A)
64	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	34012		Dipstick (Incl. 68)
	29673		* Gasket, Dipstick
	29747B		Screw, 5/16-24 x 21/32"
	32158E		Blower Hsg. (For elec.starter)(Incl.1 89,190)
	33876		Gasket, Stator
	31461		Bushing, Crankshaft
	29536		-
	650561		Baffle, Blower housing Screw, 1/4-20 x 5/8"
	31688A		·
			* Gasket, Carburetor
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	28820		Screw, 10-32 x 1/2" (Use as required)
	650521		Screw, 10-32 x 1-1/8" (Use as require d)
	650152		Screw, 8-32 x 3/8"
	27272A		* Gasket, Air cleaner
	31708		Bracket, Air cleaner
	31715		Body, Air cleaner
89	730127		Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
			(Use as required)
98	28569		Compression Spring (Used with 29500 screw)(Use as
			required)
98	32924		Compression Spring (Used with 650688 screw) (Use as
			required)
98	31342		Compression Spring (Used with 650549 screw) (Use as
50	010-12		required)
			required)
99	29500		Screw, 8-32 x 3/4" (Use as required)
99	650688		Screw, 10-32 x 1 (Use as required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
	650625		Washer, Thrust
	30884		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
	30591		Gear Assy., Governor (Incl. 106)
107	00001		Joan Assy., Jovernor (Ino. 100)

Ref #	Part Number Qty	Description
	30588A	Spool, Governor
	29193	Ring, Retaining
	30063	Screw, 1/4-20 x 1/2"
	410144B	Fuel Cap (White Plastic)(Standard)(As req.)
	33032	, , , , , , , , , , , , , , , , , ,
110	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required)
115	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required)
110	29774	Fuel Line (Braided 8.25") (Use as req uired)
	30705	, , , , , , , , , , , , , , , , , , , ,
		Fuel Line (Braided 16") (Use as required)
	30962	Fuel Line (Braided 32") (Use as required)
	26460	Clamp, Fuel line (Use as required)
	32401	Muffler
	27930A	* Gasket, Exhaust
	30196	Screw, 5/16-18 x 3/4"
127	26073	Washer, Flat
128	650694A	Screw, 5/16-18 x 2"
132	650548	Screw, 8-32 x 5/16" (Early production)
132	650139	Screw, 8-32 x 1/2" (Early production)
144	650542	Screw, 5/16-18 x 3/4"
146	29538	Base, Engine mounting
	650128	Screw, 10-24 x 1/2"
148	30622A	Extension, Blower housing
	27275	Clip, Wire (Use as required)
	29443	Clip, Fuel line (Use as required)
	27276	Cover, Spark Plug
	31386	Spring, Extension
	31711B	Control Bracket (Incl. 98, 99 & 226)
	610973	Terminal Assy.
	28942	Screw, 10-32 x 3/8"
	27793	Clip, Conduit
	34235	Ground Wire
	29716	Screw, 1/4-28 x 7/16"
	32125	Cup, Starter
	590417	Screen, Starter cup
	650815	Washer, Belleville
	8116	Nut, Hex
	34768	Decal, Name
	33310	Decal, 5 HP Mini-Bike (Use as require d)
	31517	Decal, H.P. (5 H.P.) (Use as required)
	32173	
		Decal, H.P. (6 H.P.) (Use as required)
	34346	Decal, Instruction
	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
303	632213	Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A,
		page 176 for breakdown)
304	610689A	Magneto (Refer to Division 5, Section B, page 24 for
		breakdown)
306	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
		breakdown)
310	33235A	* Gasket Set (Incl. items marked *)

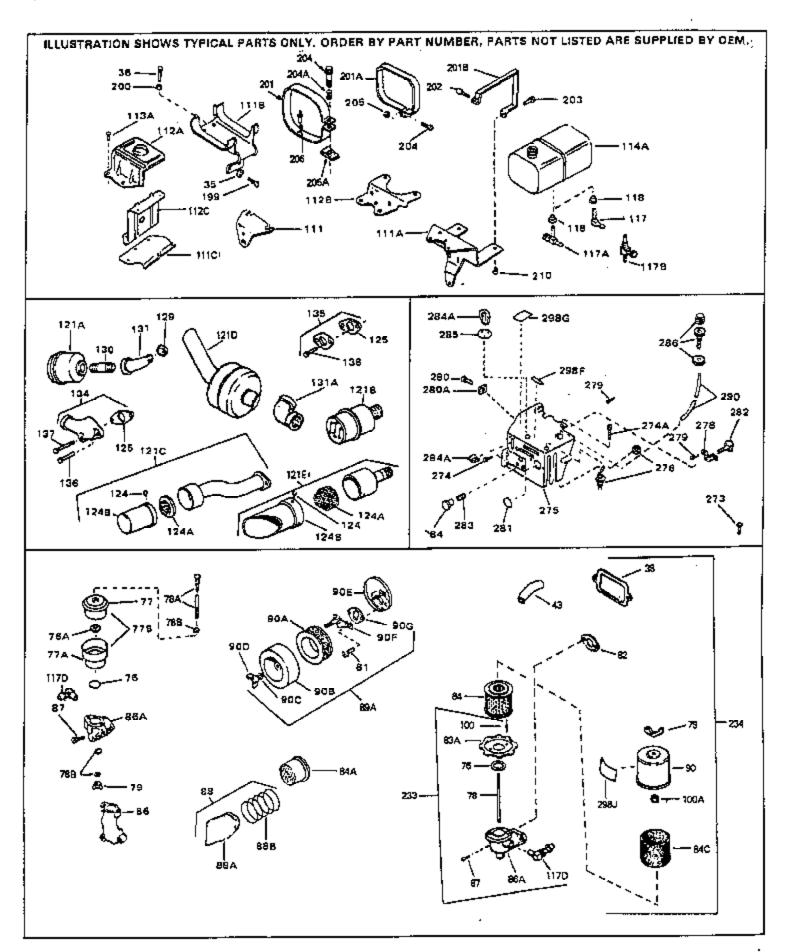

Ref #	Part Number	Qty	Description
	26073		Washer, Flat (Use as required)
35	650570		Washer, Flat (Use as required)
35	650691		Washer, Flat (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
38	27896A		* Gasket, Breather cover
43	32447		Tube, Breather
81	30196		Screw, 5/16-18 x 3/4" (Use as require d)
81	28820		Screw, 10-32 x 1/2" (Use as required)
81	650521		Screw, 10-32 x 1-1/8" (Use as require d)
82	27272A		* Gasket, Air cleaner
84A	31700		Element, Air cleaner
86A	34697		Air Cleaner Elbow Assy.(Use in 730561 only.)
89A	730128		Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
			298B) (Use as req.)
111B	34823		Bracket, Lower fuel tank
	31977		Fuel Tank (Incl. 115)
	28584		Fitting, Fuel strainer & elbow
	391026		Muffler (Incl. 124, 124A & 124B) (This spark arrester
			mufflercan be used on any model)
1241	33171		Muffler Screen (Use as required)
	33185		Cover & Tube, Muffler (Use as require d)
	650578		Screw, 8-18 x 3/8"
	27930A		* Gasket, Exhaust
	31288		Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130		Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29212		Screw, 1/4-28 x 7/16"
	650570		Washer, Flat
	31979		Strap, Fuel tank
	650451		Screw, 1/4-20 x 1"
	650456		Nut, 1/4-20
	34819		Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
			730561 ass'y. only)
234	730561		Air Cleaner Kit
201	700001		(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
			(Use only on engines with an externally ventedfully
			adjustable carburetor.)
273	650687		Screw, 10-32 x 5/16" (Use as required)
210			colon, to or horizon (coo do roquirou)

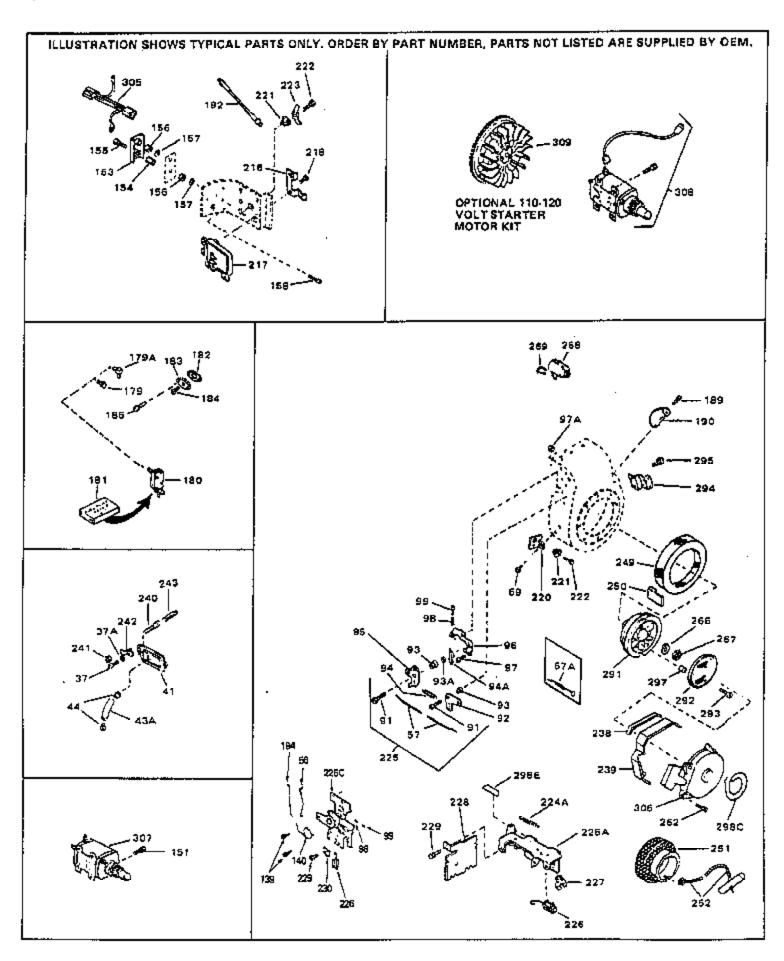

	Part Number	Qty	Description
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
37A	27261		Washer, Flat (Use as required)
41	28425		Cover, Valve spring
44	32446		Grommet, Breather tube
56	31710		Link, Throttle
69	29747B		Screw, 5/16-24 x 21/32"
	28569		Compression Spring (Used with 29500 screw)(Use as
			required)
	00004		•
98	32924		Compression Spring (Used with 650688 screw) (Use as
			required)
98	31342		Compression Spring (Used with 650549 screw) (Use as
30	010-12		required)
			required)
99	29500		Screw, 8-32 x 3/4" (Use as required)
99	650688		Screw, 10-32 x 1 (Use as required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
182	32683A		Gasket, Fuel pump cover (Use as required)
183	32955		Cover, Fuel pump pad (Use as required)
184	9556		Plug, Pipe 1/8-27 (Use as required)
	30063		Screw, 1/4-20 x 1/2" (Use as required)
	650760		Screw, 8-32 x 3/8"
	33013		Cover, Starter bubble
	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
	610973		Terminal Assy.
	33177		Terminal (Use as required)
	28942		Screw, 10-32 x 3/8"
	27793		Clip, Conduit
	29716		Screw, 1/4-28 x 7/16"
	650815		Washer, Belleville
	8116		Nut, Hex
	33018		Harness Assy., Adapter (Use as required)
	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for
300	390420		
			breakdown)
308	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt
			starter motor kit may have been added to this engine. This
			can be added only if cylinder has drilled and tapped starter
			mounting bosses and a ring gear flywheel has been added
			(see #309). Refer to service number stamped on end cap of
			motor,
222	000444		
309	30811A		Flywheel (Ring gear flywheel requiredon engines using
			110-120 volt starter motor kits listed above.)