



			Description
1	34761	С	Cylinder (C I liner)(Incl.2,3,4,184)(2-5/8")
2	27652	Р	Pin, Dowel
3	27642	Р	Plug, Oil drain, 1/4-18
	27876B		Seal, Oil
	32783		ntake Valve (Std.) (Incl. 9)
	32784		ntake Valve (1/32" OS) (Incl. 9)
	27878A		
			xhaust Valve (Std.)
	27880A		xhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	27881	S	Spring, Valve
9	32581	С	Cap, Lower valve spring
11	31860	С	Crankshaft (Incl. 12 & 13)
12	29783		Pin, Crankshaft gear Used in early production. This gear is
			erviceable ONLY when itis pinned to the crankshaft.
13	27884	G	Gear, Crankshaft Used in early production. This gear is
	21001		erviceable ONLY when it is pinned to the crankshaft.
14A	31797B	Р	Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
	31798B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	31799B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34503		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34504		Piston, Pin & Ring Set (.010" OS)
	34505		Piston, Pin & Ring Set (.020" OS)
	34854		Ring Set (Std.) (2-5/8" Bore)
15	34855	R	Ring Set (.010" OS)
15	34856		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	31380C		Rod Assy., Connecting (Incl. 18)
	650662C		
			Screw, Connecting rod (Late production)
	30682		Bolt, Connecting rod (Early productio n)
	26073		Connecting rod bolt washer (Early pro duction)
	28264		Connecting rod nut (Used on early pro duction)
21	33156	С	Camshaft
22	34034	Li	ifter, Valve
23	31451A	С	Cylinder Cover (Incl.24, 105, 246, 24 7 & 248)
	28460		Seal, Oil
	30684		Gasket, Cylinder cover
	650451		Screw, 1/4-20 x 1"
			•
	650599		Screw, 1/4-20 x 1-1/2"
	650489		Screw, 1/4-20 x 5/8"
	30939A		Cover, Cylinder head
	28938C	*	Gasket, Cylinder head
33	30938A	Н	lead, Cylinder (Incl. 3 of 36)
	33636		Resistor Spark Plug
	26073		Vasher, Flat (Use as required)
	650570		Vasher, Flat (Use as required)
	650691		Vasher, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	S	Screw, 5/16-18 x 2" (Use as required)
37	650128	S	Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	27896A		Gasket, Breather cover
			-
	28423		Body, Breather
	28424		element, Breather
	28425	<u>с</u>	Cover, Valve spring
	32447	Т	Gasket, Intake

46 34712 48 30196 49 29918		Flange, Carburetor (Incl. 60)
	S	
49 29918	-	Screw, 5/16-18 x 3/4"
	L	_ockwasher
50 650548	S	Screw, 8-32 x 5/16"
51 30319		Rivet, Split (Used on early productio n)
52 33454		Lever Assy., Governor
53 30322		Lock Nut, 8-32 (Use as required)
54 29916		Clamp, Governor lever (Use as require d)
56 34662		Link, Throttle
58 29216	L	_ocknut, 10-32
60 650517	S	Screw, 1/4-20 x 13/16"
61 29826		Screw, 10-32 x 3/4"
62 29642		Ring, Retaining
63A 30699C		Rod Assy., Governor (Incl. 64 & 65)
63 30699B		Rod Assy., Governor (This one piece gov. rod is no longer
	U	used. It is replaced by 30699C assy., Ref.#63A)
64 30700	~	Yoke, Governor
65 650494		Screw, 6-40 x 5/16"
66A 31297		
		Dipstick (Incl. 68)
68 29673		Gasket, Dipstick
69 29747B		Screw, 5/16-24 x 21/32"
70 32158E	E	Blower Hsg. (For elec.starter)(Incl.1 89,190)
71 33876	C	Gasket, Stator
72 31461		Bushing, Crankshaft
73 29536		Baffle, Blower housing
74 650561		Screw, 1/4-20 x 5/8"
75 31688A		Gasket, Carburetor
81 30196		Screw, 5/16-18 x 3/4" (Use as require d)
81 28820	S	Screw, 10-32 x 1/2" (Use as required)
81 650521	S	Screw, 10-32 x 1-1/8" (Use as require d)
82 27272A	*	Gasket, Air cleaner
89 730127		Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
		Use as required)
	(
98 32924	C	Compression Spring (Used with 650688 screw) (Use as
		equired)
98 31342	C	Compression Spring (Used with 650549 screw) (Use as
	re	required)
00,00500		
98 28569		Compression Spring (Used with 29500 screw)(Use as
	re	required)
99 650549	c	Scrow, $5-40 \times 7/16$ " (Liso as required)
		Screw, 5-40 x 7/16" (Use as required)
99 29500		Screw, 8-32 x 3/4" (Use as required)
99 650688		Screw, 10-32 x 1 (Use as required)
101 650625		Nasher, Thrust
102 30884	k	Key, Flywheel
103 31843A		Bracket, Governor gear
104 650836		Screw, 10-24 x 1/2"
105 31845		Shaft, Mechanical governor
106 30590A		Nasher, Flat
107 30591		Gear Assy., Governor (Incl. 106)
108 30588A		Spool, Governor
109 29193	F	Ring, Retaining
111D 34158		Bracket, Lower fuel tank
		Plate, Upper fuel tank mtg.
112 34159	•	
112 34159 113A 650665		Screw 1/4-15 x 3/4"
112 34159 113A 650665 113 650561	S	Screw, 1/4-15 x 3/4" Screw, 1/4-20 x 5/8"

Ref #	Part Number	Qty	Description
114	34186A		Fuel Tank (Incl. 115 & 120)
115	410144B		Fuel Cap (White Plastic)(Standard)(As req.)
115	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required)
119	29774		Fuel Line (Braided 8.25") (Use as req uired)
	30705		Fuel Line (Braided 16") (Use as required)
	30962		Fuel Line (Braided 32") (Use as requi red)
	26460		Clamp, Fuel line (Use as required)
	27930A		* Gasket, Exhaust
	650548		Screw, 8-32 x 5/16" (Early production)
	650139		Screw, 8-32 x 1/2" (Early production)
	650542		Screw, 5/16-18 x 3/4"
	29538		Base, Engine mounting
	650128		Screw, 10-24 x 1/2"
	30622A		Extension, Blower housing
	30747		Clip, Shorting
	650890		Lockwasher
	27275		Clip, Wire (Use as required)
	29443		Clip, Fuel line (Use as required)
	27276		Cover, Spark Plug
	31793		Bearing, Ball
	31792		Washer, Thrust
	31855		Retainer, Bearing
	650778		Washer, Lock
	650580		Nut, Lock
	650815		Washer, Belleville
	8116		Nut, Hex
	33962		Decal, Control
	34346		Decal, Instruction
	34768		Decal, Name
	33310		Decal, 5 HP Mini-Bike (Use as require d)
	31517		Decal, H.P. (5 H.P.) (Use as required)
	32173		Decal, H.P. (6 H.P.) (Use as required)
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
	632213		Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 176 for breakdown)
304	610689A		Magneto (Refer to Division 5, Section B, page 24 for breakdown)
310	33235A		* Gasket Set (Incl. items marked *)

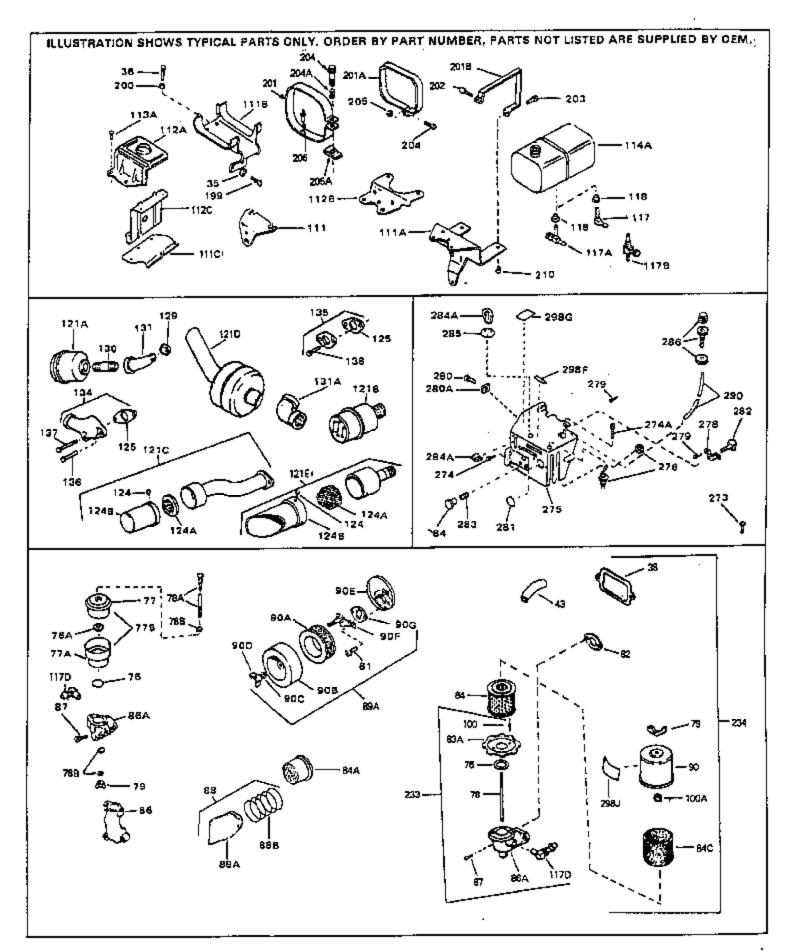

		Description
35	26073	Washer, Flat (Use as required)
35	650570	Washer, Flat (Use as required)
35	650691	Washer, Flat (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	32447	Tube, Breather
	34698A	Gasket, Air cleaner elbow
	650826	Stud, 1/4-20
	650513	•
		Nut, Wing
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	28820	Screw, 10-32 x 1/2" (Use as required)
	650521	Screw, 10-32 x 1-1/8" (Use as require d)
	27272A	* Gasket, Air cleaner
	34699	Bracket, Air cleaner
	34783	Filter, Pre-Air
	34782	Element, Air cleaner
	34780	Elbow, Air cleaner
86A	34697	Air Cleaner Elbow Assy.(Use in 730561 only.)
87	650163	Screw, 10-32 x 7/8"
89A	730128	Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
		298B) (Use as req.)
00	2/701	Cover Air deaper
	34781	Cover, Air cleaner
100	CE000E	Pop Rivet (Purchase locally) (1/8" di a.)
	650825	Nut & Lockwasher, 1/4-20
	650665	Screw, 1/4-15 x 3/4"
	30675	Fitting, Breather tube
	29633	Muffler
121E	391026	Muffler (Incl. 124, 124A & 124B) (This spark arrester
		mufflercan be used on any model)
124A	33171	Muffler Screen (Use as required)
	33185	Cover & Tube, Muffler (Use as require d)
	650578	Screw, 8-18 x 3/8"
	27930A	* Gasket, Exhaust
	32862	
	30244	Nut, Conduit (1/4" thick)
		Nipple, Pipe (2.5")
	30209	Elbow, Exhaust (45 degree)
	31288	Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130	Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
233	34819	Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
		730561 ass'y. only)
25/	730561	Air Cleaner Kit
204	750501	
		(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29)
		(Use only on engines with an externally ventedfully
		adjustable carburetor.)
273	650687	Screw, 10-32 x 5/16" (Use as required)
	32410	Knob, Speed control
	34704	Decal, Air cleaner
2000		

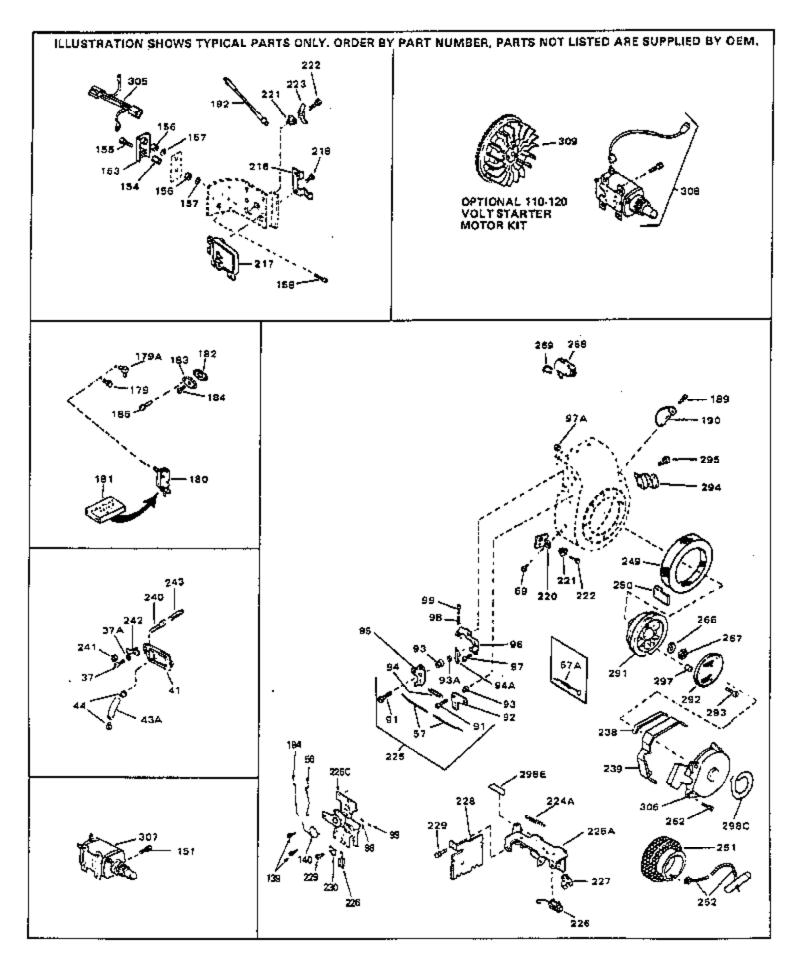

	Part Number	Qty	Description
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	27261		Washer, Flat (Use as required)
	28425		Cover, Valve spring
	32446		Grommet, Breather tube
	34662		Link, Throttle
	29747B		Screw, 5/16-24 x 21/32"
98	32924		Compression Spring (Used with 650688 screw) (Use as required)
98	31342		Compression Spring (Used with 650549 screw) (Use as required)
98	28569		Compression Spring (Used with 29500 screw)(Use as required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
	29500		Screw, 8-32 x 3/4" (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
	650821		Screw, 10-32 x 1/2"
140	34663		Spring, Speed control
182	32683A		Gasket, Fuel pump cover (Use as required)
183	32955		Cover, Fuel pump pad (Use as required)
184	9556		Plug, Pipe 1/8-27 (Use as required)
	30063		Screw, 1/4-20 x 1/2" (Use as required)
	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
	34677		Control Bracket (Incl. 98, 99, 140 & 226)
	33177		Terminal (Use as required)
	28301		Pulley, Rope starter
	590343		Rope Assy., Starter
	650815		Washer, Belleville
	8116		Nut, Hex
	33018		Harness Assy., Adapter (Use as requir ed)
	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)