



		_	
		Qty	
	34761		Cylinder (C I liner)(Incl.2,3,4,184)(2-5/8")
	27652		Pin, Dowel
	27642		Plug, Oil drain, 1/4-18
	27876B		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7	27882		Cap, Upper valve spring
8	27881		Spring, Valve
9	32581		Cap, Lower valve spring
11	31791		Crankshaft (Incl. 12 & 13)
12	29783		Pin, Crankshaft gear Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
	31797B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
14A	31798B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	31799B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14	34503		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
14	34504		Piston, Pin & Ring Set (.010" OS)
14	34505		Piston, Pin & Ring Set (.020" OS)
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	31380C		Rod Assy., Connecting (Incl. 18)
	650662C		Screw, Connecting rod (Late productio n)
	30682		Bolt, Connecting rod (Early productio n)
	26073		Connecting rod bolt washer (Early production)
	28264		Connecting rod bolt washer (Larry pro duction) Connecting rod nut (Used on early pro duction)
			· · · · · · · · · · · · · · · · · · ·
	33156		Camshaft
	34034		Lifter, Valve
	31451A		Cylinder Cover (Incl.24, 105, 246, 24 7 & 248)
	28460		Seal, Oil
	30684		* Gasket, Cylinder cover
	650451		Screw, 1/4-20 x 1"
	650599		Screw, 1/4-20 x 1-1/2"
	650489		Screw, 1/4-20 x 5/8"
	30939A		Cover, Cylinder head
	28938C		* Gasket, Cylinder head
	30938A		Head, Cylinder (Incl. 3 of 36)
	33636		Resistor Spark Plug
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
35	650691		Washer, Flat (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	32447		Tube, Breather
	27915A		* Gasket, Intake
-10	2.0.0/1		Caonor, mano

	Part Number Qty	
	34712	Flange, Carburetor (Incl. 60)
48	30196	Screw, 5/16-18 x 3/4"
49	29918	Lockwasher
50	650548	Screw, 8-32 x 5/16"
51	30319	Rivet, Split (Used on early productio n)
52	33454	Lever Assy., Governor
53	30322	Lock Nut, 8-32 (Use as required)
	29916	Clamp, Governor lever (Use as require d)
	34662	Link, Throttle
	29216	Locknut, 10-32
	650517	Screw, 1/4-20 x 13/16"
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
	30699C	Rod Assy., Governor (Incl. 64 & 65)
	30699B	Rod Assy., Governor (This one piece gov. rod is no longer
00	300000	used. It is replaced by 30699C assy., Ref.#63A)
64	30700	Yoke, Governor
65	650494	Screw, 6-40 x 5/16"
66A	31297	Dipstick (Incl. 68)
68	29673	* Gasket, Dipstick
69	29747B	Screw, 5/16-24 x 21/32"
70	32158E	Blower Hsg. (For elec.starter)(Incl.1 89,190)
71	33876	Gasket, Stator
	31461	Bushing, Crankshaft
	29536	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	28820	Screw, 10-32 x 1/2" (Use as required)
	650521	Screw, 10-32 x 1-1/8" (Use as require d)
	27272A	* Gasket, Air cleaner
	730127	Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
30	130121	(Use as required)
98	32924	Compression Spring (Used with 650688 screw) (Use as required)
98	31342	Compression Spring (Used with 650549 screw) (Use as required)
98	28569	Compression Spring (Used with 29500 screw)(Use as
		required)
	650549	Screw, 5-40 x 7/16" (Use as required)
	29500	Screw, 8-32 x 3/4" (Use as required)
	650688	Screw, 10-32 x 1 (Use as required)
	650625	Washer, Thrust
	30884	Key, Flywheel
103	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
105	31845	Shaft, Mechanical governor
106	30590A	Washer, Flat
107	30591	Gear Assy., Governor (Incl. 106)
	30588A	Spool, Governor
	29193	Ring, Retaining
	34158	Bracket, Lower fuel tank
	34159	Plate, Upper fuel tank mtg.
	650665	Screw, 1/4-15 x 3/4"
	650561	Screw, 1/4-20 x 5/8"
		,

Ref #	Part Number	Qty	Description
114	34186A	ĺ	Fuel Tank (Incl. 115 & 120)
	410144B		Fuel Cap (White Plastic)(Standard)(As req.)
	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
_			required)
	0.404.0		. ,
115	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required)
119	29774		Fuel Line (Braided 8.25") (Use as req uired)
	30705		Fuel Line (Braided 16") (Use as requi red)
	30962		Fuel Line (Braided 32") (Use as required)
	26460		Clamp, Fuel line (Use as required)
	27930A		* Gasket, Exhaust
	650548		Screw, 8-32 x 5/16" (Early production)
	650139		Screw, 8-32 x 1/2" (Early production)
	650542		Screw, 5/16-18 x 3/4"
	29538		Base, Engine mounting
	650128		Screw, 10-24 x 1/2"
	30622A		Extension, Blower housing
	30747		Clip, Shorting
	650890		Lockwasher
			Clip, Wire (Use as required)
	27275		
	29443		Clip, Fuel line (Use as required)
	27276		Cover, Spark Plug
	31793		Bearing, Ball
	31792		Washer, Thrust
	31855		Retainer, Bearing
	650778		Washer, Lock
	650580		Nut, Lock
	650815		Washer, Belleville
	8116		Nut, Hex
	33962		Decal, Control
	34346		Decal, Instruction
	34768		Decal, Name
	33310		Decal, 5 HP Mini-Bike (Use as require d)
	31517		Decal, H.P. (5 H.P.) (Use as required)
	32173		Decal, H.P. (6 H.P.) (Use as required)
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
303	632213		Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A,
			page 176 for breakdown)
301	610689A		Magneto (Refer to Division 5, Section B, page 24 for
304	010000/1		breakdown)
			•
310	33235A		* Gasket Set (Incl. items marked *)

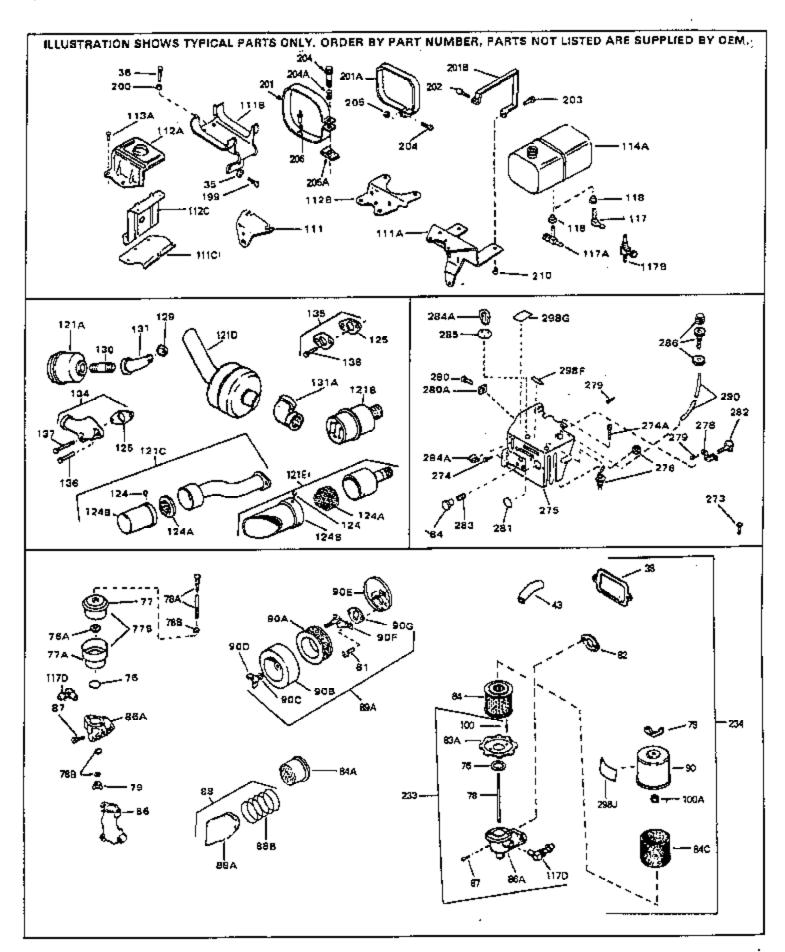

	Dort Number	Ω ι-	Description
	Part Number	Qty	Description Weeker Flot (Use or required)
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
38	27896A		* Gasket, Breather cover
43	32447		Tube, Breather
76	34698A		Gasket, Air cleaner elbow
78	650826		Stud, 1/4-20
79	650513		Nut, Wing
81	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	28820		Screw, 10-32 x 1/2" (Use as required)
	650521		Screw, 10-32 x 1-1/8" (Use as require d)
	27272A		* Gasket, Air cleaner
	34699		Bracket, Air cleaner
	34783		Filter, Pre-Air
	34782		Element, Air cleaner
	34780		Elbow, Air cleaner
	34697		Air Cleaner Elbow Assy.(Use in 730561 only.)
	650163		
			Screw, 10-32 x 7/8" Air Cleanar Acely (Incl. 83 00A 00B 00D thru 00C 07 8
89A	730128		Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
			298B) (Use as req.)
90	34781		Cover, Air cleaner
100			Pop Rivet (Purchase locally) (1/8" di a.)
	650825		Nut & Lockwasher, 1/4-20
	650665		Screw, 1/4-15 x 3/4"
	30675		Fitting, Breather tube
	29633		Muffler
	391026		Muffler (Incl. 124, 124A & 124B) (This spark arrester
	00.020		mufflercan be used on any model)
			,
	33171		Muffler Screen (Use as required)
	33185		Cover & Tube, Muffler (Use as require d)
	650578		Screw, 8-18 x 3/8"
125	27930A		* Gasket, Exhaust
129	32862		Nut, Conduit (1/4" thick)
130	30244		Nipple, Pipe (2.5")
131	30209		Elbow, Exhaust (45 degree)
134	31288		Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130		Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	34819		Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
200	0.10.10		730561 ass'y. only)
20.4	700004		• • • • • • • • • • • • • • • • • • • •
234	730561		Air Cleaner Kit
			(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
			(Use only on engines with an externally ventedfully
			adjustable carburetor.)
273	650687		Screw, 10-32 x 5/16" (Use as required)
	32410		Knob, Speed control
	34704		Decal, Air cleaner
2300	ОТГОТ		Down, All Gleater

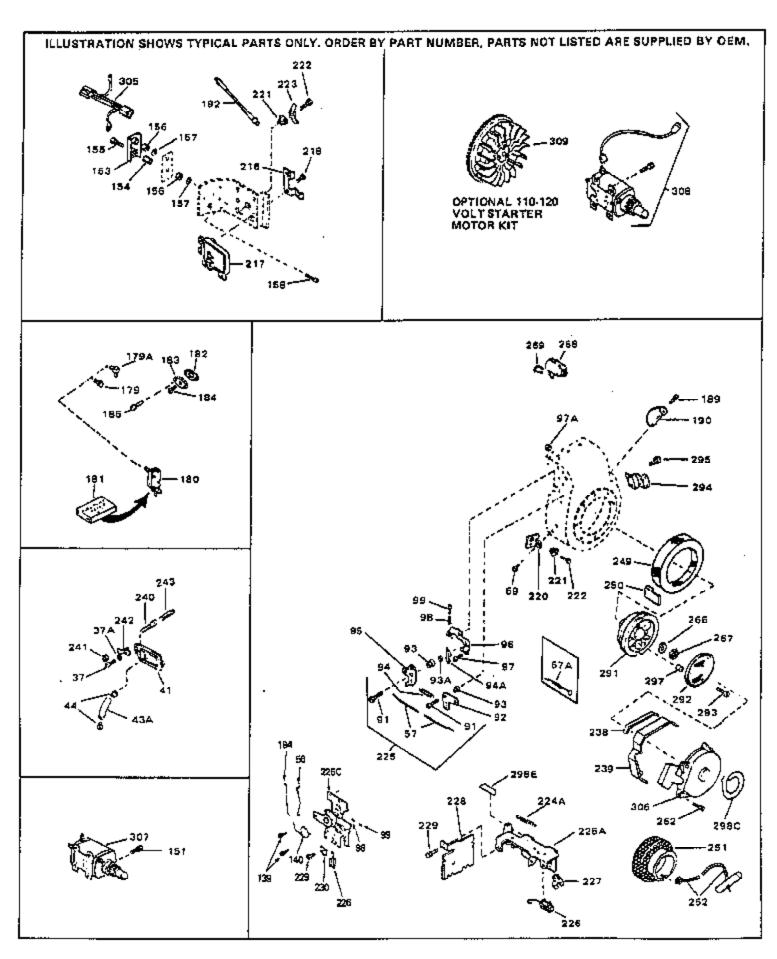

Ref #	Part Number	Otv	Description
	650128	Gty	Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	27261		Washer, Flat (Use as required)
	28425		Cover, Valve spring
	32446		Grommet, Breather tube
	34662		Link, Throttle
	29747B		Screw, 5/16-24 x 21/32"
	32924		Compression Spring (Used with 650688 screw) (Use as
			required)
98	31342		Compression Spring (Used with 650549 screw) (Use as
			required)
98	28569		Compression Spring (Used with 29500 screw)(Use as required)
QQ	650549		Screw, 5-40 x 7/16" (Use as required)
	29500		Screw, 8-32 x 3/4" (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
	650821		Screw, 10-32 x 1/2"
	34663		Spring, Speed control
	32683A		Gasket, Fuel pump cover (Use as requi red)
	32955		Cover, Fuel pump pad (Use as required)
184	9556		Plug, Pipe 1/8-27 (Use as required)
185	30063		Screw, 1/4-20 x 1/2" (Use as required)
225	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
225C	34677		Control Bracket (Incl. 98, 99, 140 & 226)
227	33177		Terminal (Use as required)
	28301		Pulley, Rope starter
	590343		Rope Assy., Starter
	650815		Washer, Belleville
	8116		Nut, Hex
	33018		Harness Assy., Adapter (Use as required)
308	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)