

1		Qty	Description Cylinder (Incl. 2, 3 & 4) (2-5/8" Bor e)
2	27652		Pin, Dowel
3	27642		Pipe plug, 1/4-18
4	32630		Seal, Oil
	29536		Blower Housing Baffle (Without electric starter knock out)
•			(Use as required)
5	35256A		Blower Housing Baffle (With electric starter knockout) (As
_			req.)(point ign.)
	650561		Screw, 1/4-20 x 5/8"
	29538		Base, Engine mounting
	650542		Screw, 5/16-18 x 3/4"
	34886		Crankshaft
	29783		Pin, Crankshaft gear (Used on early p rod.)
11	27884		Gear, Crankshaft (Used on early production) This gear is serviceable ONLY when it is pinned to the crankshaft.
12A	650625		Washer Thrust
	31461		Bushing, Crankshaft
	34503		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34504		Piston, Pin & Ring Set (.010" OS)
	34505		Piston, Pin & Ring Set (.020" OS)
	31797B		Piston & Pin Ass'y. (Std.)(2-5/8')(In cl.14)
	31798B		Piston & Pin Ass'y. (.010" OS) (Incl. 14)
	31799B		Piston & Pin Ass'y. (.020" OS) (Incl. 14)
	27888		Ring, Piston pin retaining
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (31d.) (2-3/3 Bole)
	34856		Ring Set (.010 OS)
	31380C		Rod Assy., Connecting (Incl. 17)
	650662C		Bolt, Connecting rod (Incl. 2 pieces)
	34034		Lifter, Valve
	30622A		Extension, Blower housing
	650128		Screw, 10-24 x 1/2"
	650561		Screw, 1/4-20 x 5/8" (Use as required )
	30063		Screw, 1/4-20 x 1/2" (Use as required )
	30684 31451		Gasket Cylinder Cover
	31451A 28460		Cylinder Cover (Incl.26, 34, 127A, 12 9 & 130) Seal, Oil
	650451		Screw, 1/4-20 x 1"
	650599		Screw, 1/4-20 x 1-1/2"
	30699C		Rod Assy., Governor (Incl. 30 & 31)
	30700		Yoke, Governor (Incl. 30 & 31)
	650494		Screw, 6-40 x 5/16"
	29642		Ring, Retaining
	31845		Shaft, Mechanical governor
	30588A		Spool, Governor
	35479		Washer, Flat
	29193 30501		Ring, Retaining
	30591 31843A		Gear Assy., Governor
	31843A 650936		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	32783		Intake Valve (Std.)
	32784		Intake Valve (1/32" OS)
	31469		Exhaust Valve (Std.)
	31470A		Exhaust Valve (1/32" OS)
	27882		Cap, Upper valve spring
44	27881		Spring, valve

Pof #	Part Number Qty	Description
	32581 Qty	
		Cap, Lower valve spring
	33876	Gasket, Stator
	650489	Screw, 1/4-20 x 5/8"
	32589	Key, Flywheel
	28938C	Gasket, Cylinder head
52	30938A	Head, Cylinder
53	34251	Resistor Spark Plug (RJ-17LM)
54	610118	Cover, Spark plug (Use as required)
	650690	Washer, Belleville (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
		·
	650691	Washer, Flat (Use as required)
	29916	Clamp, Governor lever (Use as require d)
	30322	Locknut, 8-32
	33454	Lever Assy., Governor
59	29918	Washer, Lock, No. 8 E.T.
61	650548	Screw, 8-32 x 5/16"
62	29216	Locknut, 10-32
	29826	Screw, 10-32 x 3/4"
	34661	Link, Governor
	34664	Control Bracket (Incl. 68, 69, 72 & 1 38)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
	610973	Terminal Assy. (Use as required)
	27896A	Gasket, Valve chamber cover
75	28423	Breather Assy., Valve
76	28424	Element, Breather
77	28425	Cover, Valve spring box
78	650128	Screw, 10-24 x 1/2"
	35350	Tube, Breather
	32446	Grommet, Breather tube
	27915A	* Gasket, Intake pipe to cylinder
	34712	Flange, Carburetor (Incl. 86A)
	30196	
		Screw, 5/16-18 x 3/4"
	31688A	* Gasket, Carburetor
	650517	Screw, 1/4-20 x 13/16"
	27272A	* Air Cleaner Gasket (Use as required)
	30767	Spacer, Cleaner (Use as required)
	34783	Filter, Pre-air
89	34782	Filter, Air cleaner (Incl. 97)
90	34782	Pop Rivet (1/8" dia.) (Purchase local ly)
91	34699	Bracket, Air cleaner
	34698A	Gasket, Air cleaner
	30675	Fitting, Breather
	34819	Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
3 <del>1</del> /\	5-615	730561 assembly only)
04	34780	Elbow, Air cleaner
	650163 650826	Screw, 10-32 x 7/8"  Stud. 1/4.30 x 6.30, threaded both an de
	650826	Stud, 1/4-20 x 6.20, threaded both en ds
	650825	Nut & Lockwasher, 1/4-20
	34781	Cover, Air cleaner
	650513	Nut, Wing, 1/4-20
101	34158	Bracket, Fuel tank
102	650665	Screw, 1/4-14 x 7/8"

Pof #	Part Number Qty	Description
	34159	Plate, Fuel tank mounting
	34186A	Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built with different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 33032 or 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
	410144B 33032	Fuel Cap (White Plastic)(Std.)(As req uired) Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as required)
105	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
105	35355	Fuel Cap (Red plastic) (Use as requir ed)
	29774	Fuel Line (Braided, 8 1/4") (Use as r equired)
	30962	Fuel Line (Braided, 32") (Use as required)
	26460	Clamp, Fuel line (Use as required)
	32158E	Blower Housing (For electric starter)
	29747B	Screw, 5/16-24 x 21/32"
	27930A	* Gasket, Exhaust flange
	34390	Deflector, Exhaust (Optional)
	391026	Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
	32401	Muffler
	33714	Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer, Flat
	650694A	Screw, 5/16 - 18 x 2"
	32125	Cup, Starter
	35009	Screen, Starter cup
	650815	Washer, Belleville
	8116	Nut, Hex
	29716	Screw, 1/4-28 x 7/16"
	31793	Bearing, Ball
	31855	Retainer, Bearing
	31792	Washer, Thrust
	650778	Washer, Lock
	650580	Nut, Lock
	34663	Spring, Speed control
	650821	Screw, 10-32 x 1/2"
	30747	Clip, Spark plug shorting
	650890	Lockwasher, Shakeproof, 5/16
	33185	Cover & tube, Muffler (Use as require d)
	33171	Screen, Muffler (Use as required)
	650578	Screw, 8-18 x 3/8" (Use as required)
	33700	Cover & Tube, Muffler (Use as required)
	33323	Screen, Muffler (Use as required)
	31297	Dipstick (Incl. 146A)
	29673	* Gasket, Oil fill
	650760	Screw, 8-32 x 3/8"
		·
	28545	Grommet, Plastic
	33356	Terminal, Ground  Air Cleaner Apply (Red Bally)/Incl 87 120 121 122 123 124 8
201	730164	Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 & 230)(As req.)
201	730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124) (Use as required)

	Part Number	Qty	Description
201B	730561		Air Cleaner Kit (Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C) (Used only on engine with an externally vented fully adjustable carburetor)
230 230A 230C 231 231A 232A 240 241 242 242 243 244	730130 34346 34768 34704 30547A 30548B 631021 611077 650868 611078 611079 590610 590613 632213		Muffler Adapter Kit (Incl.110,112)(As req.) Decal, Instruction Decal, Name Decal, Instruction Breaker Assy (Used on Std. Point igni tion) Condenser Inlet, Needle Seat & Clip Assy. Alternator (Optional) Screw, 8-18 x 1-1/8" (3 required)(Opt.) Connector, A.C. Lighting (Optional) Connector, D.C. Charging (Optional) Tube, Centering (Optional) Alternator Shaft (Optional) Carburetor (Incl. 85) (Refer to DiviSion 5, Section A, page 176 for breakdown)
251	611038		Magneto (Refer to Division 5, Section B, page 39 for breakdown)
252	590420A		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
254	33328D		Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A		Gasket Set (Incl. items marked*)