

1		Qty	Description Cylinder (Incl. 2, 3 & 4) (2-5/8" Bor e)
	27652		Pin, Dowel
	27642		Pipe plug, 1/4-18
4	32630		Seal, Oil
5	29536		Blower Housing Baffle (Without electric starter knock out)
			(Use as required)
5	35256A		Blower Housing Baffle (With electric starter knockout) (As
			req.)(point ign.)
	650561		Screw, 1/4-20 x 5/8"
	29538		Base, Engine mounting
	650542		Screw, 5/16-18 x 3/4"
	34886		Crankshaft
10	29783		Pin, Crankshaft gear (Used on early p rod.)
11	27884		Gear, Crankshaft (Used on early production) This gear is
			serviceable ONLY when it is pinned to the crankshaft.
	650625		Washer Thrust
	31461		Bushing, Crankshaft
	31797B		Piston & Pin Ass'y. (Std.)(2-5/8')(In cl.14)
	31798B		Piston & Pin Ass'y. (.010" OS) (Incl. 14)
	31799B		Piston & Pin Ass'y. (.020" OS) (Incl. 14)
13	34503		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
13	34504		Piston, Pin & Ring Set (.010" OS)
13	34505		Piston, Pin & Ring Set (.020" OS)
14	27888		Ring, Piston pin retaining
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	31380C		Rod Assy., Connecting (Incl. 17)
	650662C		Bolt, Connecting rod (Incl. 2 pieces)
	34034		Lifter, Valve
	30622A		Extension, Blower housing
	650128		Screw, 10-24 x 1/2"
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30063		Screw, 1/4-20 x 1/2" (Use as required)
			Gasket Cylinder Cover
	30684 31451A		Cylinder Cover (Incl.26, 34, 127A, 12 9 & 130)
	28460		Seal, Oil
	650451		Screw, 1/4-20 x 1"
	650599		Screw, 1/4-20 x 1-1/2"
	30699C		·
	30700		Rod Assy., Governor (Incl. 30 & 31)
			Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29642		Ring, Retaining
	31845		Shaft, Mechanical governor
	30588A		Spool, Governor
	35479		Washer, Flat
	29193		Ring, Retaining
	30591		Gear Assy., Governor
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	32783		Intake Valve (Std.)
41	32784		Intake Valve (1/32" OS)
42	27878A		Exhaust Valve (Std.)
42	27880A		Exhaust Valve (1/32" OS)
	27882		Cap, Upper valve spring
	27881		Spring, valve
			. •

Ref #	Part Number Qt	/ Description
	32581	Cap, Lower valve spring
	33876	Gasket, Stator
	650489	Screw, 1/4-20 x 5/8"
	35349	Ground Wire
	32589	Key, Flywheel
	28938C	Gasket, Cylinder head
	30938A	Head, Cylinder
	34251	Resistor Spark Plug (RJ-17LM)
	610118	Cover, Spark plug (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650690	• • •
		Washer, Belleville (Use as required)
	650691	Washer, Flat (Use as required)
	30322	Locknut, 8-32
	29916	Clamp, Governor lever (Use as require d)
	33454	Lever Assy., Governor
	29918	Washer, Lock, No. 8 E.T.
	650548	Screw, 8-32 x 5/16"
	29216	Locknut, 10-32
	29826	Screw, 10-32 x 3/4"
	34661	Link, Governor
	34664	Control Bracket (Incl. 68, 69, 72 & 1 38)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
	610973	Terminal Assy. (Use as required)
	27896A	Gasket, Valve chamber cover
	28423	Breather Assy., Valve
	28424	Element, Breather
	28425	Cover, Valve spring box
	650128	Screw, 10-24 x 1/2"
	35350	Tube, Breather
	32446	Grommet, Breather tube
	27915A	* Gasket, Intake pipe to cylinder
	34712	Flange, Carburetor (Incl. 86A)
84	30196	Screw, 5/16-18 x 3/4"
85	31688A	* Gasket, Carburetor
86A	650517	Screw, 1/4-20 x 13/16"
	27272A	* Air Cleaner Gasket (Use as required)
87	30767	Spacer, Cleaner (Use as required)
88	34783	Filter, Pre-air
89	34782	Filter, Air cleaner (Incl. 97)
90	34782	Pop Rivet (1/8" dia.) (Purchase local ly)
91	34699	Bracket, Air cleaner
92	34698A	Gasket, Air cleaner
93	30675	Fitting, Breather
94A	34819	Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
		730561 assembly only)
94	34780	Elbow, Air cleaner
95	650163	Screw, 10-32 x 7/8"
	650826	Stud, 1/4-20 x 6.20, threaded both en ds
	650825	Nut & Lockwasher, 1/4-20
	34781	Cover, Air cleaner
	650513	Nut, Wing, 1/4-20
	34158	Bracket, Fuel tank
		,

Ref #	Part Number Qty	Description
102	650665	Screw, 1/4-14 x 7/8"
103	34159	Plate, Fuel tank mounting
104	34186A	Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built
		with different size fuel inlet openings. Tanks with the 1-3/16"
		I.D. opening use fuel cap 33032 or 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
105	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
	33032	Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as
100	33002	required)
		. ,
105	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
105	35355	Fuel Cap (Red plastic) (Use as requir ed)
106	29774	Fuel Line (Braided, 8 1/4") (Use as r equired)
106	30962	Fuel Line (Braided, 32") (Use as required)
107	26460	Clamp, Fuel line (Use as required)
108	32158E	Blower Housing (For electric starter)
109	29747B	Screw, 5/16-24 x 21/32"
110	27930A	* Gasket, Exhaust flange
111E	34390	Deflector, Exhaust (Optional)
111C	391026	Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
111	32401	Muffler
111D	33714	Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
112	30196	Screw, 5/16-18 x 3/4"
113	26073	Washer, Flat
	650694A	Screw, 5/16 - 18 x 2"
	32125	Cup, Starter
	35009	Screen, Starter cup
	650815	Washer, Belleville
	8116	Nut, Hex
	29716	Screw, 1/4-28 x 7/16"
	31793	Bearing, Ball
	31855	Retainer, Bearing
	31792	Washer, Thrust
	650778	Washer, Lock
	650580	Nut, Lock
	34663	Spring, Speed control
	650821 30747	Screw, 10-32 x 1/2"
	650890	Clip, Spark plug shorting Lockwasher, Shakeproof, 5/16
	33185	Cover & tube, Muffler (Use as require d)
	33171	Screen, Muffler (Use as required)
	650578	Screw, 8-18 x 3/8" (Use as required)
	33700	Cover & Tube, Muffler (Use as require d)
	33323	Screen, Muffler (Use as required)
	31297	Dipstick (Incl. 146A)
	29673	* Gasket, Oil fill
	650760	Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	33356	Terminal, Ground
	730164	Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 &
		230)(As req.)
004	720464	
201	730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124)
		(Use as required)

Ref #	Part Number	Qty Description
201B	730561	Air Cleaner Kit (Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C) (Used only on engine with an externally vented fully adjustable carburetor)
230 230A 230C 231 231A 232A 240 241 242 242 243 244	730130 34346 34768 34704 30547A 30548B 631021 611077 650868 611078 611079 590610 590613 632213	Muffler Adapter Kit (Incl.110,112)(As req.) Decal, Instruction Decal, Name Decal, Instruction Breaker Assy (Used on Std. Point igni tion) Condenser Inlet, Needle Seat & Clip Assy. Alternator (Optional) Screw, 8-18 x 1-1/8" (3 required)(Opt.) Connector, A.C. Lighting (Optional) Connector, D.C. Charging (Optional) Tube, Centering (Optional) Alternator Shaft (Optional) Carburetor (Incl. 85) (Refer to DiviSion 5, Section A, page 176 for breakdown)
251	611038	Magneto (Refer to Division 5, Section B, page 39 for breakdown)
252	590420A	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
254	33328D	Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A	Gasket Set (Incl. items marked*)