


Ref #	Part Number Qty	/ Description
1	32769B	Cylinder (Incl. 2, 3, 4, 76 & 270) (2 -3/4")
2	27652	Pin, Dowel
	27642	Plug, Oil drain
	32630	Seal, Oil
	32783	Intake Valve (Std.) (Incl. 9)
	32784	Intake Valve (1/32" OS) (Incl. 9)
	27878A	Exhaust Valve (Std.) (Incl. 9)
	27880A	Exhaust Valve (1/32" OS) (Incl. 9)
	20810	Pin, Valve spring retainer (Use as re quired)
	27882	Cap, Upper valve spring
	27881	Spring, Valve
8A	27881	Spring, Valve
9A	32581	Cap, Lower valve spring
9	32581	Cap, Lower valve spring
10A	32590	Plate, Lock & Oil dipper (This plate may be replaced by
		34242 oil dipper but 650662C screw must be used.)
	34242	Dipper, Oil
11	32773	Crankshaft (Incl. 12 & 13)
12	29783	Crankshaft Gear Pin (Early production)
13	27884	Gear, Crankshaft (Used in early production) This gear is
		servicable onlywhen it is pinned to the crankshaft.
110	20770P	
	32770B	Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32771B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32772B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34528	Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34529	Piston, Pin & Ring Set (.010" OS)
14	34530	Piston, Pin & Ring Set (.020" OS)
15	32595	Ring Set (Std.) (2-3/4" Bore)
15	32596	Ring Set (.010" OS)
15	32597	Ring Set (.020" OS)
16	27888	Ring, Piston pin retaining
	32591C	Rod Assy., Connecting (Incl. 10 & 18)
	650662C	Screw, Connecting rod (2 each)
	32115	Camshaft (MCR)
	34034	Lifter, Valve
	31451A	Cylinder Cover (Incl.24, 106, 309, 31 0 & 311)
	28460	Seal, Oil
	31546	Bushing, Crankshaft (Use as required)
	31297	Dipstick, Oil (Incl. 30)
	30684	* Gasket, Cylinder cover
	650451	Screw, 1/4-20 x 1"
	29673	* Gasket, Oil filler
	650489	Screw, 1/4-20 x 5/8"
	32631A	* Gasket, Cylinder head
	30938A	Head, Cylinder
34	27793	Clip, Conduit (Use as required)
35	28942	Screw, 10-32 x 3/8" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	33636	Resistor Spark Plug (RJ-8C)
	34251	Resistor Spark Plug
	27896A	* Gasket, Breather cover
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Valve spring
42	26073	Washer (Use as required)

		Qty	Description
42	650691		Washer, Flat (Use as required)
42A	650690		Washer, Belleville (Use as required)
	650128		Screw, 10-24 x 1/2"
	27915A		* Gasket, Intake
	30195A		Flange, Carburetor (Incl. 79 & 80)
	30196		•
			Screw, 5/16-18 x 3/4"
	650548		Screw, 8-32 x 5/16"
52	32326A		Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
55	30205		Bracket, Adjusting
56	31710		Link, Throttle
59	29216		Nut, Lock, 10-32
60	650152		Screw, 8-32 x 3/8"
61	29826		Screw, 10-32 x 3/4"
	29642		Ring, Retaining
	30699B		Governor Rod Ass'y. (This one-piece governor rodis no longer
			used. It is replaced by 30699C ass'y.,Ref. no. 63A)
63A	30699C		Rod Assy., Governor (Incl. 64 & 65)
64	30700		Yoke, Governor
65	650494		Screw, 6-40 x 5/16"
66	29918		Lockwasher, #8 E.T.
	35350		Tube, Breather
	29747B		Screw, 5/16-24 x 21/32"
	32158E		Blower Housing (For elec.star.)(Incl. 134,135)
	650815		Washer, Belleville
	8116		Nut, Hex
	29536		Blower Housing Baffle (without electric starter knock-out)
75	29000		(Use as required)
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use
			as required) (Point Ignition)
74	650561		Screw, 1/4-20 x 5/8"
75	31688A		* Gasket, Carburetor
	29752		Nut & Lockwasher Assy., 1/4-28
	650572		Screw, 1/4-28 x 1-1/8"
	730164		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
			(Use as required)
83	27272A		* Gasket, Air cleaner
	28569		Spring, Compression
	29500		Screw, 8-32 x 3/4"
	29538		Base, Engine mounting
	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor (Incl. 109)
	30588A		Spool, Governor
	30590A		Washer, Flat
	29193		
	650561		Screw, 1/4-20 x 5/8"
	31301		Fuel Tank (Incl. 115)
	410144B		Fuel Cap (White Plastic)(Std)(As requ ired)
115	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
115	35355		Fuel Cap (Use as required)
	28584		Fitting, Fuel strainer & elbow

Ref #	Part Number Qty	Description
118	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
120	650128	Screw, 10-24 x 1/2" (Use as required)
121	30622A	Extension, Blower housing
124	650542	Screw, 5/16-18 x 3/4"
127	26073	Washer (Use as required)
128	650694A	Screw, 5/16-18 x 2" (Use as required)
129	32589	Key, Flywheel
130	31843A	Bracket, Governor gear
131	650836	Screw, 10-24 x 1/2"
133	650599	Screw, 1/4-20 x 1-1/2"
149	30747	Clip, Shorting
	650890	Lockwasher
	610118	Cover, Spark plug (Use as required)
193	27276	Cover, Spark plug
205	650561	Screw, 1/4-20 x 5/8" (Use as required)
209	30939A	Cover, Cylinder head
246	32125	Cup, Starter
	590417	Screen, Starter cup
266	26460	Clamp, Fuel line
270	31461	Bushing, Crankshaft (Use as required)
	31726B	Control Bracket (Incl. 98, 99, 214 & 274)
274	610973	Terminal Ass'y. (As req. on late prod uction)
275	34043	Spring, Control lever
287	27275	Clip, Hi-tension wire (Use as require d)
287	34246	Clip, Ground wire (Use as required)
	650625	Washer, Thrust
331B	31752	Decal, Air cleaner
	550223	Decal, Name
331A	34346	Decal, Instruction
332	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
	631480	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100
		for breakdown)
337	610689A	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
343	33239A	Gasket Set (Incl. items marked*)



Ref #	Part Number Qty	Description
	650489	Screw, 1/4-20 x 5/8"
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
	31710	Link, Throttle
	650815	Washer, Belleville
	8116	Nut, Hex
	28569	Spring, Compression
	29500	Screw, 8-32 x 3/4"
	610118	Cover, Spark plug (Use as required)
	27276	Cover, Spark plug
	590343	Rope Assy., Starter
	28301	Pulley, Rope starter
	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	31793	Bearing, Ball
	31855	Retainer, Bearing
	650778	Washer, Lock
	650580	Nut, Lock
	31792	Washer, Thrust
	550223	Decal, Name
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter
		motor kit may have been added to this engine. It can be
		added only if cylinder hasdrilled and tapped starter mounting
		bosses and a ring gear flywheel (see#342). Refer to service
		number stamped on end cap of motor, or on decal, for
		identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using
012		110-120 volt starter kits listed above)
		,
342	611042	Flywheel (Used on Type letters H and above) (Std. Point
		ignition) (Ring gear flywheel required on engines using
		110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on engines
		using 110-120 volt starter kits listed above) (Use withSolid
		State ignition)
		5 ,

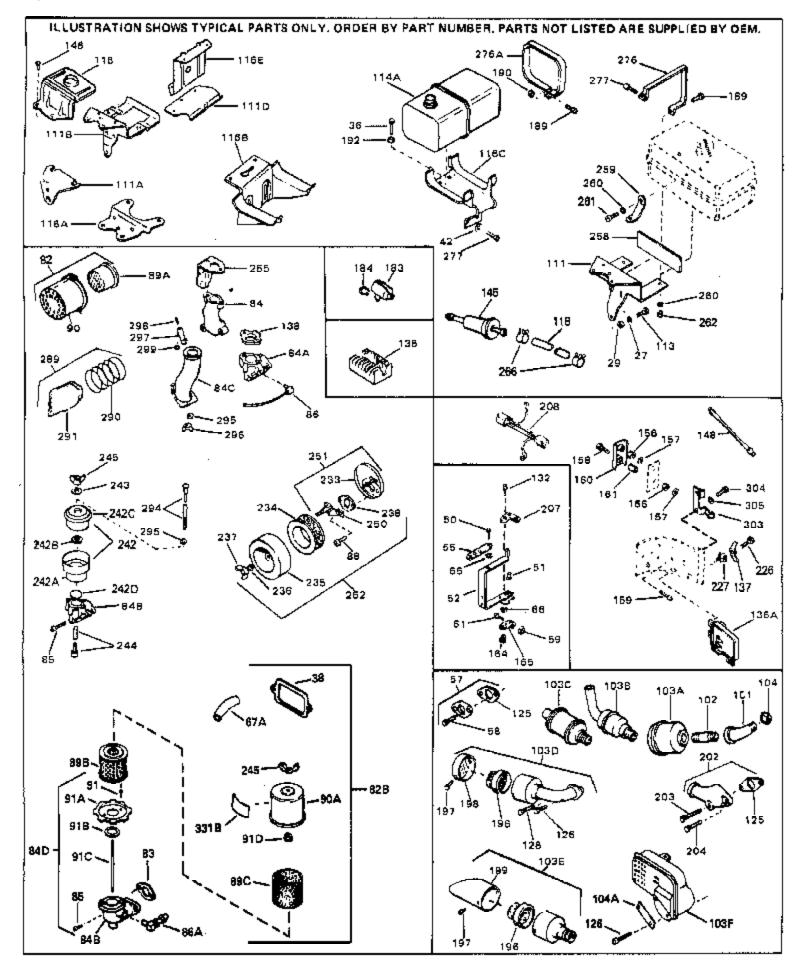

		Qty Description
27	27513	Lockwasher, 1/4" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
42	26073	Washer (Use as required)
42	650691	Washer, Flat (Use as required)
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used in early productio n)
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
	00005	
	30205	Bracket, Adjusting
57	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
58	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
82	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B)
		(Use as required)
005	700504	
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
83	27272A	* Gasket, Air cleaner
84D	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
		in 730561 assembly only)
		• • • • • •
84B	32560	Elbow, Air cleaner
85	29786	Screw, 10-32 x 1-5/8" NOTE: 130010 thru 10C & 11 used in
		early production only.
		cany production only.
101	30209	Elbow, Exhaust (45 degree)
102	30244	Muffler Nipple
	29633	Muffler
	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	32862	Conduit Nut
111	31694	Bracket, Fuel tank
113	650561	Screw, 1/4-20 x 5/8"
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
128	650694A	Screw, 5/16-18 x 2" (Use as required)
	650548	Screw, 8-32 x 5/16" (Early production)
	34067	Wire Assy., Alternator adapter (4-1/4 ")
	34069	Wire Assy., Alternator adapter (6-3/4 ")
	6201	Screw, 1/4-28 x 7/8"
202	31288	Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	31670	Bowl, Oil bath cleaner
	32561	Oil Bath A/C Ass'y.(Incl.242A,242B,24 2C.242D)
242D	31479	Washer, Fiber
	31669	Cover, Oil bath cleaner
	31480	"O" Ring
	27183	Washer, Fiber
244	32562	Screw, 10-24 x 6-11/16"
245	9577	Nut, Wing
	29752	Nut, Lock
202		

Ref #	Part Number	Qty Description
266	26460	Clamp, Fuel line
276	31697	Strap, Fuel tank
277	29212	Screw, Hex hd. Sems, 1/4-28 x 7/16
331B	31752	Decal, Air cleaner