



Def #	Dowt Ni week ou	<u> </u>	Description
		Qty	
	32769B		Cylinder (Incl. 2, 3, 4, 76 & 270) (2 -3/4")
	27652		Pin, Dowel
	27642		Plug, Oil drain
	32630		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
5	32784		Intake Valve (1/32" OS) (Incl. 9)
6	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	20810		Pin, Valve spring retainer (Use as re quired)
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
10	34242		Dipper, Oil
	32587		Crankshaft (Incl. 12 & 13)
	29783		· · · · · · · · · · · · · · · · · · ·
			Crankshaft Gear Pin (Early production)
13	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14A	32770B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32771B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32772B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34528		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34529		Piston, Pin & Ring Set (0.10" OS)
	34530		Piston, Pin & Ring Set (.020" OS)
	32595		
			Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
22	34034		Lifter, Valve
23	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
24B	31546		Bushing, Crankshaft (Use as required)
	28427		Seal, Oil
	31297		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650451		Screw, 1/4-20 x 1"
	29673		* Gasket, Oil filler
			·
	650489 33631A		Screw, 1/4-20 x 5/8" * Cosket Cylinder bood
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		· · · · · · · · · · · · · · · · · · ·
			Element, Breather
	28425		Cover, Valve spring
42	26073		Washer (Use as required)

	D. (N.)	<u> </u>	
		Qty	Description
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	650128		Screw, 10-24 x 1/2"
45	27915A		* Gasket, Intake
46	30195A		Flange, Carburetor (Incl. 79 & 80)
47	30196		Screw, 5/16-18 x 3/4"
	29716		Screw, 1/4-28 x 7/16"
	650548		Screw, 8-32 x 5/16"
	32326A		Lever, Governor (New lever does not need 1 of
JZ	32320A		
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
56	31710		Link, Throttle
	29216		Nut, Lock, 10-32
	650152		Screw, 8-32 x 3/8"
	29826		Screw, 10-32 x 3/4"
	29642		
			Ring, Retaining
	30699C		Rod Assy., Governor (Incl. 64 & 65)
63	30699B		Governor Rod Ass'y. (This one-piece governor rodis no longer
			used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29918		Lockwasher, #8 E.T.
	35350		Tube, Breather
	29747B		Screw, 5/16-24 x 21/32"
	32158E		Blower Housing (For elec.star.)(Incl. 134,135)
71	650815		Washer, Belleville
72	8116		Nut, Hex
73	29536		Blower Housing Baffle (without electric starter knock-out)
			(Use as required)
	0=0=04		,
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use
			as required) (Point Ignition)
74	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
	29752		Nut & Lockwasher Assy., 1/4-28
	650572		Screw, 1/4-28 x 1-1/8"
82A	730164		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
			(Use as required)
83	27272A		* Gasket, Air cleaner
	31691		Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
O1	01001		early production only.
			,,
88	28820		Screw, 10-32 x 1/2"
89	30727		Element, Air cleaner
90	31715		Body, Air cleaner
	35349		Ground Wire
	29538		Base, Engine mounting
	32401		Muffler
	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor (Incl. 109)
	30588A		Spool, Governor
	30590A		Washer, Flat
	29193		Ring, Retaining
113	650561		Screw, 1/4-20 x 5/8"
114	31301		Fuel Tank (Incl. 115)
	410144B		Fuel Cap (White Plastic)(Std)(As required)
			// // 1 ===/

Ref #	Part Number	Otv	Description
	33032	۳.,	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
			(Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
110	0-12 10		required)
445	05055		
	35355		Fuel Cap (Use as required)
	28584		Fitting, Fuel strainer & elbow
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	650128		Screw, 10-24 x 1/2" (Use as required)
	30622A		Extension, Blower housing
	650542		Screw, 5/16-18 x 3/4"
	27930A		Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	26073		Washer (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	32589		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2" Screw, 1/4 20 x 1 1 1/2"
	650599		Screw, 1/4-20 x 1-1/2"
	30747 610118		Clip, Shorting
	650561		Cover, Spark plug (Use as required)
	30939A		Screw, 1/4-20 x 5/8" (Use as required)
	32125		Cover, Cylinder head Cup, Starter
	590417		Screen, Starter cup
	26460		Clamp, Fuel line
	31461		Bushing, Crankshaft (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	27275		Clip, Hi-tension wire (Use as require d)
	34246		Clip, Ground wire (Use as required)
	650625		Washer, Thrust
	550223		Decal, Name
	34346		Decal, Instruction
	31752		Decal, Air cleaner
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
	631454		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100
			for breakdown)
337	610689A		Magneto NOTE: The complete magneto is not available as
331	01000974		an assembly. The magneto number is shown for reference
			purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for
			breakdown)
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
0.10	000004		,
343	33239A		Gasket Set (Incl. items marked*)

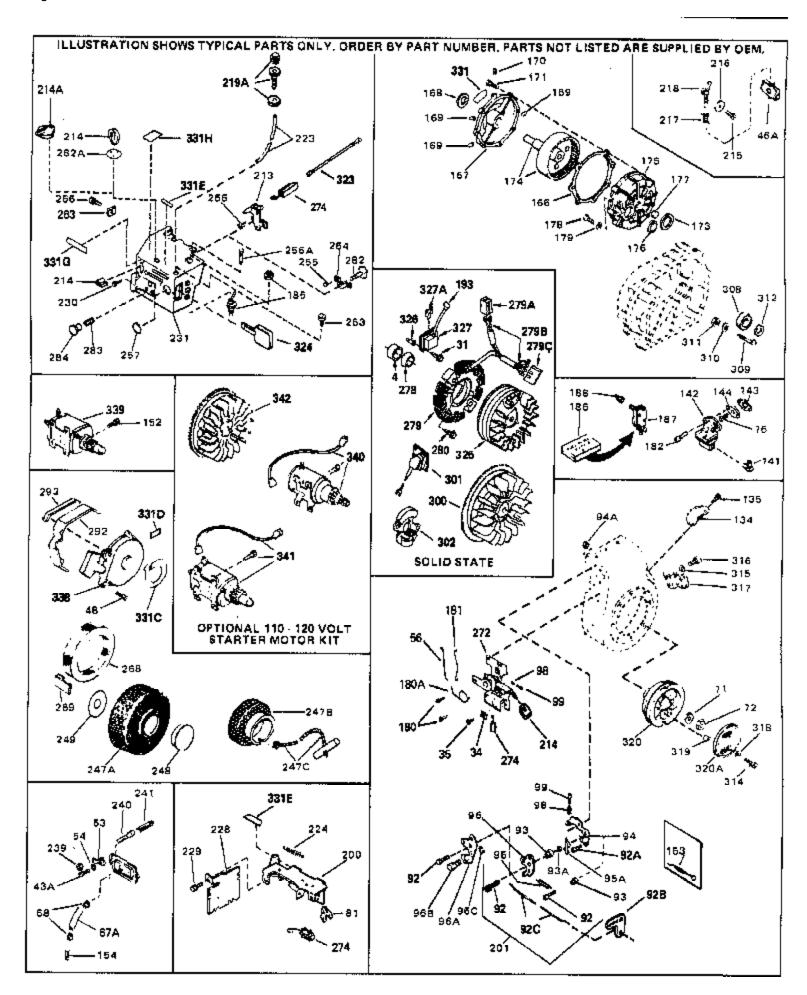

Ref #	Part Number Qty	Description
	650489	Screw, 1/4-20 x 5/8"
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
48	29716	Screw, 1/4-28 x 7/16"
56	31710	Link, Throttle
	650815	Washer, Belleville
72	8116	Nut, Hex
193	610118	Cover, Spark plug (Use as required)
200	33110A	Control Bracket (Incl. 224 & 274)
	30826	Spring, Extension
263	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	550223	Decal, Name
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042	Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

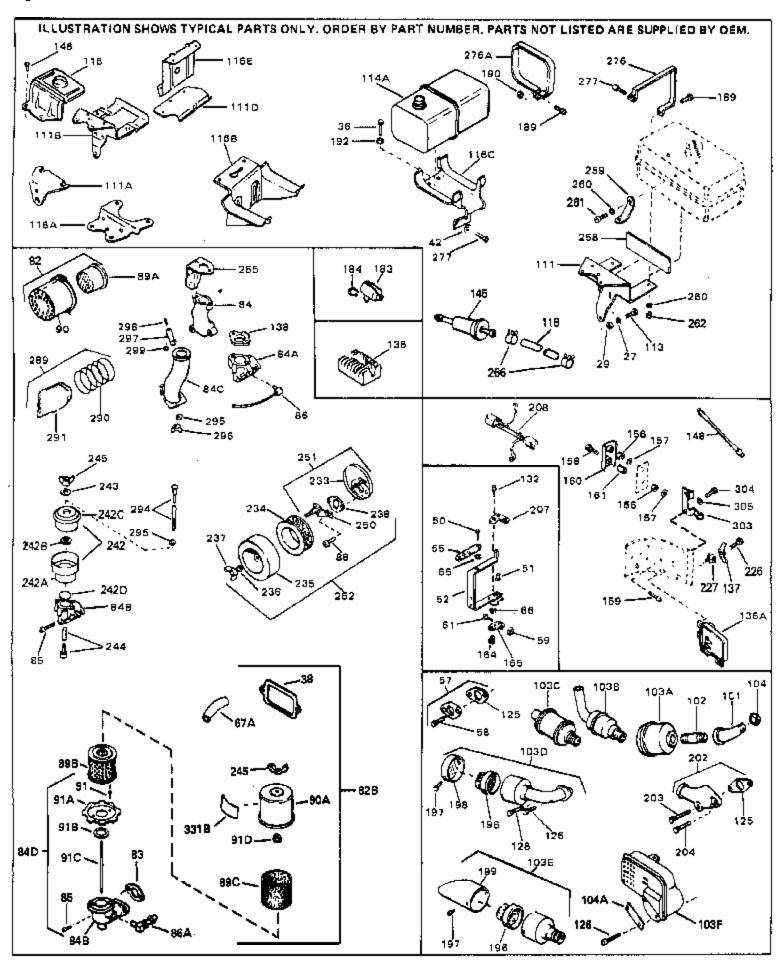

Ref #	Part Number	Qty	Description
	27513		Lockwasher, 1/4" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	26073		Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used in early productio n)
	32326A		Lever, Governor (New lever does not need 1 of
~ _	0_0_0.		51,66,132,164,165,207)
EE	20205		•
	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32 Serow 10-32 x 3/4"
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
02D	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
			91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B)
			(Use as required)
83	27272A		* Gasket, Air cleaner
	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
			in 730561 assembly only)
00	28820		• • • • • • • • • • • • • • • • • • • •
	31715		Screw, 10-32 x 1/2" Body, Air cleaner
	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	31694		Bracket, Fuel tank
	650561		Screw, 1/4-20 x 5/8"
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	27930A		
	30196		Gasket, Exhaust Screw, 5/16-18 x 3/4"
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production)
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069		Wire Assy., Alternator adapter (4-1/4-) Wire Assy., Alternator adapter (6-3/4-")
	6201		Screw, 1/4-28 x 7/8"
	31288		Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	29752		Nut, Lock
	29732 26460		Clamp, Fuel line
	31697		Strap, Fuel tank
	29212		Screw, Hex hd. Sems, 1/4-28 x 7/16
	31752		Decal, Air cleaner
3010	01702		bood, the older los