
HH70-140025 Engine Parts List #1

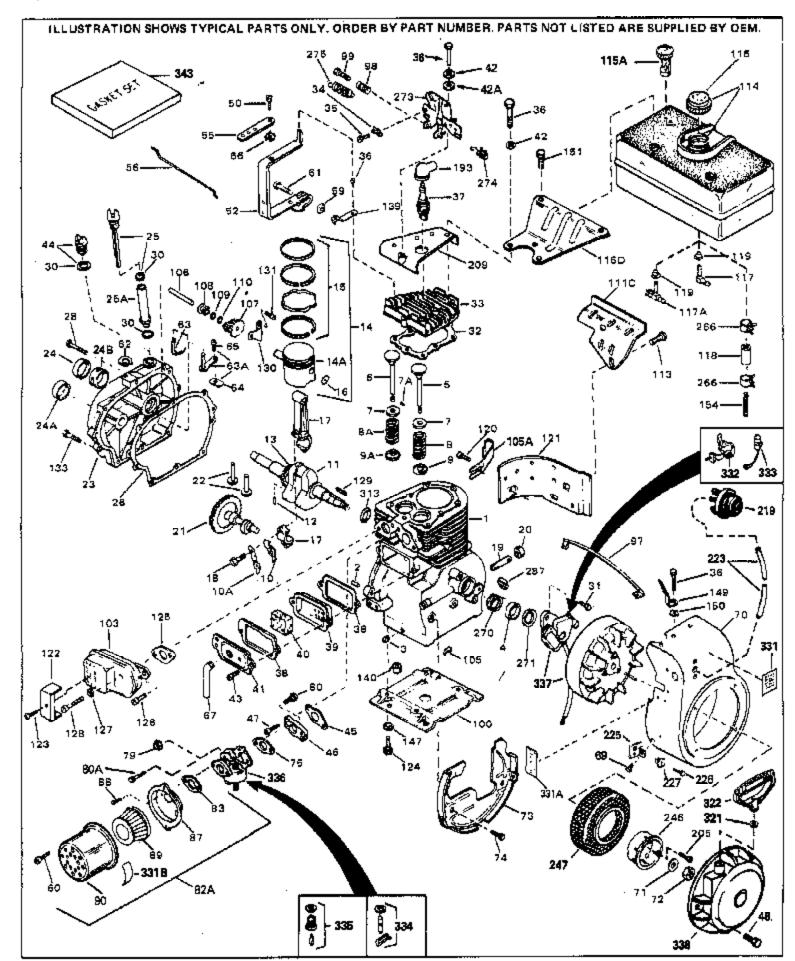


Ref #	Part Number Qty	Description
1	32769B	Cylinder (Incl. 2, 3, 4, 76 & 270) (2 -3/4")
2	27652	Pin, Dowel
3	27642	Plug, Oil drain
	28582	Plug, Oil drain
	32630	Seal, Oil
	32783	•
		Intake Valve (Std.) (Incl. 9)
	32784	Intake Valve (1/32" OS) (Incl. 9)
	31469A	Exhaust Valve (Std.) (Incl. 9)
	31470A	Exhaust Valve (1/32" OS) (Incl. 9)
7A	20810	Pin, Valve spring retainer (Use as re quired)
7	27882	Cap, Upper valve spring
8A	27881	Spring, Valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	32581	Cap, Lower valve spring
10A	32590	Plate, Lock & Oil dipper (This plate may be replaced by
		34242 oil dipper but 650662C screw must be used.)
10	34242	Dipper, Oil
	32670	Crankshaft (Incl. 12 & 13)
	29783	Crankshaft Gear Pin (Early production )
13	27884	Gear, Crankshaft (Used in early produ ction) This gear is
		servicable onlywhen it is pinned to the crankshaft.
110	207700	
	32770B	Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32771B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	32772B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14	34528	Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
14	34529	Piston, Pin & Ring Set (.010" OS)
	34530	Piston, Pin & Ring Set (.020" OS)
	32595	Ring Set (Std.) (2-3/4" Bore)
	32596	•
		Ring Set (.010" OS)
	32597	Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
17	32591C	Rod Assy., Connecting (Incl. 10 & 18)
18	650662C	Screw, Connecting rod (2 each)
21	32115	Camshaft (MCR)
	34034	Lifter, Valve
	31303B	Cover, Cylinder (Incl. 24, 106 & 279)
	28427	Seal, Oil
		•
	31546	Bushing, Crankshaft (Use as required)
	29668	Dipstick, Oil (Incl. 30)
	30684	* Gasket, Cylinder cover
	650451	Screw, 1/4-20 x 1"
30	29673	* Gasket, Oil filler
	650489	Screw, 1/4-20 x 5/8"
	32631A	* Gasket, Cylinder head
	30938A	Head, Cylinder
	27793	
		Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A	Screw, 5/16-18 x 2" (Use as required)
	33636	Resistor Spark Plug (RJ-8C)
	34251	Resistor Spark Plug
	27896A	* Gasket, Breather cover
	28423	Body, Breather
	28424	Element, Breather
41	28425	Cover, Valve spring

		Qty Description
	26073	Washer (Use as required)
42	650691	Washer, Flat (Use as required)
42A	650690	Washer, Belleville (Use as required)
43	650128	Screw, 10-24 x 1/2"
	27915A	* Gasket, Intake
	30195A	Flange, Carburetor (Incl. 79 & 80)
	30196	Screw, 5/16-18 x 3/4"
	29716	Screw, 1/4-28 x 7/16"
	650548	Screw, 8-32 x 5/16"
		,
52	32326A	Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
55	30205	Bracket, Adjusting
56	32327	Link, Throttle
59	29216	Nut, Lock, 10-32
60	650152	Screw, 8-32 x 3/8"
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
	30699C	Rod Assy., Governor (Incl. 64 & 65)
	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
05	30033D	used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64	30700	Yoke, Governor
65	650494	Screw, 6-40 x 5/16"
66	29918	Lockwasher, #8 E.T.
	35350	Tube, Breather
	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
	650815	Washer, Belleville
	8116	Nut, Hex
	29536	•
13	23030	Blower Housing Baffle (without electric starter knock-out) (Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
		as required) (Point Ignition)
74	650561	Screw, 1/4-20 x 5/8"
75	31688A	* Gasket, Carburetor
	29752	Nut & Lockwasher Assy., 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
02/1	100104	(Use as required)
83	27272A	* Gasket, Air cleaner
87	31691	Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
		early production only.
	28820	Screw, 10-32 x 1/2"
89	30727	Element, Air cleaner
	31715	Body, Air cleaner
	31582	Ground Wire
	29538	Base, Engine mounting
	29443	Clip, Wire
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	Ring, Retaining
113	30063 410144B	Screw, 1/4-20 x 1/2" Fuel Cap (White Plastic)(Std)(As requ ired)

		Qty Description
115	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
118 118 118 120 121 124 127 128 129 130 131 133 149 193 205 209 246 247 266 270 274 266 270 274 287 287 313 331 331 331 A 331B 335	35355 29774 30705 30962 650128 30622A 650542 26073 650694A 32589 31843A 650836 650599 30747 610118 27276 650561 30939A 32125 590417 26460 31461 610973 27275 34246 650625 550223 32676 34346 31752 31393 631677	Fuel Cap (Use as required) Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-1/2" Clip, Shorting Cover, Spark plug (Use as required) Cover, Spark plug Screw, 1/4-20 x 5/8" (Use as required ) Cover, Cylinder head Cup, Starter Screen, Starter cup Clamp, Fuel line Bushing, Crankshaft (Use as required) Terminal Ass'y. (As req. on late prod uction) Clip, Hi-tension wire (Use as required) Washer, Thrust Decal, Name Decal "Solid state" Decal, Naree Valve, Seat & Gasket Assy. Carburetor (Incl. 75) (Refer to Division 5, Section A, page 120
338	590427	for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
343	33239A	Gasket Set (Incl. items marked*)



		Qty	
	650489		Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
56	32327		Link, Throttle
	650815		Washer, Belleville
	8116		Nut, Hex
	28566		Fitting, Fuel line
	30063		Screw, 1/4-20 x 1/2"
	33010		Repair Kit, Impulse fuel pump
	32959		
			Fuel pump, Impulse
	33229		Pipe Fitting
	610118		Cover, Spark plug (Use as required)
	27276		Cover, Spark plug
	33450		Nut, Lock
	30845A		Bolt, Governor adjusting
	30886A		Spring, Governor bolt
263	650764		Nut, "U" Type (Use as required)
274	610973		Terminal Ass'y. (As req. on late prod uction)
300	610806		Flywheel Ass'y. (Solid state)
301	610783		Transformer (Solid state)
302	610759		Magneto (Solid state)
	550223		Decal, Name
	32676		Decal "Solid state"
	590427		Rewind Starter (Refer to Division 5, Section C, page 25 for
			breakdown)
339	35765A		Electric Starter Motor (12 Volt) NOTE: The 29965, 32468,
			32468B, 33606, 35765 and 35765A startermotors are used
			interchangeably on these models. Refer to service number
			stamped on end cap of motor, or on decal, for identification.
			Refer to Division 5, Section D for breakdown.
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter
			motor kit may have been added to this engine. It can be
			added only if cylinder hasdrilled and tapped starter mounting
			bosses and a ring gear flywheel (see#342). Refer to service
			number stamped on end cap of motor, or on decal, for
			identifica
<b>.</b>	000///		
342	30811A		Flywheel (Ring gear flywheel requiredon engines using
			110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point
			ignition) (Ring gear flywheel required on engines using
			110-120 volt starter kits listed above)
			,
342	611085		Flywheel (Minimum ring gear flywheel required on engines
			using 110-120 volt starter kits listed above) (Use withSolid
			State ignition)

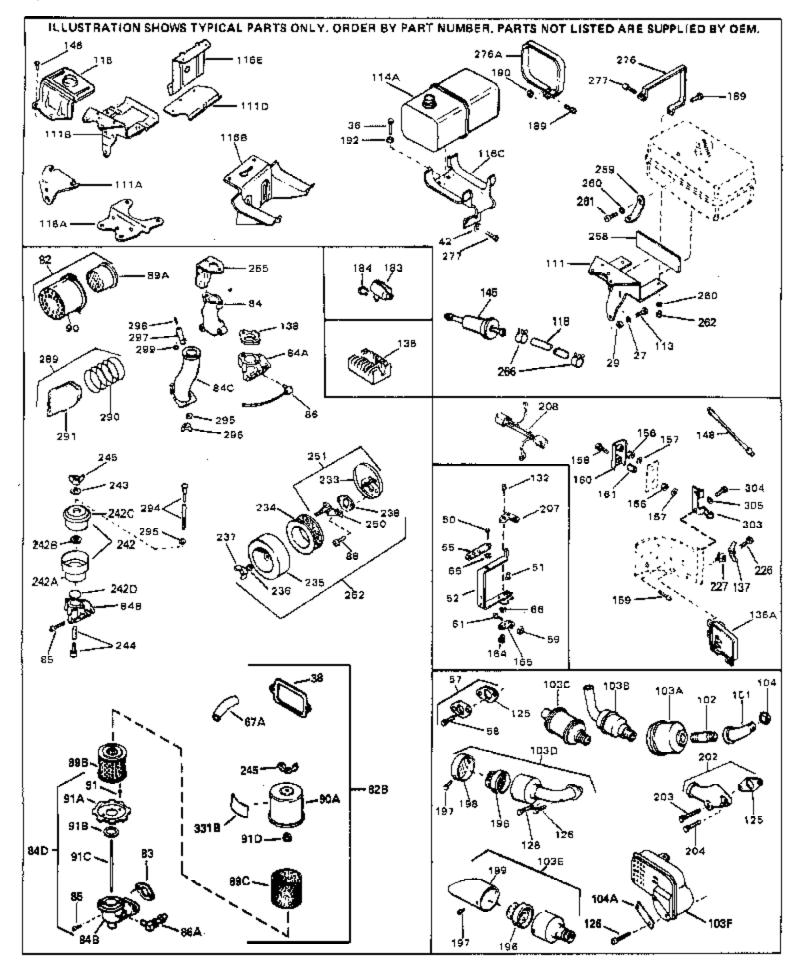

		Qty Description
27	27513	Lockwasher, 1/4" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used in early productio n)
52	32326A	Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
55	30205	Bracket, Adjusting
	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196	Screw, $5/16-18 \times 3/4$ " (Use as require d)
	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
82	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331E (Use as required)
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91
		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
83	27272A	* Gasket, Air cleaner
84D	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Us
		in 730561 assembly only)
88	28820	Screw, 10-32 x 1/2"
90	31715	Body, Air cleaner
	29574	Muffler Elbow
	32454	Muffler Nipple
	391026	Opt. Spark Arrest Muffler (Incl. 196, 197, 199)
	28443	Conduit Nut
	32862	Conduit Nut
	30063	Screw, 1/4-20 x 1/2"
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650548	Screw, 8-32 x 5/16" (Early production )
	650139	Screw, 8-32 x 1/2"
148	34067	Wire Assy., Alternator adapter (4-1/4 ")
148	34069	Wire Assy., Alternator adapter (6-3/4 ")
	31288	Exh. Adaptor Kit (Incl.125,203,204) ( As req.)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	31725A	Extension, Governor lever
	26460	Clamp, Fuel line
	32765	Clamp, Blower housing extension
	650735	Screw, 10-24 x 3/8"
	16642	Lockwasher
	31752	Decal, Air cleaner