



	Det North	<u> </u>	Description
		Qty	
	32769B		Cylinder (Incl. 2, 3, 4, 76 & 270) (2 -3/4")
	27652		Pin, Dowel
	27642		Plug, Oil drain
4	32630		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	20810		
			Pin, Valve spring retainer (Use as re quired)
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
10	34242		Dipper, Oil
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
11	32782		Crankshaft (Incl. 12 &13)
12	29783		Crankshaft Gear Pin (Early production)
	27884		Gear, Crankshaft (Used in early production) This gear is
.0	2.00.		servicable onlywhen it is pinned to the crankshaft.
4.4.0	00770D		•
	32770B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32771B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32772B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14	34528		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
14	34529		Piston, Pin & Ring Set (.010" OS)
14	34530		Piston, Pin & Ring Set (.020" OS)
15	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		
			Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31451A		Cylinder Cover (Incl.24, 106, 309, 31 0 & 311)
	28460		Seal, Oil
	31546		Bushing, Crankshaft (Use as required)
	30924A		Dipstick (Incl. 30)
26	30684		* Gasket, Cylinder cover
28	650451		Screw, 1/4-20 x 1"
30	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
39	28423		Body, Breather
40	28424		Element, Breather
	28425		Cover, Valve spring
	26073		Washer (Use as required)
	-		(

Def #	Dout Ni wak au	O+ -	Description
		Qty	Description Weeker Flot (Use as required)
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	650128		Screw, 10-24 x 1/2"
	27915A		* Gasket, Intake
	30195A		Flange, Carburetor (Incl. 79 & 80)
	30196		Screw, 5/16-18 x 3/4"
48	29716		Screw, 1/4-28 x 7/16"
50	650548		Screw, 8-32 x 5/16"
52	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	31710		Link, Throttle
	29216		Nut, Lock, 10-32
	29826		Screw, 10-32 x 3/4"
	29642		Ring, Retaining
63	30699B		Governor Rod Ass'y. (This one-piece governor rodis no longer
			used. It is replaced by 30699C ass'y.,Ref. no. 63A)
63A	30699C		Rod Assy., Governor (Incl. 64 & 65)
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29918		Lockwasher, #8 E.T.
	35350		Tube, Breather
	29747B		Screw, 5/16-24 x 21/32"
	32158E		
			Blower Housing (For elec.star.)(Incl. 134,135)
	650815		Washer, Belleville
	8116		Nut, Hex
/3	29536		Blower Housing Baffle (without electric starter knock-out)
			(Use as required)
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use
			as required) (Point Ignition)
74	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
	29752		Nut & Lockwasher Assy., 1/4-28
	650572		Screw, 1/4-28 x 1-1/8"
	730164		·
02A	730104		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
			(Use as required)
83	27272A		* Gasket, Air cleaner
	35349		Ground Wire
	28569		Spring, Compression
	29500		Screw, 8-32 x 3/4"
	29538		Base, Engine mounting
	32401		Muffler
	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor (Incl. 109)
	30588A		Spool, Governor
	30590A		Washer, Flat
			·
	29193		Ring, Retaining
	650561		Screw, 1/4-20 x 5/8"
	33350		Fuel Tank (Incl. 115 & 117A)
	410144B		Fuel Cap (White Plastic)(Std)(As requ ired)
115	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
			(Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
110	0.210		required)
			ioquiiou)

		Qty	Description
	35355		Fuel Cap (Use as required)
117A	33351		Valve, Fuel strainer & shut-off (Incl 119)
118	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
119	33679		Bushing, Fuel fitting
120	650128		Screw, 10-24 x 1/2" (Use as required)
121	30622A		Extension, Blower housing
124	650542		Screw, 5/16-18 x 3/4"
125	27930A		Gasket, Exhaust
126	30196		Screw, 5/16-18 x 3/4"
	26073		Washer (Use as required)
128	650694A		Screw, 5/16-18 x 2" (Use as required)
	32589		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	650599		Screw, 1/4-20 x 1-1/2"
	30747		Clip, Shorting
	610118		Cover, Spark plug (Use as required)
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30939A		Cover, Cylinder head
	32125		Cup, Starter
	590417		Screen, Starter cup
	26460		Clamp, Fuel line
	31461		Bushing, Crankshaft (Use as required)
	31711B		Copntrol Bracket (Incl. 98, 99 & 274)
	610973		Terminal Ass'y. (As req. on late prod uction)
	34043		Spring, Control lever
	27275		Clip, Hi-tension wire (Use as require d)
	34246		Clip, Ground wire (Use as required)
	650625		Washer, Thrust
	550223		Decal, Name
	34346		Decal, Instruction
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
	631480		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100
			for breakdown)
007	0400004		,
337	610689A		Magneto NOTE: The complete magneto is not available as
			an assembly. The magneto number is shown for reference
			purposes only. Order component parts individually, as show
			in parts list. (Refer to Division 5, Section B, page 24 for
			breakdown)
338	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for
			breakdown)
240	222201		
343	33239A		Gasket Set (Incl. items marked*)

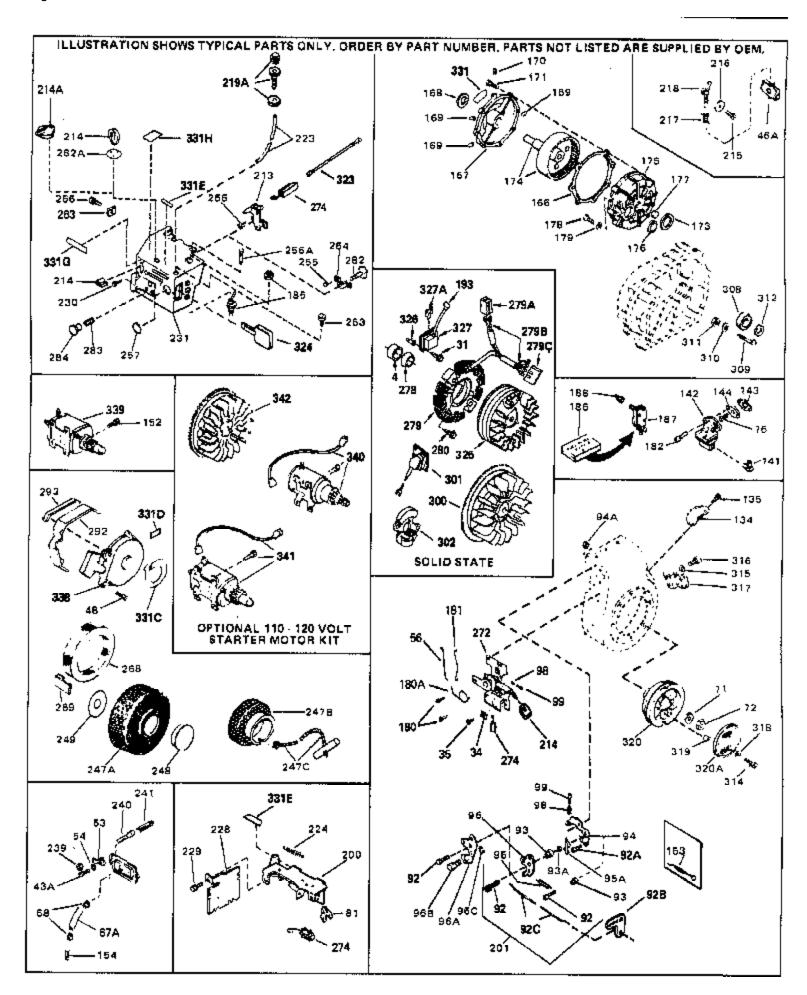

Ref #	Part Number	Qty	Description
31	650489		Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
56	31710		Link, Throttle
71	650815		Washer, Belleville
72	8116		Nut, Hex
98	28569		Spring, Compression
99	29500		Screw, 8-32 x 3/4"
193	610118		Cover, Spark plug (Use as required)
263	650764		Nut, "U" Type (Use as required)
274	610973		Terminal Ass'y. (As req. on late prod uction)
292	31680		Guard, Starter
293	32576		Seal, Snow guard
	31793		Bearing, Ball
309	31855		Retainer, Bearing
	650778		Washer, Lock
	650580		Nut, Lock
	31792		Washer, Thrust
	550223		Decal, Name
338	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for
			breakdown)
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

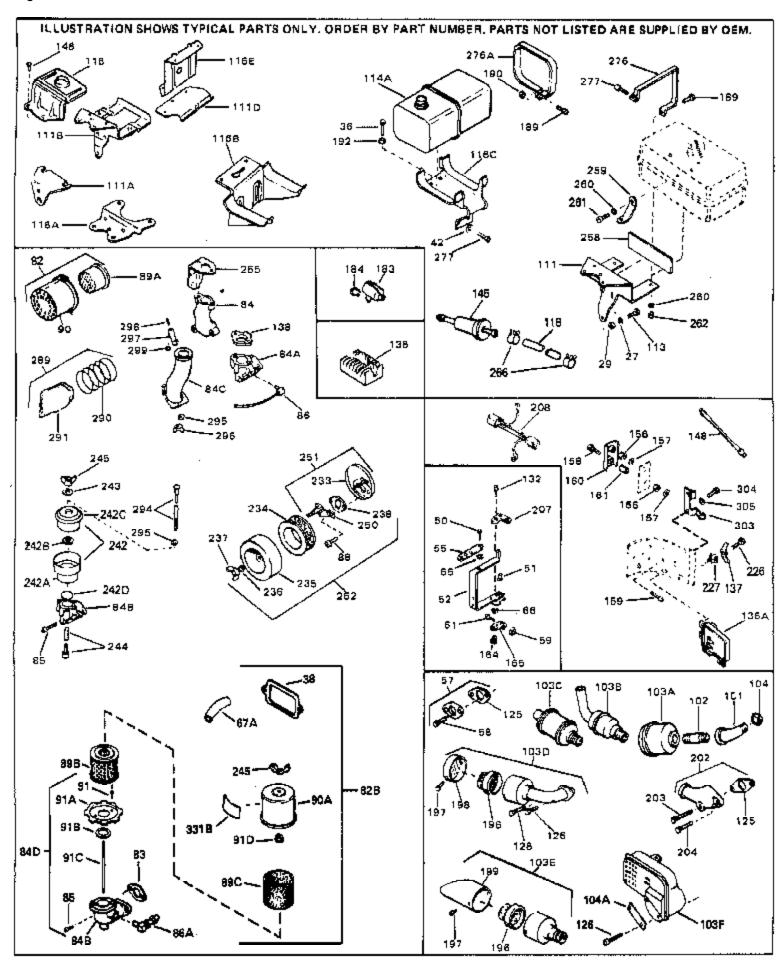

Det #	Part Number	Description
	Part Number Qty 27513	Description Leglandshor 1/4" (Lice as required)
		Lockwasher, 1/4" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
42	26073	Washer (Use as required)
42	650691	Washer, Flat (Use as required)
50	650548	Screw, 8-32 x 5/16"
51	30319	Rivet, Split (Used in early productio n)
	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
EE	20205	· · · · · · · · · · · · · · · · · · ·
	30205	Bracket, Adjusting
	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
92	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B)
OZ.	730127	(Use as required)
		(Use as required)
83	27272A	* Gasket, Air cleaner
84D	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
		in 730561 assembly only)
04D	20560	• • • • • • • • • • • • • • • • • • • •
	32560	Elbow, Air cleaner
80	29786	Screw, 10-32 x 1-5/8" NOTE: 130010 thru 10C & 11 used in
		early production only.
103E	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	33353	Bracket, Lower fuel tank
	650561	Screw, 1/4-20 x 5/8"
	33352A	Plate, Upper fuel tank mounting
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
		, , , , , , , , , , , , , , , , , , , ,
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	27930A	Gasket, Exhaust
	30196	Screw, 5/16-18 x 3/4"
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650548	Screw, 8-32 x 5/16" (Early production)
	792020	Screw, 1/4-20 x 2-1/4"
	34067	Wire Assy., Alternator adapter (4-1/4 ")
	34069	Wire Assy., Alternator adapter (6-3/4 ")
202	31288	Exh. Adaptor Kit (Incl.125,203,204) (As req.)
203	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
204	6021A	Screw, 5/16-18 x 1-1/2" (Use as requi red)
	31670	Bowl, Oil bath cleaner
	32561	Oil Bath A/C Ass'y.(Incl.242A,242B,24 2C.242D)
	31480	"O" Ring
	31479	Washer, Fiber
	31669	Cover, Oil bath cleaner
	27183	Washer, Fiber
	32562	Screw, 10-24 x 6-11/16"
	9577	Nut, Wing
∠00	26460	Clamp, Fuel line