

Page 1 of 8

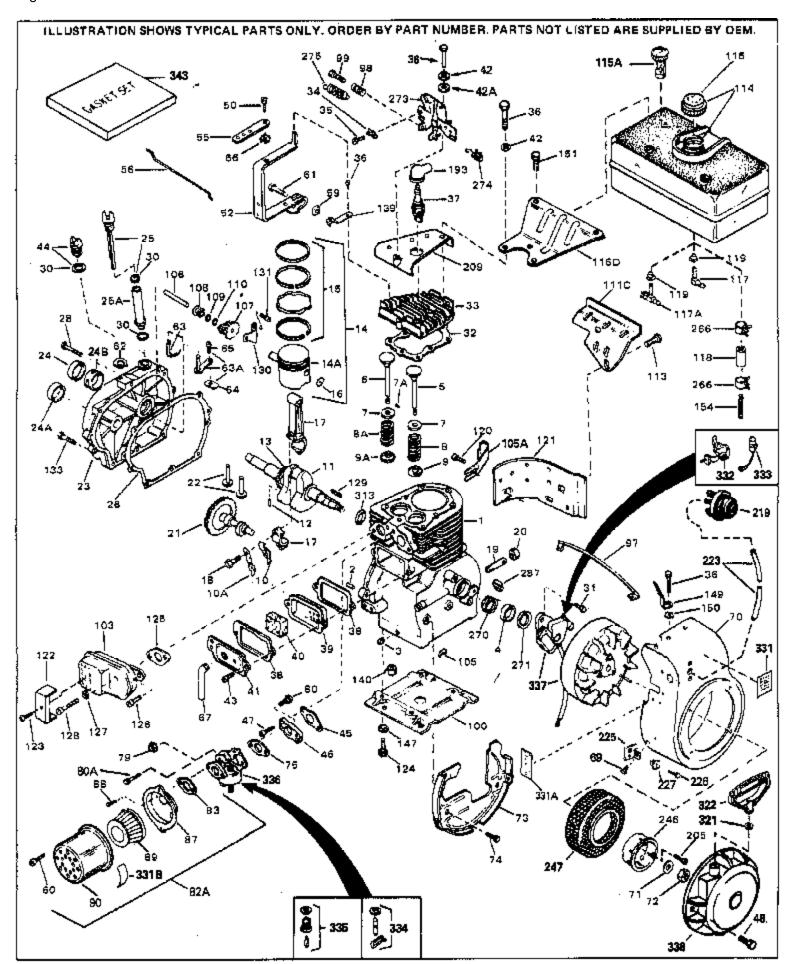


Dof #	Part Number	ty Description
	Part Number Q 32769B	ty Description Cylinder (Incl. 2, 3, 4, 76 & 270) (2 -3/4")
	27652	Pin, Dowel
		·
	27642	Plug, Oil drain
	32630	Seal, Oil
	32783	Intake Valve (Std.) (Incl. 9)
	32784	Intake Valve (1/32" OS) (Incl. 9)
	27878A	Exhaust Valve (Std.) (Incl. 9)
	27880A	Exhaust Valve (1/32" OS) (Incl. 9)
	27882	Cap, Upper valve spring
	20810	Pin, Valve spring retainer (Use as re quired)
8A	27881	Spring, Valve
8	27881	Spring, Valve
9	32581	Cap, Lower valve spring
9A	32581	Cap, Lower valve spring
10A	32590	Plate, Lock & Oil dipper (This plate may be replaced by
		34242 oil dipper but 650662C screw must be used.)
40	04040	
	34242	Dipper, Oil
	32782	Crankshaft (Incl. 12 &13)
	29783	Crankshaft Gear Pin (Early production)
13	27884	Gear, Crankshaft (Used in early production) This gear is
		servicable onlywhen it is pinned to the crankshaft.
14	34528	Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34529	Piston, Pin & Ring Set (.010" OS)
	34530	Piston, Pin & Ring Set (.020" OS)
	32770B	Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32771B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32772B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32595	Ring Set (Std.) (2-3/4" Bore)
	32596	Ring Set (.010" OS)
	32597	Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
	32591C	
		Rod Assy., Connecting (Incl. 10 & 18) Screw, Connecting rod (2 each)
	650662C	
	34082	Camshaft (MCR) (Extended)
	34034	Lifter, Valve
	32729	Cylinder Cover (Incl.24,24A,106,309,3 10,311)
	28926	Seal, Oil
	31546	Bushing, Crankshaft (Use as required)
	28460	Seal, Oil
	33893A	Tube, Oil filler
	34011A	Dipstick, Oil (Incl. 30)
	30684	* Gasket, Cylinder cover
	650451	Screw, 1/4-20 x 1"
	33590	"O" Ring
	650516	Screw, 1/4-20 x 1-1/8"
	32631A	* Gasket, Cylinder head
	30938A	Head, Cylinder
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	33636	Resistor Spark Plug (RJ-8C)
	34251	Resistor Spark Plug
	27896A	* Gasket, Breather cover
	28423	Body, Breather
	28424	Element, Breather
10		

Ref #	Part Number	Qtv De	escription
42 42 42A 43 45 46 47 48 50	28425 26073 650691 650690 650128 27915A 30195A 30196 29716 650548 32326A	Wa Wa Sc * 0 Fla Sc Sc Sc Le	over, Valve spring asher (Use as required) asher, Flat (Use as required) asher, Belleville (Use as required) asher, Belleville (Use as required) crew, 10-24 x 1/2" Gasket, Intake ange, Carburetor (Incl. 79 & 80) crew, 5/16-18 x 3/4" crew, 1/4-28 x 7/16" crew, 8-32 x 5/16" ever, Governor (New lever does not need 1 of ,66,132,164,165,207)
56 59 60 61 62 63A	30205 32327 29216 650152 29826 29642 30699C 30699B	Lir Nu Sc Sc Rir Rc Gc	acket, Adjusting nk, Throttle ut, Lock, 10-32 crew, 8-32 x 3/8" crew, 10-32 x 3/4" ng, Retaining od Assy., Governor (Incl. 64 & 65) overnor Rod Ass'y. (This one-piece governor rodis no longer ied. It is replaced by 30699C ass'y.,Ref. no. 63A)
65 66 67 69 70 71 72	30700 650494 29918 35350 29747B 32158E 650815 8116 29536	Sc Lo Tu Sc Blo Wa Nu Blo	oke, Governor crew, 6-40 x 5/16" ockwasher, #8 E.T. obe, Breather crew, 5/16-24 x 21/32" ower Housing (For elec.star.)(Incl. 134,135) oasher, Belleville out, Hex ower Housing Baffle (without electric starter knock-out) ose as required)
73	35256A		ower Housing Baffle (with electric starter knock-out) (Use required) (Point Ignition)
75 79 80 82A	650561 31688A 29752 650572 730164	* C Nu Sc Air	crew, 1/4-20 x 5/8" Gasket, Carburetor ut & Lockwasher Assy., 1/4-28 crew, 1/4-28 x 1-1/8" r Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B) se as required)
	27272A 31691	Bra	Gasket, Air cleaner acket, Air cleaner NOTE: 130010 thru 10C & 11 used in arly production only.
89 90 98 99 100 106 107 108 109 110	28820 30727 31715 28569 29500 29538 31845 30591 30588A 30590A 29193 650561 31301	Ele Bo Sp Sc Ba Sh Ge Sp Wa Rir Sc	crew, 10-32 x 1/2" ement, Air cleaner ody, Air cleaner oring, Compression crew, 8-32 x 3/4" ase, Engine mounting naft, Mechanical governor ear Assy., Governor (Incl. 109) oool, Governor asher, Flat ng, Retaining crew, 1/4-20 x 5/8" uel Tank (Incl. 115)

Ref #	Part Number	Otv	Description
	410144B	Qty	Fuel Cap (White Plastic)(Std)(As requ ired)
	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
110	00002		(Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
			required)
115	35355		Fuel Cap (Use as required)
	29683		Valve, Fuel shut-off
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	650128		Screw, 10-24 x 1/2" (Use as required)
	30622A		Extension, Blower housing
	650542		Screw, 5/16-18 x 3/4"
	26073		Washer (Use as required)
	650694A		· · · · · · · · · · · · · · · · · · ·
	32589		Screw, 5/16-18 x 2" (Use as required)
	31843A		Key, Flywheel Procket Coverger goor
	650836		Bracket, Governor gear Screw, 10-24 x 1/2"
	650599		Screw, 1/4-20 x 1-1/2"
	30747		
	610118		Clip, Shorting
	650561		Cover, Spark plug (Use as required)
	30939A		Screw, 1/4-20 x 5/8" (Use as required)
	32125		Cover, Cylinder head
	590417		Cup, Starter
			Screen, Starter cup
	26460 31461		Clamp, Fuel line
	33876		Bushing, Crankshaft (Use as required)
	610973		Gasket, Stator
	27275		Terminal Ass'y. (As req. on late prod uction)
	34246		Clip, Hi-tension wire (Use as require d) Clip, Ground wire (Use as required)
	650625		• • • • • • • • • • • • • • • • • • • •
	550223		Washer, Thrust
	34346		Decal, Name
	30547A		Decal, Instruction
	610767A		Contact Assy., Breaker Condenser
	631021		
	631453		Inlet Needle, Seat & Clip Assy.
330	031403		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100 for breakdown)
			ioi breakdowii)
337	610976		Magneto (w/ring gear) (12 Volt) (7 Am p) NOTE: The
			complete magneto is not available as an assembly. The
			magneto number is shown for reference purposes only.
			Order component parts individually, as show in parts list.
			(Refer to Division 5, Section B, page 36 for breakdown)
220	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for
330	J3U72U		breakdown)
			•
343	33239A		Gasket Set (Incl. items marked*)

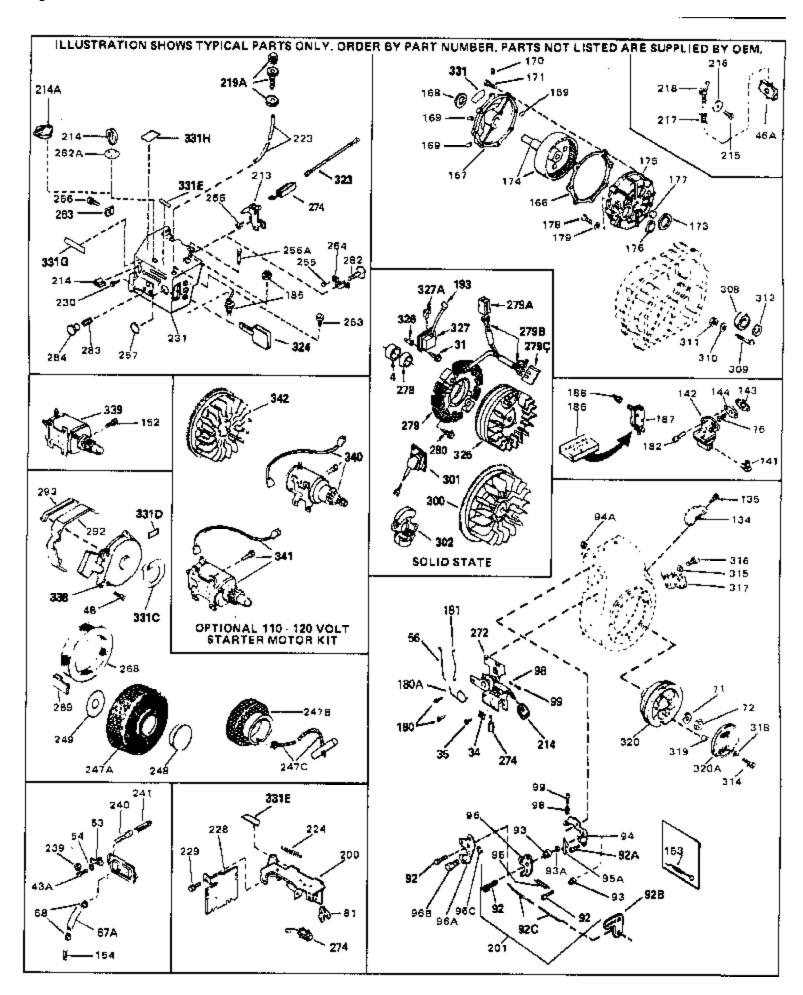

Ref #	Part Number	Qty	Description
31	650516		Screw, 1/4-20 x 1-1/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
56	32327		Link, Throttle
71	650815		Washer, Belleville
72	8116		Nut, Hex
98	28569		Spring, Compression
99	29500		Screw, 8-32 x 3/4"
193	610118		Cover, Spark plug (Use as required)
239	33450		Nut, Lock
240	30845A		Bolt, Governor adjusting
263	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	31793		Bearing, Ball
	31855		Retainer, Bearing
	650778		Washer, Lock
	650580		Nut, Lock
	31792		Washer, Thrust
	550223		Decal, Name
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for
			breakdown)
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

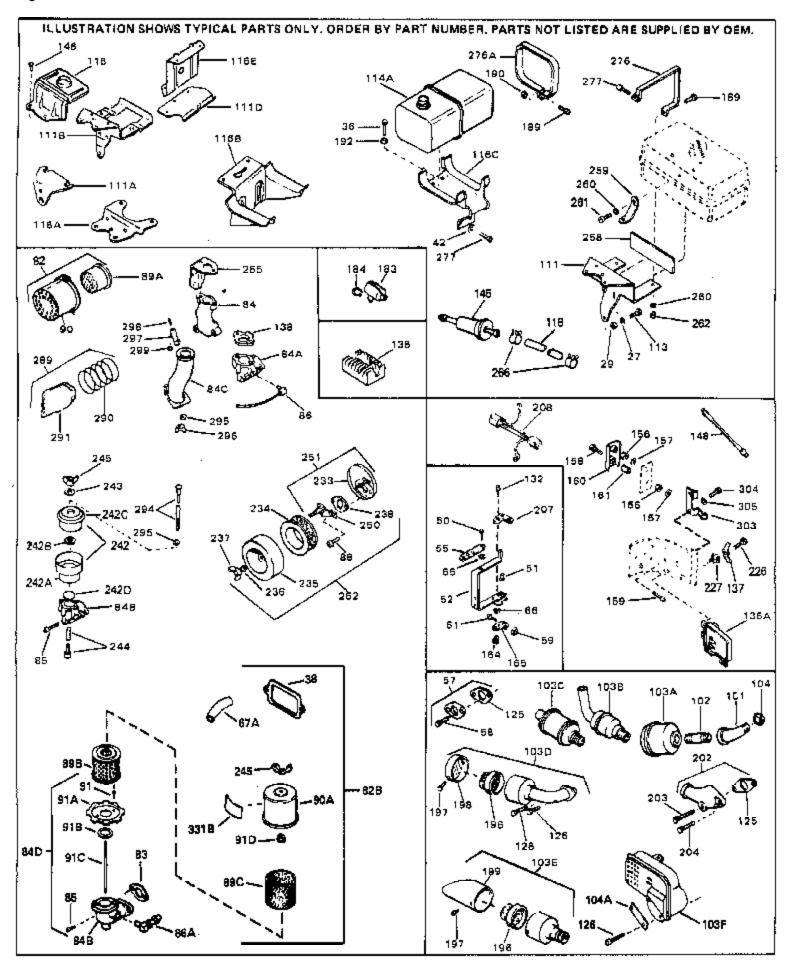

Ref #	Part Number	Qty	Description
27 36 36 36 38 42 42 50 51	27513 650697A 650695A 650694A 27896A 26073 650691 650548 30319 32326A	.,	Lockwasher, 1/4" (Use as required) Screw, 5/16-18 x 2-1/2" (Use as requi red) Screw, 5/16-18 x 2-1/4" (Use as requi red) Screw, 5/16-18 x 2" (Use as required) * Gasket, Breather cover Washer (Use as required) Washer, Flat (Use as required) Screw, 8-32 x 5/16" Rivet, Split (Used in early productio n) Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
57 58 59 61 66	30205 730130 30196 29216 29826 29918 730561		Bracket, Adjusting Exh.Adap.Kit (Incl. 58 & 125) (Use as req.) Screw, 5/16-18 x 3/4" (Use as require d) Nut, Lock, 10-32 Screw, 10-32 x 3/4" Lockwasher, #8 E.T. Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91, 91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with an externally vented fully adjustable carburetor)
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B) (Use as required)
	27272A 34819		* Gasket, Air cleaner Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use in 730561 assembly only)
90 101 103E 104 111 113 118 118 128 132 136A 148 148 189 202 203 204 262 266 276 277 303	28820 31715 29574 391026 32862 31694 650561 29774 30705 30962 650694A 650548 610938 34067 34069 6201 31288 650697A 6021A 29752 26460 31697 29212 32765		Screw, 10-32 x 1/2" Body, Air cleaner Muffler Elbow Opt. Spark Arrest Muffler (Incl.196,1 97,199) Conduit Nut Bracket, Fuel tank Screw, 1/4-20 x 5/8" Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 5/16-18 x 2" (Use as required) Screw, 8-32 x 5/16" (Early production) Regulator, Rectifier (7Amp) Wire Assy., Alternator adapter (4-1/4") Wire Assy., Alternator adapter (6-3/4") Screw, 1/4-28 x 7/8" Exh. Adaptor Kit (Incl.125,203,204) (As req.) Screw, 5/16-18 x 2-1/2" (Use as required) Nut, Lock Clamp, Fuel line Strap, Fuel tank Screw, Hex hd. Sems, 1/4-28 x 7/16 Clamp, Blower housing extension
304	28820		Screw, 10-32 x 1/2"