



	D. (N. I.	<u> </u>	
		Qty	
	32769B		Cylinder (Incl. 2, 3, 4, 76 & 270) (2 -3/4")
	27652		Pin, Dowel
3	27642		Plug, Oil drain
4	32630		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
5	32784		Intake Valve (1/32" OS) (Incl. 9)
	31469A		Exhaust Valve (Std.) (Incl. 9)
	31470A		Exhaust Valve (1/32" OS) (Incl. 9)
	20810		Pin, Valve spring retainer (Use as re quired)
	27882		Cap, Upper valve spring
	27881		
			Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	34242		Dipper, Oil
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
11	34895		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production )
	27884		Gear, Crankshaft (Used in early production) This gear is
10	21004		servicable onlywhen it is pinned to the crankshaft.
			servicable of hywrien it is pillified to the Galikshalt.
	32770B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32771B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	32772B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14	34528		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
14	34529		Piston, Pin & Ring Set (.010" OS)
14	34530		Piston, Pin & Ring Set (.020" OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		, , ,
			Camshaft (MCR)
	34034		Lifter, Valve
	31451A		Cylinder Cover (Incl.24, 106, 309, 31 0 & 311)
	31546		Bushing, Crankshaft (Use as required)
	28460		Seal, Oil
	31297		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650451		Screw, 1/4-20 x 1"
30	29673		* Gasket, Oil filler
31	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		·
			Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
42	26073		Washer (Use as required)

Det #	Dord M. wels on	O4 -	Description
		Qty	Description
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
43	650128		Screw, 10-24 x 1/2"
45	27915A		* Gasket, Intake
46	34712		Flange Carburetor
	30196		Screw, 5/16-18 x 3/4"
	29716		Screw, 1/4-28 x 7/16"
	650548		Screw, 8-32 x 5/16"
			•
	33454		Lever Assy., Governor
	34662		Link, Throttle
	29216		Nut, Lock, 10-32
	29826		Screw, 10-32 x 3/4"
62	29642		Ring, Retaining
63	30699B		Governor Rod Ass'y. (This one-piece governor rodis no longer
			used. It is replaced by 30699C ass'y.,Ref. no. 63A)
63A	30699C		Rod Assy., Governor (Incl. 64 & 65)
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29918		Lockwasher, #8 E.T.
	29747B		Screw, 5/16-24 x 21/32"
			•
	32158E		Blower Housing (For elec.star.)(Incl. 134,135)
	650815		Washer, Belleville
72	8116		Nut, Hex
73	29536		Blower Housing Baffle (without electric starter knock-out)
			(Use as required)
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)
			as required) (if offiction)
74	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
	650517		Screw, 1/4-20 x 27/32"
	730164		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
OZA	730104		
			(Use as required)
83	27272A		* Gasket, Air cleaner
	35182		Ground Wire
	31342		
			Spring, Compression
	650549		Screw, 5-40 x 7/16"
	29538		Base, Engine mounting
	32401		Muffler
106	31845		Shaft, Mechanical governor
107	30591		Gear Assy., Governor (Incl. 109)
108	30588A		Spool, Governor
	30590A		Washer, Flat
	29193		Ring, Retaining
	34158		Bracket, Fuel tank
			•
	650561		Screw, 1/4-20 x 5/8"
	410144B		Fuel Cap (White Plastic)(Std)(As requ ired)
115	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
			(Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
	05055		required)
	35355		Fuel Cap (Use as required)
116D	34159		Plate, Fuel tank mounting
118	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
. 10	<del>-</del>		

Ref #	Part Number	Qty	Description
120	650128	•	Screw, 10-24 x 1/2" (Use as required)
121	30622A		Extension, Blower housing
124	650542		Screw, 5/16-18 x 3/4"
125	27930A		Gasket, Exhaust
126	30196		Screw, 5/16-18 x 3/4"
127	26073		Washer (Use as required)
128	650694A		Screw, 5/16-18 x 2" (Use as required)
129	32589		Key, Flywheel
130	31843A		Bracket, Governor gear
131	650836		Screw, 10-24 x 1/2"
133	650599		Screw, 1/4-20 x 1-1/2"
149	30747		Clip, Shorting
150	650890		Lockwasher
151	650665		Screw, 1/4-15 x 7/8"
193	610118		Cover, Spark plug (Use as required)
205	650561		Screw, 1/4-20 x 5/8" (Use as required )
209	30939A		Cover, Cylinder head
246	32125		Cup, Starter
247	35009		Screen, Starter cup
266	26460		Clamp, Fuel line
270	31461		Bushing, Crankshaft (Use as required)
271	33876		Gasket, Stator
274	610973		Terminal Ass'y. (As req. on late prod uction)
287	27275		Clip, Hi-tension wire (Use as require d)
287	34246		Clip, Ground wire (Use as required)
313	650625		Washer, Thrust
331	34768		Decal, Name
	34346		Decal, Instruction
331B	34704		Decal, Air cleaner
332	30547A		Contact Assy., Breaker
	30548B		Condenser
334	631021		Inlet Needle, Seat & Clip Assy.
336	632201		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 176 for breakdown)
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
343	33239A		Gasket Set (Incl. items marked*)

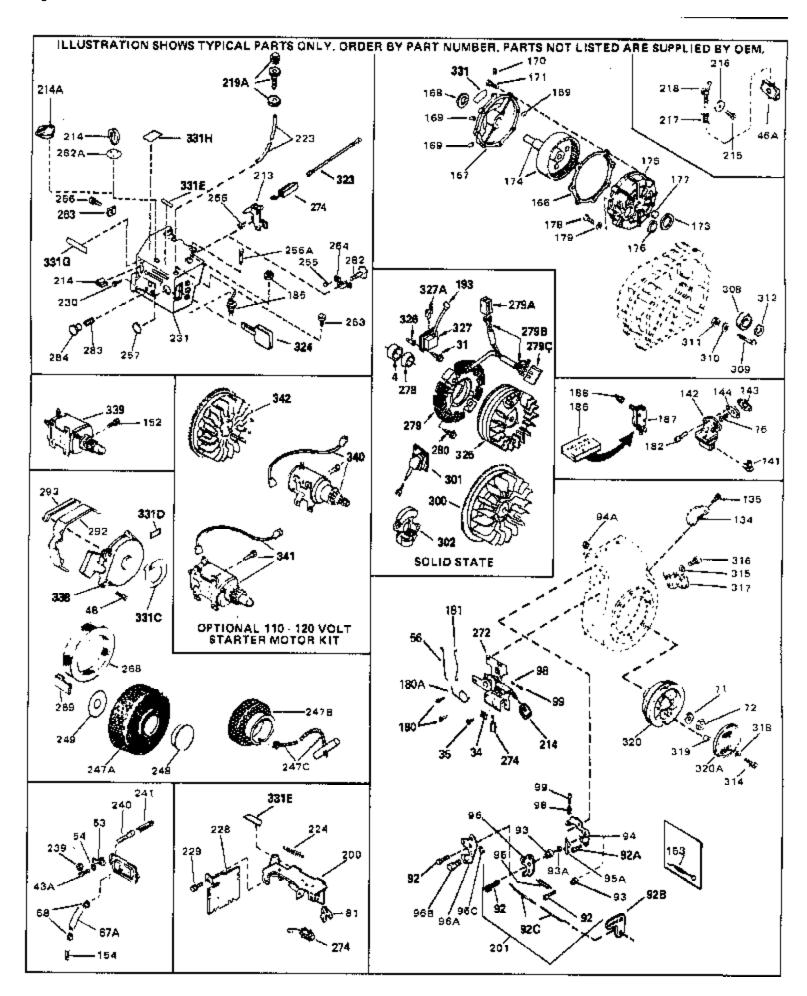

Ref #	Part Number Qty	Description
	650489	Screw, 1/4-20 x 5/8"
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
	29716	Screw, 1/4-28 x 7/16"
	34662	Link, Throttle
	32447	Tube, Breather
	32446	Grommet, Breather tube
	650815	·
		Washer, Belleville
	8116	Nut, Hex
	9556	Plug, Pipe, 1/8-27
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	33013	Cover, Bubble
	650760	Screw, 8-32 x 3/8"
	650821	Screw, 10-32 x 1/2"
	34663	Spring, Speed control
181	34661	Link, Governor
193	610118	Cover, Spark plug (Use as required)
214	32410	Knob, Speed control
263	650764	Nut, "U" Type (Use as required)
272	34677	Control Bracket (Incl. 98, 99, 180A & 274)
274	610973	Terminal Ass'y. (As req. on late prod uction)
308	31793	Bearing, Ball
	31855	Retainer, Bearing
	650778	Washer, Lock
	650580	Nut, Lock
	31792	Washer, Thrust
	35344	Decal, Control
	34768	Decal, Name
	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
330	330420	breakdown)
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042	Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

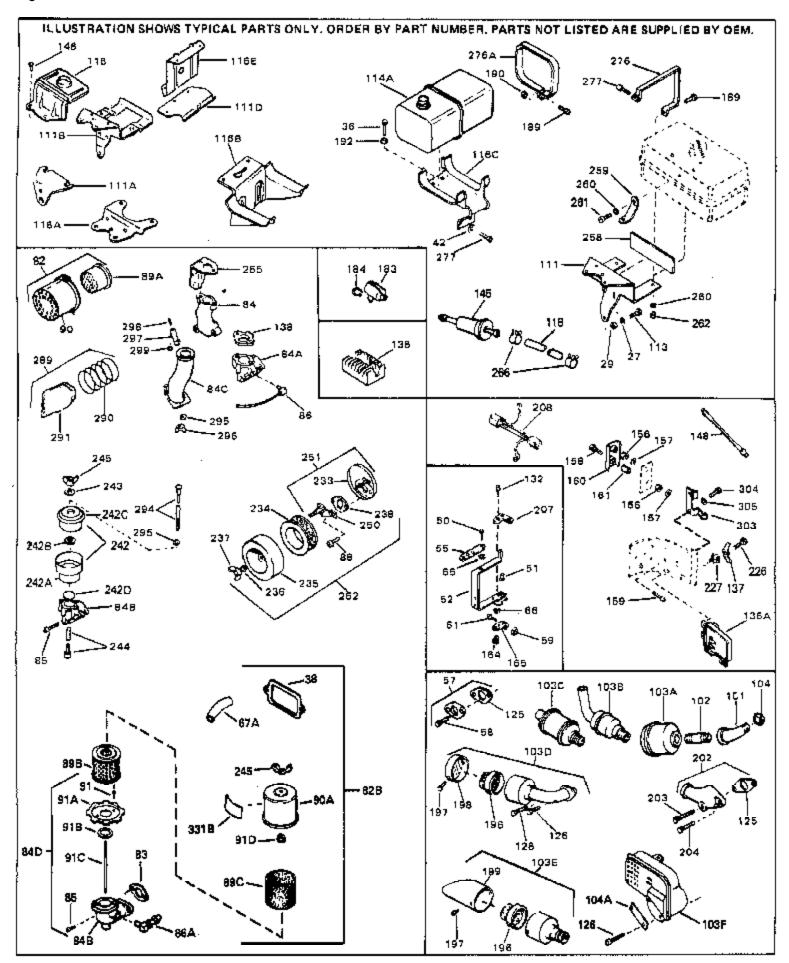

D.(#	Drd N. od cr	Desiration
		y Description
	27513	Lockwasher, 1/4" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650548	Screw, 8-32 x 5/16"
51	30319	Rivet, Split (Used in early productio n)
52	33454	Lever Assy., Governor
57	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
58	30196	Screw, 5/16-18 x 3/4" (Use as require d)
59	29216	Nut, Lock, 10-32
61	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	32447	Tube, Breather
	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B)
<b>02</b>	700121	(Use as required)
		(Osc as required)
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
02	27272A	* Cacket Air doaner
		* Gasket, Air cleaner
	34780	Elbow, Air cleaner
0 <del>4</del> D	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
		in 730561 assembly only)
85	650163	Screw, 10-32 x 7/8"
86A	30675	Fitting, Breather NOTE: 130010 thru 10C & 11 used in early
		production only.
000	24702	Filter Dre ein
	34783	Filter, Pre-air
	34782	Air Cl. Filter & Bracket Assy. (Incl. 91D)
	34781	Cover, Air cleaner
	650825	Nut & Lockwasher, 1/4-20
	34699	Bracket, Air cleaner
91		Pop Rivet (1/8" dia.) (Can be bought locally)
	34698A	Gasket, Air cleaner
	650826	Stud, 1/4-20 x 6.20, threaded both en ds
	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	650561	Screw, 1/4-20 x 5/8"
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
125	27930A	Gasket, Exhaust
126	30196	Screw, 5/16-18 x 3/4"
128	650694A	Screw, 5/16-18 x 2" (Use as required)
132	650548	Screw, 8-32 x 5/16" (Early production)
	34067	Wire Assy., Alternator adapter (4-1/4 ")
	34069	Wire Assy., Alternator adapter (6-3/4 ")
	30322	Nut & Lockwasher (Early Prod. Only)
	29916	Clamp, Governor lever (Early Prod. On ly)
	31288	Exh. Adaptor Kit (Incl.125,203,204) ( As req.)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	650513	Nut, Wing
	26460	Clamp, Fuel line
	34704	Decal, Air cleaner
3310	J-1/U1	Deval, All Oleane