


Ref #	Part Number Qty	Description
1	32769B	Cylinder (Incl. 2, 3, 4, 76 & 270) (2 -3/4")
2	27652	Pin, Dowel
3	27642	Plug, Oil drain
	32630	Seal, Oil
	32783	Intake Valve (Std.) (Incl. 9)
	32784	Intake Valve (1/32" OS) (Incl. 9)
	27878A	Exhaust Valve (Std.) (Incl. 9)
	27880A	Exhaust Valve (1/32" OS) (Incl. 9)
7A	20810	Pin, Valve spring retainer (Use as re quired)
7	27882	Cap, Upper valve spring
8	27881	Spring, Valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	32581	Cap, Lower valve spring
	34242	Dipper, Oil
10A	32590	Plate, Lock & Oil dipper (This plate may be replaced by
		34242 oil dipper but 650662C screw must be used.)
11	34896	Crankshaft (Incl. 12 & 13)
	29783	Crankshaft Gear Pin (Early production)
	27884	Gear, Crankshaft (Used in early production) This gear is
15	27004	
		servicable onlywhen it is pinned to the crankshaft.
14A	32770B	Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32771B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32772B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34528	Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34529	• • • • • • •
		Piston, Pin & Ring Set (.010" OS)
	34530	Piston, Pin & Ring Set (.020" OS)
	32595	Ring Set (Std.) (2-3/4" Bore)
	32596	Ring Set (.010" OS)
15	32597	Ring Set (.020" OS)
16	27888	Ring, Piston pin retaining
	32591C	Rod Assy., Connecting (Incl. 10 & 18)
	650662C	Screw, Connecting rod (2 each)
	32115	Camshaft (MCR)
	34034	Lifter, Valve
	31451A	Cylinder Cover (Incl.24, 106, 309, 31 0 & 311)
	31546	Bushing, Crankshaft (Use as required)
24	28460	Seal, Oil
25	31297	Dipstick, Oil (Incl. 30)
	30684	* Gasket, Cylinder cover
	650451	Screw, 1/4-20 x 1"
	29673	* Gasket, Oil filler
	650489	Screw, 1/4-20 x 5/8"
	32631A	* Gasket, Cylinder head
	30938A	Head, Cylinder
34	27793	Clip, Conduit (Use as required)
35	28942	Screw, 10-32 x 3/8" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	33636	Resistor Spark Plug (RJ-8C)
	34251	Resistor Spark Plug
	27896A	* Gasket, Breather cover
38	00.400	Body, Breather
	28423	DOUY, DIEalliei
39	28423 28424	
39 40	28424	Element, Breather
39 40 41		-

		Oty Description
	650691	Washer, Flat (Use as required)
42A	650690	Washer, Belleville (Use as required)
43	650128	Screw, 10-24 x 1/2"
	27915A	* Gasket, Intake
	34712	Flange Carburetor
	30196	Screw, 5/16-18 x 3/4"
	29716	Screw, 1/4-28 x 7/16"
	650548	Screw, 8-32 x 5/16"
	33454	Lever Assy., Governor
	34662	Link, Throttle
	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
62	29642	Ring, Retaining
63A	30699C	Rod Assy., Governor (Incl. 64 & 65)
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
66	29918	Lockwasher, #8 E.T.
69	29747B	Screw, 5/16-24 x 21/32"
70	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
71	650815	Washer, Belleville
	8116	Nut, Hex
	29536	Blower Housing Baffle (without electric starter knock-out)
10	25550	(Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)
74	CE0EC1	
	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	650517	Screw, 1/4-20 x 27/32"
82A	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B) (Use as required)
83	27272A	* Gasket, Air cleaner
98	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	29538	Base, Engine mounting
	32401	Muffler
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	Ring, Retaining
	34158	Bracket, Fuel tank
113	650561	Screw, 1/4-20 x 5/8"
116D	34159	Plate, Fuel tank mounting
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650128	Screw, 10-24 x $1/2$ " (Use as required)
	30622A	Extension, Blower housing
	650542	Screw, 5/16-18 x 3/4"
125	27930A	Gasket, Exhaust
	30196	Screw, 5/16-18 x 3/4"
126		,
	26073	Washer (Use as required)
127		

Ref #	Part Number Qty	Description
130	31843A	Bracket, Governor gear
131	650836	Screw, 10-24 x 1/2"
133	650599	Screw, 1/4-20 x 1-1/2"
149	30747	Clip, Shorting
150	650890	Lockwasher
151	650665	Screw, 1/4-15 x 7/8"
193	610118	Cover, Spark plug (Use as required)
205	650561	Screw, 1/4-20 x 5/8" (Use as required)
209	30939A	Cover, Cylinder head
246	32125	Cup, Starter
247	35009	Screen, Starter cup
266	26460	Clamp, Fuel line
270	31461	Bushing, Crankshaft (Use as required)
271	33876	Gasket, Stator
274	610973	Terminal Ass'y. (As req. on late prod uction)
287	27275	Clip, Hi-tension wire (Use as require d)
287	34246	Clip, Ground wire (Use as required)
313	650625	Washer, Thrust
331A	34346	Decal, Instruction
331B	34704	Decal, Air cleaner
331	34768	Decal, Name
332	30547A	Contact Assy., Breaker
333	30548B	Condenser
334	631021	Inlet Needle, Seat & Clip Assy.
336	632201	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 176
		for breakdown)
007	C14020	Magnete NOTE: The complete magnete is not evaluable as
337	611038	Magneto NOTE: The complete magneto is not available as
		an assembly. The magneto number is shown for reference
		purposes only. Order component parts individually, as show
		in parts list. (Refer to Division 5, Section B, page 39 for
		breakdown)
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
		breakdown)
040	222201	
343	33239A	Gasket Set (Incl. items marked*)



20 x 5/8" it (Use as required) :2 x 3/8" (Use as required) :4 x 1/2" 28 x 7/16" e her Breather tube sector tube
2 x 3/8" (Use as required) 4 x 1/2" 28 x 7/16" e her Breather tube illeville
4 x 1/2" 28 x 7/16" e her Breather tube lleville
28 x 7/16" e her Breather tube Illeville
e her Breather tube Ileville
her Breather tube Ileville
Breather tube Ileville
lleville
npression
x 7/16"
2 x 1/2"
ed control
nor
k plug (Use as required)
be (Use as required)
cket (Incl. 98, 99, 180A & 274)
s'y. (As req. on late prod uction)
H
earing
ck
rust
e
ter (Refer to Division 5, Section C, page 25 for
or Kit (110-120 Volt) This 110-120 volt starter
ay have been added to this engine. It can be
if cylinder hasdrilled and tapped starter mounting
a ring gear flywheel (see#342). Refer to service
nped on end cap of motor, or on decal, for
ing gear flywheel requiredon engines using
t starter kits listed above)
sed on Type letters H and above) (Std. Point
g gear flywheel required on engines using
t starter kits listed above)
,
linimum ring gear flywheel required on engines
20 volt starter kits listed above) (Use withSolid
n)

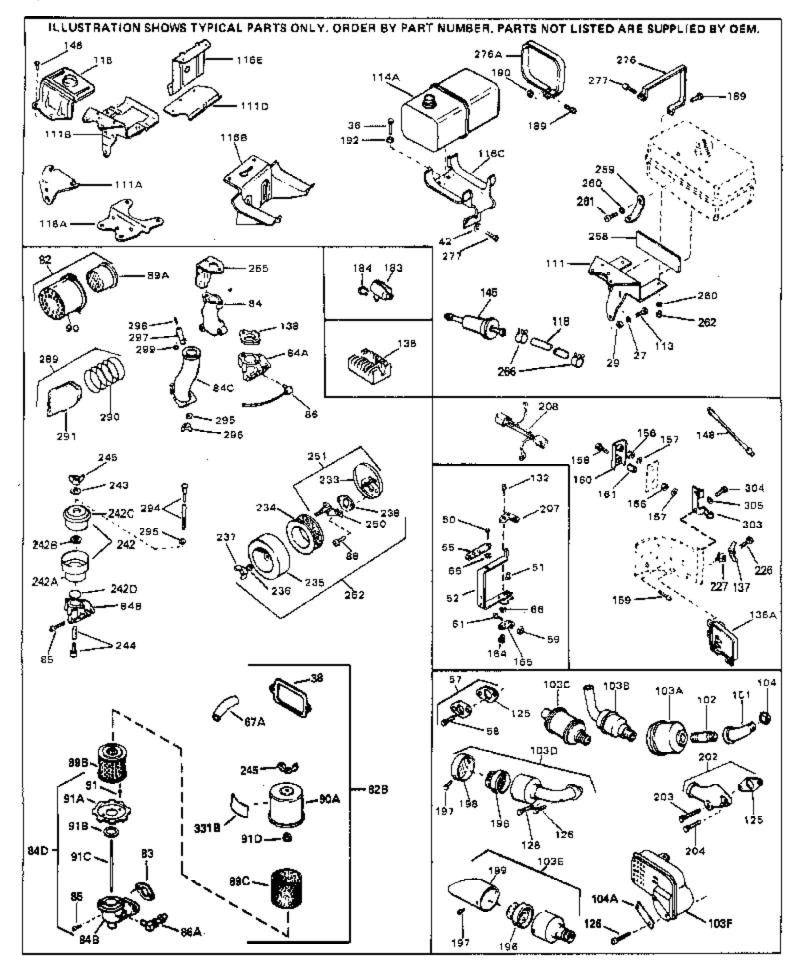

		Qty Description
27	27513	Lockwasher, 1/4" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	26073	•
		Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650548	Screw, 8-32 x 5/16"
51	30319	Rivet, Split (Used in early productio n)
52	33454	Lever Assy., Governor
	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196	Screw, $5/16-18 \times 3/4"$ (Use as require d)
	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
67A	32447	Tube, Breather
82	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B
		(Use as required)
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
		, , , ,
83	27272A	* Gasket, Air cleaner
84B	34780	Elbow, Air cleaner
84D	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
		in 730561 assembly only)
85	650163	Screw, 10-32 x 7/8"
86A	30675	Fitting, Breather NOTE: 130010 thru 10C & 11 used in early
		production only.
	34783	Filter, Pre-air
89B	34782	Air Cl. Filter & Bracket Assy. (Incl. 91D)
90A	34781	Cover, Air cleaner
	650825	Nut & Lockwasher, 1/4-20
	34699	Bracket, Air cleaner
	34033	
91	0.4000.4	Pop Rivet (1/8" dia.) (Can be bought locally)
	34698A	Gasket, Air cleaner
91C	650826	Stud, 1/4-20 x 6.20, threaded both en ds
103E	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
113	650561	Screw, 1/4-20 x 5/8"
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 10) (41 cm) (Use as req.)
	27930A	Gasket, Exhaust
126	30196	Screw, 5/16-18 x 3/4"
128	650694A	Screw, 5/16-18 x 2" (Use as required)
132	650548	Screw, 8-32 x 5/16" (Early production)
	34067	Wire Assy., Alternator adapter (4-1/4 ")
	34069	
		Wire Assy., Alternator adapter (6-3/4 ")
	30322	Nut & Lockwasher (Early Prod. Only)
	29916	Clamp, Governor lever (Early Prod. On ly)
202	31288	Exh. Adaptor Kit (Incl.125,203,204) (As req.)
202	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
203		Screw $5/16-18 \times 1-1/2$ " (Lise as required)
203 204	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
203 204 245	6021A 650513	Nut, Wing
203 204 245 266	6021A	