

Ref #	Part Number	Otv	Description
	32769B	Qty	Cylinder (Incl. 2, 3 & 4) (2-3/4" Bor e)
	27652		Pin, Dowel
	27642		Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (3td.) (Incl. 9)
	27878A		
			Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	34242		Dipper, Oil
	35215		Crankshaft
	29783		Crankshaft Gear Pin (Used on early pr od.)
	27884		Gear, Crankshaft (Used on early production)
	32770B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32771B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32772B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34528		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34529		Piston, Pin & Ring Set (.010" OS)
	34530		Piston, Pin & Ring Set (.020" OS)
15	32595		Ring Set (Std.) (2-3/4" Bore)
15	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
16	27888		Ring, Piston pin retaining
17	32591C		Rod Assy., Connecting (Incl. 10 & 18)
18	650662C		Bolt, Connecting rod (2 each)
21	32115		Camshaft (MCR)
22	34034		Lifter, Valve
23	31451A		Cylinder Cover (Incl.24, 106, 178, 17 9 & 180)
24	28460		Seal, Oil
25	31297		Dipstick (Incl. 30)
27	30684		* Gasket, Cylinder cover
	650451		Screw, 1/4-20 x 1"
	29673		* Gasket, Oil fill
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	27896A		* Gasket, Breather
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	650128		Screw, 10-24 x 1/2"
	27915A		* Gasket, Intake
	34712		Flange, Carburetor
	30196		Screw, 5/16-18 x 3/4"
	29716		·
			Screw, 1/4-28 x 7/16" Screw, 8-32 x 5/16"
	650548 33454		Screw, 8-32 x 5/16"
	33454		Lever Assy., Governor
	34662 730130		Link, Throttle  Exhaust Adaptor Kit (Incl 58 125) (As reg.)
3/	730130		Exhaust Adaptor Kit (Incl.58,125) (As req.)

		ty Description
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	29216	Locknut, 10-32
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
63	30699C	Rod, Governor (Incl. 64 & 65)
64	30700	Yoke, Governor
65	650494	Screw, 6-40 x 5/16"
66	29918	Washer, Lock #8 E.T.
67A	32447	Tube, Breather
68	32446	Grommet, Breather tube
	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Housing (For elec.strt.)(Incl. 134,135)
	650815	Washer, Belleville
	8116	Nut, Hex
	29536	Blower Housing Baffle (Without electric starter knock-out)
70	20000	(Use as required)
		(Osc as required)
73	35256A	Blower Housing Baffle (With electric starter knock-out) (Use
		as required)
72	35326	Pofflo Player housing
		Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	34443A	Solid State Assy. (Incl. 146)
	650872	Stud, Solid state mounting
	611089	Flywheel (7 amp, w/ring gear)
	611097	Alternator Coil (7 amp DC)(Incl.122,1 23,123A)
	650873	Screw, 1/4-20 x 3/4"
	650517	Screw, 1/4-20 x 27/32"
82	730561	Air Cleaner Kit (Incl. 38, 67A, 68, 83, 84A,85, 87, 88, 89, 156
		& 190A) (Use only on engines with an externally vented fully
		adjustable carburetor)
83	27272A	* Gasket, Air cleaner
	34819	Elbow Assy., Air cleaner (Incl. 84, 90, 91, 92 & 92A)(Use in
04/1	34019	730561 assy. only)
		730301 assy. Only)
84	34780	Elbow, Air cleaner
85	650163	Screw, 10-32 x 7/8"
86	30675	Fitting, Breather
	34782	Filter, Air cleaner (Incl. 93)
	34783	Filter, Pre-air
	34781	Cover, Air cleaner
	34699	Bracket, Air cleaner
	34698A	Gasket
92A	0.1000, 1	Pop Rivet (1/8" dia.) (Can be bought locally)
	650826	Stud, 1/4-20 x 6.20 threaded
	650825	Nut & Lockwasher, 1/4-20
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	29538	
		Base, Engine mounting
	650542	Screw, 5/16-18 x 3/4"  Muttler (Incl. 183, 184, 8, 185) (This poorly arrester muttler con
103A	391026	Muffler (Incl. 183, 184 & 185) (Thisspark arrester muffler can
		be used on any model)
103	32401	Muffler
	34246	Clip, Ground wire (Use as required)
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor
	30588A	Spool, Governor
100		-r,

	Death when	Describer
	Part Number Qt	
	35479	Washer, Flat
	29193	Ring, Retaining
	34158	Bracket, Fuel tank mounting
	34159	Plate, Fuel tank mounting
	650561	Screw, 1/4-20 x 5/8"
114	34186A	Fuel Tank (Incl. 115 & 168) NOTE: These tanks were built
		with different size fuel inlet openings. Tanks with the 1-3/16"
		I.D. opening use fuel cap 33032 or 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
115	410144B	Fuel Cap (White Plastic) (Std)(Use as req.)
	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
110	33002	required)
115	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required)
115	35355	Fuel Cap (Red Plastic) (Use as requir ed)
	29774	Fuel Line (Braided 8-1/4")(21 cm)(As req.)
	30962 650874	Fuel Line (Braided 32")(81 cm)(Use as req.)
	650874	Screw, 10-32 x 15/32"
	611098	Regulator (7 amp D.C.)
	650128	Screw, 10-24 x 1/2"
	30622A	Extension, Blower housing
	610922	Terminal
	610824	Connector Body
	610921	Connector Body
	35189	Spacer, Coil Assy.
	27930A	* Gasket, Exhaust
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer, Flat
	650694A	Screw, 5/16-18 x 2"
	32589	Key, Flywheel
130	31843A	Bracket, Governor gear
131	650836	Screw, 10-24 x 1/2"
133	650599	Screw, 1/4-20 x 1-1/2"
140	650665	Screw, 1/4-15 x 7/8"
141	30322	Locknut, 8-32
142	29916	Clamp, Governor lever
143	650821	Screw, 10-32 x 1/2"
144	34663	Spring, Speed control
145	34661	Link, Governor
146	610118	Cover, Spark plug (Use as required)
147	30939A	Cover Assy., Cylinder
	650513	Nut, Wing
	32125	Cup, Starter
	35009	Screen, Starter
	26460	Clamp, Fuel line (Use as required)
	31461	Bushing, Crankshaft
	34664	Control Bracket (Incl. 98, 99, 144 & 172)
	610973	Terminal Assy. (Use as required)
	31793	Bearing, Ball
	31855	Retainer, Bearing
	650778	Washer, E.T. w/sealing compound
	650580	Locknut
	31792	Washer, Thrust
	650625	Washer, Thrust
		·
	33323 650579	Screen, Muffler (Use as required)
184	650578	Screw, 8-18 x 3/8" (Use as required)

Ref #	Part Number	Qty	Description
	33700		Cover & Tube, Muffler (Use as require d)
	30063		Screw, 1/4-20 x 1/2"
188B	32204		Bracket, Starter air cleaner Can be used on H70 with stamped steel starter
188C	34870		Decal, Instruction Can be used on H70 with stamped steel starter
188A	32203		Air Cleaner, Starter Can be used on H70 with stamped steel starter
188	730571		Starter Muff Kit (Incl.188A,188B & 18 8C) Can be used on H70 with stamped steel starter
190A	34704		Decal, Air cleaner
190	35532		Decal, Name
	34346		Decal, Instruction
	631021		Inlet Needle, Seat & Clip Assy.
195	632201		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 176 for breakdown)
197	590420A		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
198	33606		Electric Starter Motor (12 Volt) (Refer to Division 5, Section C, page 20 for breakdown)
199	611042		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above) (For use with Std. point ignition)
199	611085		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above) (For use with solid state ignition)
200	33239A		Gasket Set (Incl. items marked*)