
ILLUSTRATION SHOWS TYPICAL PARTS ONLY, ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEM.

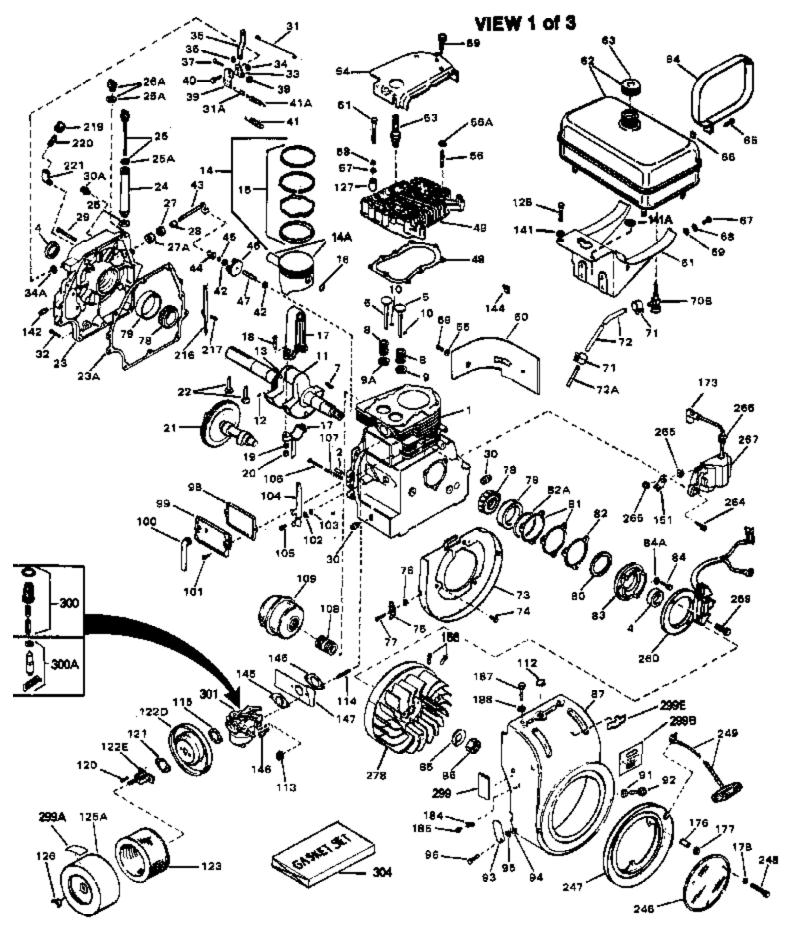


Ref #	Part Number	Qty	Description
1	33039		Cylinder (Incl.2,4,30,47,119) (3-5/16 ")
2	27652		Pin, Dowel
4	31950		Seal, Oil
5	31940		Intake Valve (Std.)
	31941		Intake Valve (1/32" OS) (Incl. 9)
	31942		Exhaust Valve (Std.)
	31943		Exhaust Valve (1/32" OS) (Incl. 9)
	650592		Key, Flywheel
	31944		Spring, Valve
	31946		Cap, Lower valve spring (1/32" OS)
	31945		Cap, Lower valve spring (Std.)
	31945		Cap, Lower valve spring (Std.)
	31946		Cap, Lower valve spring (1/32" OS)
	20810		Pin, Valve spring retainer
	32060B		Crankshaft (Incl. 12, 13, 17, 78 & 79)
	29783		
	31931		Pin, Crankshaft gear
			Gear, Crankshaft
	32001C		Piston & Pin Ass'y. (Std.)(Incl.16)(3 -5/16")
	32002B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32003B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32619B		Piston & Pin Ass'y. (.030" OS) (Incl. 16)
	34508		Piston, Pin & Ring Set (Std.) (3-5/16 " Bore)
	34509		Piston, Pin & Ring Set (.010" OS)
	34510		Piston, Pin & Ring Set (.020" OS)
	34850		Piston, Pin & Ring Set (.030" OS)
	34523		Piston, Pin & Ring Set (.040" OS)
	32620B		Piston & Pin Ass'y. (.040" OS) (Incl. 16)
	32004		Ring Set (Std.) (3-5/16" Bore)
	32005		Ring Set (.010" OS)
	32006		Ring Set (.020" OS)
	32623		Ring Set (.030" OS)
15	32624		Ring Set (.040" OS)
15	32321		Re-Ringing Set, Piston
16	31919		Ring, Piston pin retaining
17	33093A		Connecting Rod Ass'y. (Std.) (Incl. 18, 19 & 20)
17	34383		Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
17	34384		Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18	32077		Bolt, Connecting rod
19	26073		Washer, Connecting rod
20	28264		Nut Assy., Lock
21	32150		Camshaft (MCR)
	31939		Lifter, Valve
	32685		Cylinder Cover (Incl.4,25,26A,28,30,3 4 & 43)
	31956A		* Gasket, Cylinder cover
	29673		* Gasket, Oil fill
	35499		"O" Ring
	33069		Dipstick (Incl. 25A)
	32426		Spacer, Governor rod
	650588		Screw, 1/4-20 x 2"
	31927		Oil Drain Plug
	31968		Link, Governor
	650451		Screw, 1/4-20 x 1"
	31964		
	29193		Clamp, Governor lever
			Ring, Retaining
	31963		Lever, Governor adjusting
	650518 650544		Lockwasher
	650544		Screw, 10-24 x 7/8"
38	7975		Nut, 10-24

	Part Number	Qty	
	31965		Plate, Governor spring
40	30312		Screw, 10-32 x 1/2"
41	31967		Spring, Governor
	30590A		Washer, Flat
	32425		Rod Assy., Governor
	31948		Spool, Governor
			•
	29193		Ring, Retaining
	31947		Gear Assy., Governor
	31930		Shaft, Mechanical Governor
48	32000A		* Gasket, Cylinder head
49	32472		Head, Cylinder
51	650694A		Screw, 5/16-18 x 2" (Use as required)
	650711		Screw, 5/16-18 x 1-5/8" (Use as required)
	650628A		Screw, 5/16-18 x 2-3/8" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650714		Screw, 5/16-18 x 1-5/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650692		Screw, 5/16-18 x 1-3/4" (Use as requi red)
51	650603		Screw, 5/16-18 x 5/8" (Use as require d)
53	31889		Plug, Spark (D-21)
54	33035		Cover, Cylinder head
	28537		Washer, Plain
	650691		Washer, Flat (Use as required)
	650690		
			Washer, Belleville (Use as required)
	8274		Washer, Lock (Use as required)
	650128		Screw, 10-24 x 1/2"
60	31976		Extension, Blower housing
63	31888		Fuel Cap (Kerosene)
63	410144B		Fuel Cap (White Plastic)(Std.)(As req uired)
63	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
			required)
64	31979		Stran Fuel tank
			Strap, Fuel tank
	650451		Screw, 1/4-20 x 1"
	650456		Nut, Flange whiz-lock, 1/4-20
	650517		Screw, 1/4-20 x 27/32" (Use as requir ed)
67	650561		Screw, 1/4-20 x 5/8" (Use as required)
67	30063		Screw, 1/4-20 x 1/2" (Use as required)
	792028		Screw, 5/16-18 x 7/8" (Use as require d)
	29683		Strainer & Shut-off, Fuel
	26460		Clamp, Fuel line (Use as required)
	29774		Fuel Line (Braided) (8.25") (Use as required)
	30705		Fuel Line (Braided) (16") (Use as req uired)
	30962		Fuel Line (Braided) (32") (Use as req uired)
	30965		Fuel Line (Braided) (48") (Use as req uired)
73	31975		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	33356		Terminal
	28545		
			Grommet, Plastic
	650760		Screw, 8-32 x 3/8"
78	31932		Bearing, Tapered roller
	31928		Cup, Bearing
79			Spacer, Steel (.010" thick) NOTE: Determine the gap
79	32031		
79	32031		
79	32031		between the cover and the machined surface on the cylinder
79	32031		between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim
79	32031		between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a
79	32031		between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim


		Qty Description
81	31971	* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
	32599 31972	"O" Ring * Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
83	32677	Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat
84A	650668 650679	Screw, 10-32 x 1" Lockwasher, 5/16" (Use as required)
	650666	Washer, Lock
	650594	Nut, Flywheel, 3/4-16
	32286A 8274	Blower Housing Washer, Lock
	650595	Screw, 5/16-24 x 3/8"
	32039	Switch, Stop
	650890	Washer, Shakeproof
	26073	Washer, Flat
	650624	Screw, 5/16-24 x 9/16"
	31958	* Gasket, Breather
99	31957	Breather Assy.
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	650597	Screw, 10-24 x 5/8"
	32042	Nipple, Exhaust pipe
	34238	Muffler
	33038	Plug, Button (Use as required)
	29752 650587	Nut & Lockwasher Assy. Stud, Carburetor
	27272	* Gasket, Air cleaner
	650399	Screw, 10-32 x 5/8"
	30767	Spacer, Air cleaner
	32380	Bracket, Air cleaner
	32377	Bracket, Air cleaner
	31925	Element, Air cleaner
	31926	Cover, Air cleaner
	650513	Nut, Wing
	650713	Screw, 5/16-18 x 5/8" (Use as require d)
	650429	Screw, 5/16-18 x 3/4" (Use as require d)
	792028	Screw, 5/16-18 x 7/8" (Use as require d)
141A 141	26073	Lockwasher, Split (Use as required) Washer, Flat (Use as required)
	31960	* Gasket, Carburetor
14J		
147	32478	Baffle, Air

Ref #	Part Number Qty	Description
173	610118	Cover, Spark plug (Use as required)
176	31992	Spacer, Screen
177	8345	Washer, 1/4 plain (Use as required)
178	27070	Washer, Lock 1/4 E.T. (Use as require d)
178	650675	Washer, Flat 1/4 (Use as required)
187	650713	Screw, 5/16-18 x 5/8"
188	26073	Washer, Flat
246	33776	Screen, Starter pulley
247	31980	Pulley, Starter
248	650680	Screw, 1/4-20 x 1-1/2"
249	32046	Rope Assy., Starter (Use as required)
266	610750	Grommet, Lead wire
278	610758	Flywheel
299	34346	Decal, Instruction
299B	550223	Decal, Name
299B	32676	Decal, Solid State
299A	31752	Decal, Air cleaner
300	32255A	Valve, Seat, Spring & Gasket Assy.
301	631326A	Carburetor (Refer to Division 5, Section A, page 94 for breakdown)
201	33237A	* Gasket Set (Incl. items marked *)

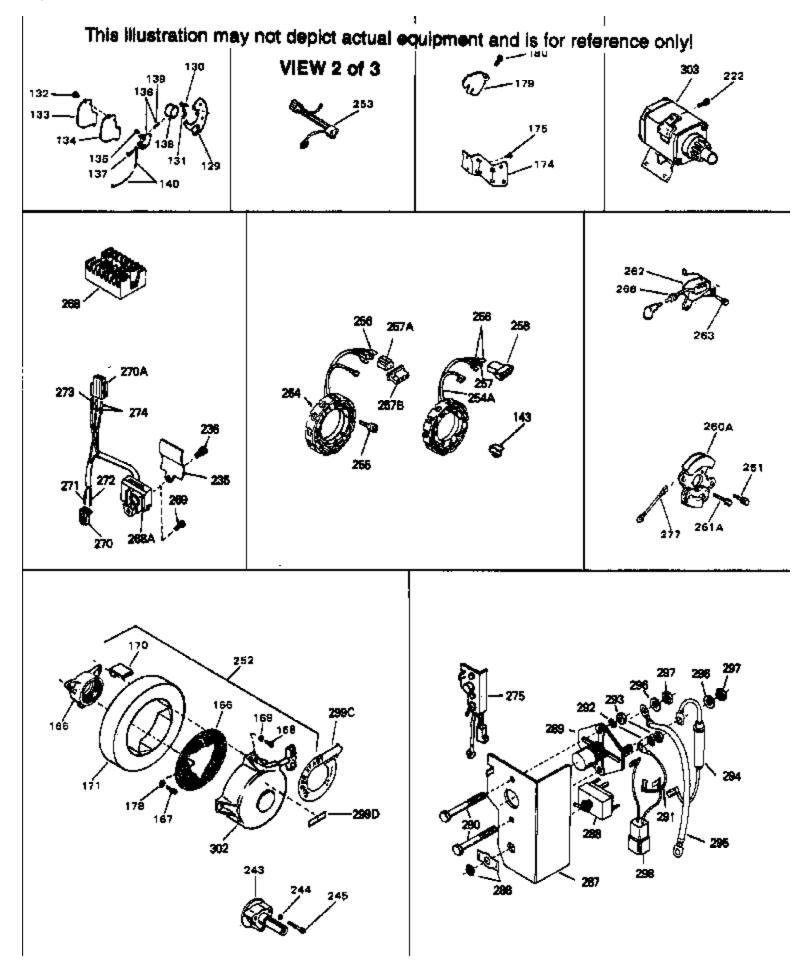

Ref #	Part Number Qt	/ Description
178	27070	Washer, Lock 1/4 E.T. (Use as require d)
178	650675	Washer, Flat 1/4 (Use as required)
180	650701	Screw, 8-18 x 7/16" (Use as required)
222	792028	Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
222	650781	Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276	Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
236	650736	Screw, 10-16 x 3/8" (Use as required)
252	730134	Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
253	33018	Harness Assy., Adapter (Use as requir ed)
257B	610824	Flat Connector (Female terminals) (As req.)
260A	610759	Solid State Magneto
261	650489	Screw, 1/4-20 x 5/8"
261A	650669	Screw, 5/16-18 x 1-1/4"
262	610760	Solid State Transformer Ass'y.(Incl.1 73,266)
263	650561	Screw, 1/4-20 x 5/8"
266	610750	Grommet, Lead wire
275	730198	Starter Switch Kit(Incl. 287-298) (As req.)
277	30831	Ground Wire (Incl. 75)

ILLUSTRATION SHOWS TYPICAL FARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY DEM.

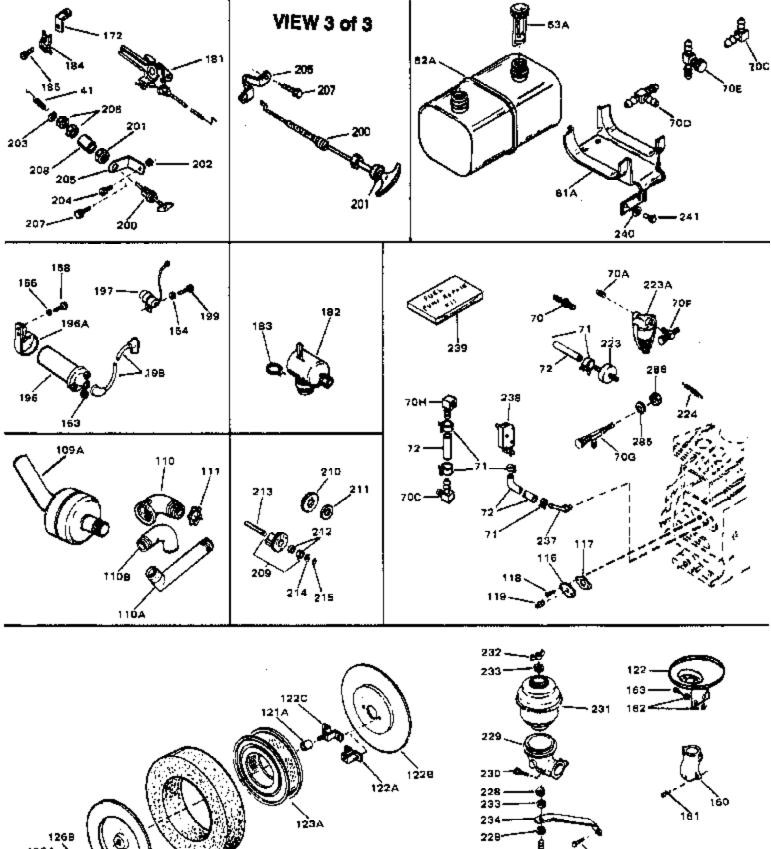

227-

234A

125

124

126A

241 29212

Ref #	Part Number Qty	Description
41	31967	Spring, Governor
61A	34823	Bracket, Fuel tank
62A	33050	FuelTank (Incl. 63) (Dual, Kerosene & Gas)
70	29634	Fitting, Fuel line
70E	33053	Fitting, Fuel line
70D	31887	Fitting, Fuel line
71	26460	Clamp, Fuel line (Use as required)
72	29774	Fuel Line (Braided) (8.25") (Use as r equired)
72	30705	Fuel Line (Braided) (16") (Use as req uired)
72	30962	Fuel Line (Braided) (32") (Use as req uired)
72	30965	Fuel Line (Braided) (48") (Use as req uired)
119	28534	Pipe Plug, 1/8-27 (Use as required)
119	9556	Plug, Pipe, 1/8-27 (Use as required)
200	32421	Control Assy., Speed (Incl. 206)
201	650641	Nut, Jam
202	27070	Lockwasher
203	32420	Retainer, Control rod
204	29716	Screw, 1/4-28 x 7/16"
205	32419	Bracket, Speed control
206	650456	Nut, Flanged whiz-lock
240	26073	Washer, Flat

Washer, Flat Screw, 1/4-28 x 7/16"