
ILLUSTRATION SHOWS TYPICAL PARTS ONLY, ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEM.

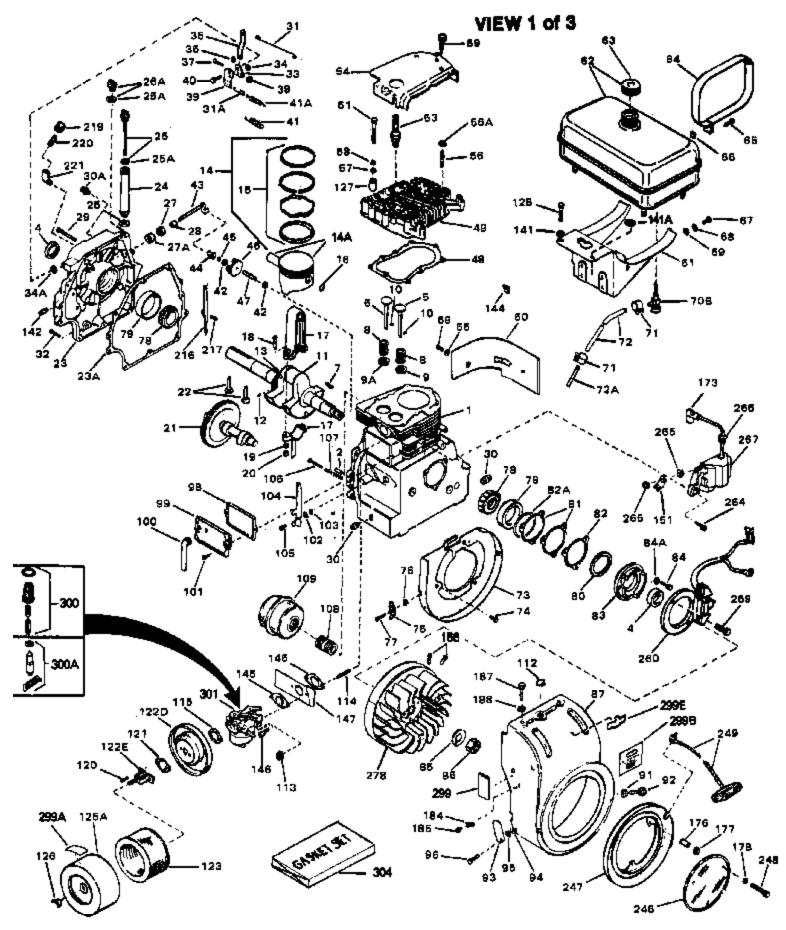


	Deat Number	0.	Description
	Part Number	Qty	
	33039 27652		Cylinder (Incl.2,4,30,47,119) (3-5/16 ") Pin, Dowel
	31950		Seal, Oil
	31940		Intake Valve (Std.)
	31941		Intake Valve (1/32" OS) (Incl. 9)
	31942		Exhaust Valve (Std.)
	31943		Exhaust Valve (1/32" OS) (Incl. 9)
	650592		Key, Flywheel
	31944		Spring, Valve
	32475		Cap, Lower valve spring (Rotator)
	31946		Cap, Lower valve spring (1/32" OS)
	31945		Cap, Lower valve spring (Std.)
10	20810		Pin, Valve spring retainer
11	33397A		Crankshaft (Incl. 12, 13, 78 & 79)
12	29783		Pin, Crankshaft gear
13	31931		Gear, Crankshaft
	34508		Piston, Pin & Ring Set (Std.) (3-5/16 " Bore)
	34509		Piston, Pin & Ring Set (.010" OS)
	34510		Piston, Pin & Ring Set (.020" OS)
	34850		Piston, Pin & Ring Set (.030" OS)
	34523		Piston, Pin & Ring Set (.040" OS)
	32620B		Piston & Pin Ass'y. (.040" OS) (Incl. 16)
	32001C		Piston & Pin Ass'y. (Std.)(Incl.16)(3 -5/16")
	32002B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32003B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32619B 32004		Piston & Pin Ass'y. (.030" OS) (Incl. 16) Ping Set (Std.) (3.5/16" Boro)
	32004		Ring Set (Std.) (3-5/16" Bore) Ring Set (.010" OS)
	32006		Ring Set (.020" OS)
	32623		Ring Set (.030" OS)
	32624		Ring Set (.040" OS)
	32321		Re-Ringing Set, Piston
	31919		Ring, Piston pin retaining
	33093A		Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
17	34383		Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
17	34384		Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18	32077		Bolt, Connecting rod
19	26073		Washer, Connecting rod
	28264		Nut Assy., Lock
	32150		Camshaft (MCR)
	31939		Lifter, Valve
	32685		Cylinder Cover (Incl.4,25,26A,28,30,3 4 & 43)
	31956A		* Gasket, Cylinder cover
	31985		
	29673		* Gasket, Oil fill
	35499		"O" Ring * Cooket Oil fill tube
	29673 33070		* Gasket, Oil fill tube
	32426		Dipstick (Incl. 25A) Spacer, Governor rod
	650588		Screw, 1/4-20 x 2"
	31927		Oil Drain Plug
	31968		Link, Governor
	650451		Screw, 1/4-20 x 1"
	31964		Clamp, Governor lever
	29193		Ring, Retaining
	31963		Lever, Governor adjusting
	650518		Lockwasher
	650544		Screw, 10-24 x 7/8"

		Aty Description
	7975	Nut, 10-24
39	31965	Plate, Governor spring
40	30312	Screw, 10-32 x 1/2"
	31967	Spring, Governor
	30590A	Washer, Flat
	32425	Rod Assy., Governor
	31948	Spool, Governor
45	29193	Ring, Retaining
46	31947	Gear Assy., Governor
47	31930	Shaft, Mechanical Governor
	32000A	* Gasket, Cylinder head
	33034	Head, Cylinder
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650711	Screw, 5/16-18 x 1-5/8" (Use as requi red)
51	650628A	Screw, 5/16-18 x 2-3/8" (Use as requi red)
51	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650714	Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650692	Screw, 5/16-18 x 1-3/4" (Use as required)
	650603	Screw, 5/16-18 x 5/8" (Use as require d)
	33636	Resistor Spark Plug (RJ-8C)
53	34251	Resistor Spark Plug (RJ-17LM)
54	33035	Cover, Cylinder head
	28537	Washer, Plain
	650691	Washer, Flat (Use as required)
	650690	Washer, Belleville (Use as required)
	8274	Washer, Lock (Use as required)
59	650128	Screw, 10-24 x 1/2"
60	31976	Extension, Blower housing
61	31978	Bracket, Fuel tank
	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
05	34210	
		required)
64	31979	Strap, Fuel tank
	650451	Screw, 1/4-20 x 1"
	650456	Nut, Flange whiz-lock, 1/4-20
	650517	Screw, 1/4-20 x 27/32" (Use as requir ed)
67	650561	Screw, 1/4-20 x 5/8" (Use as required)
67	30063	Screw, 1/4-20 x 1/2" (Use as required)
	792028	Screw, 5/16-18 x 7/8" (Use as require d)
	29683	Strainer & Shut-off, Fuel
	26460	Clamp, Fuel line (Use as required)
	29774	Fuel Line (Braided) (8.25") (Use as r equired)
	30705	Fuel Line (Braided) (16") (Use as req uired)
72	30962	Fuel Line (Braided) (32") (Use as req uired)
72	30965	Fuel Line (Braided) (48") (Use as req uired)
	32579	Baffle, Blower housing
	650561	
		Screw, 1/4-20 x 5/8"
	31932	Bearing, Tapered roller
	31928	Cup, Bearing
80	32031	Spacer, Steel (.010" thick) NOTE: Determine the gap
		between the cover and the machined surface on the cylinder
		which can be from .001"up to .007" in which case no shim
		gaskets will be required. Use of gasket must be limited to a
		combined total of .010" thick. Steel spacersmust be used
		as required
		-

		Qty Description
81	31971	* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
82	31972	* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
	32599 32577	"O" Ring Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat
84 85 86 87 91 92 95 96 98 99 100 101 105 108 109 112 113 114 115 120 121 122D 122E 123 125A 126 128 128	650679 792028 650666 650594 33044A 8274 650595 8274 650624 31958 31957 35350 650128 650597 32042 34238 33038 29752 650587 27272 650587 27272 650399 30767 32380 32377 31925 31926 650513 650713 650429 792028	Lockwasher, 5/16" (Use as required) Screw, 5/16-18 x 7/8" Washer, Lock Nut, Flywheel, 3/4-16 Blower Hsg. (Incl.73) (For electric s tarter) Washer, Lock Screw, 5/16-24 x 3/8" Washer, Lock Screw, 5/16-24 x 9/16" * Gasket, Breather Breather Assy. Tube, Breather Screw, 10-24 x 1/2" Screw, 10-24 x 5/8" Nipple, Exhaust pipe Muffler Plug, Button (Use as required) Nut & Lockwasher Assy. Stud, Carburetor * Gasket, Air cleaner Screw, 10-32 x 5/8" Spacer, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Nut, Wing Screw, 5/16-18 x 5/8" (Use as require d) Screw, 5/16-18 x 7/8" (Use as require d)
145 147 151 156	8274 26073 31960 32478 33356 730201 610118	Lockwasher, Split (Use as required) Washer, Flat (Use as required) * Gasket, Carburetor Baffle, Air Terminal, Ground Trigger Pin Kit (Use as required) Cover, Spark plug (Use as required)


Ref # Pa	art Number Qty	Description
176 31	1992	Spacer, Screen
177 83	345	Washer, 1/4 plain (Use as required)
178 27	7070	Washer, Lock 1/4 E.T. (Use as require d)
178 65	50675	Washer, Flat 1/4 (Use as required)
187 65	50713	Screw, 5/16-18 x 5/8"
188 26	6073	Washer, Flat
246 33	3776	Screen, Starter pulley
247 31	1980	Pulley Starter


247	31980	Pulley, Starter
248	650680	Screw, 1/4-20 x 1-1/2"
249	32046	Rope Assy., Starter (Use as required)
264	650661	Screw, 1/4-20 x 3/4"
265	610408	Nut, Hex
266	610750	Grommet, Lead wire
267	610748	Solid State Magneto (Incl.151,173,265 ,266)
278	610746	Solid State Flywheel
299A	31752	Decal, Air cleaner
299	34346	Decal, Instruction
299B	550223	Decal, Name
299B	32676	Decal, Solid State
300	32411A	Valve, Seat, Spring & Gasket Assy.
301	631329A	Carburetor (Refer to Division 5, Section A, page 94 for
		breakdown)
304	33237A	* Gasket Set (Incl. items marked *)

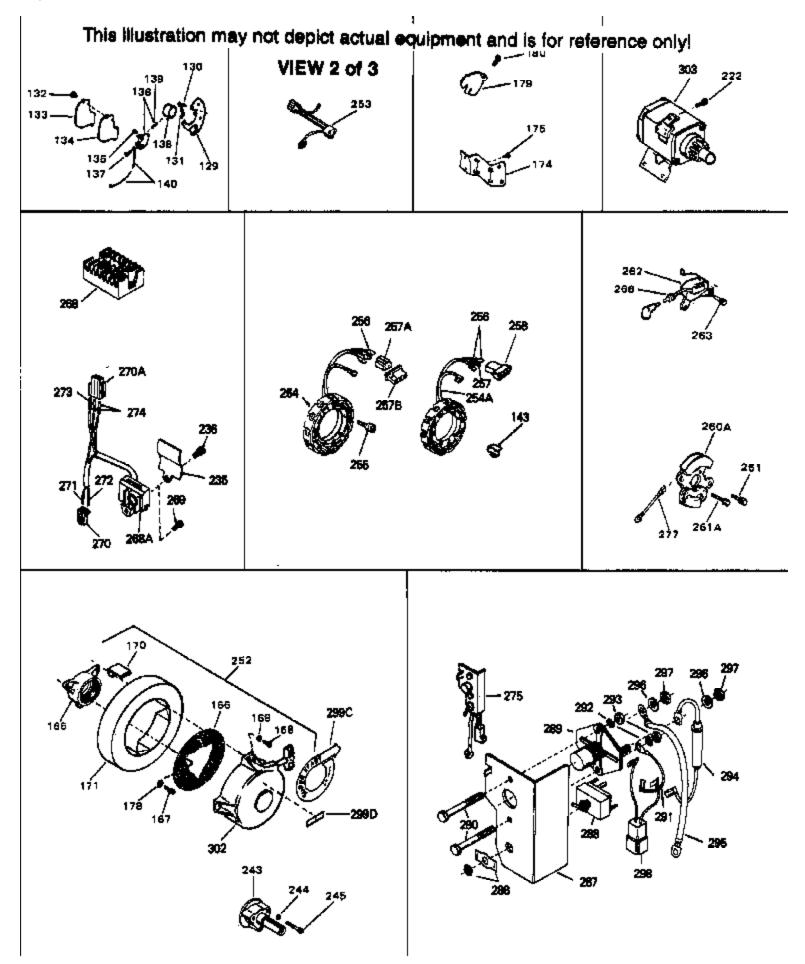


Ref #	Part Number	Qty Description
178	27070	Washer, Lock 1/4 E.T. (Use as require d)
178	650675	Washer, Flat 1/4 (Use as required)
180	650701	Screw, 8-18 x 7/16" (Use as required)
222	792028	Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
	650781	Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276	Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
236	650736	Screw, 10-16 x 3/8" (Use as required)
252	730134	Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
253	33018	Harness Assy., Adapter (Use as requir ed)
	610761	Alternator Coil (Solid State) (10 Amp) (Incl. Nos. 253, 256 & 257A)
255	650416	Screw, 10-32 x 1"
256	610922	Terminal, Female
257B	610824	Flat Connector (Female terminals) (As req.)
257A	610819	Connector, Pyramid (For female termin als)
266	610750	Grommet, Lead wire
	610749	Solid State Regulator (10 Amp)
	730198	Starter Switch Kit(Incl. 287-298) (As req.)
	30831	Ground Wire (Incl. 75)
303	33835	Electric Starter Motor (12 Volt) NOTE: The 32817 and 33835 starter motors are used interchangeably on the se models. Refer to service numberstamped on end cap of motor, or on decal for identification. Refer to Division 5, Section D for breakdown.

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY DEM.

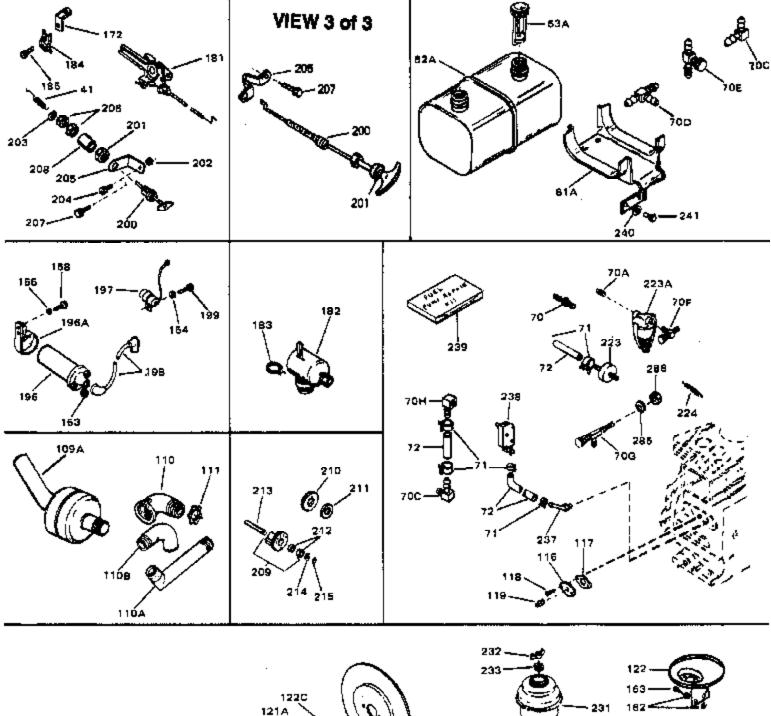

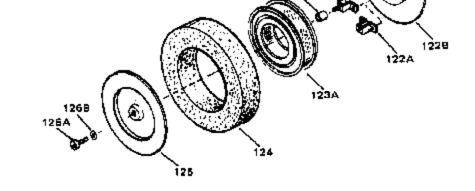

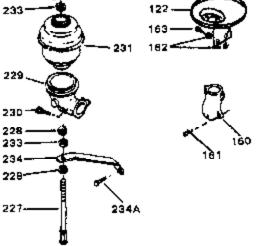

Ref #	Part Number 0	ty Description
41	31967	Spring, Governor
62A	31977	Fuel Tank (Incl. 63)
71	26460	Clamp, Fuel line (Use as required)
72	29774	Fuel Line (Braided) (8.25") (Use as r equired)
72	30705	Fuel Line (Braided) (16") (Use as req uired)
72	30962	Fuel Line (Braided) (32") (Use as req uired)
72	30965	Fuel Line (Braided) (48") (Use as req uired)
119	28534	Pipe Plug, 1/8-27 (Use as required)
119	9556	Plug, Pipe, 1/8-27 (Use as required)
200	32421	Control Assy., Speed (Incl. 206)
201	650641	Nut, Jam
205	33597	Bracket, Speed control
206	650456	Nut, Flanged whiz-lock
207	30513	Screw & Lockwasher
208	31992	Spacer
237	32958	Fitting, Fuel
238	32959	Fuel Pump, Impulse
239	33010	Repair Kit, Impulse fuel pump