
ILLUSTRATION SHOWS TYPICAL PARTS ONLY, ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEM.

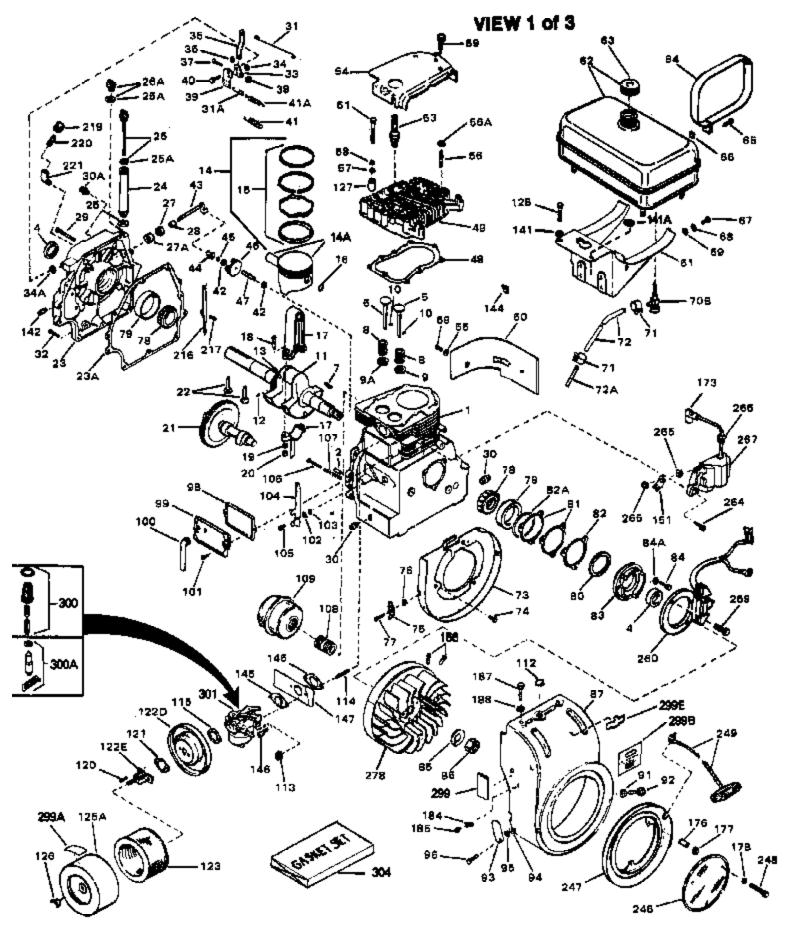


Ref # Part Number		Description
1 33039		Cylinder (Incl.2,4,30,47,119) (3-5/16 ")
2 27652	P	in, Dowel
4 31950		Seal, Oil
5 31940	In	ntake Valve (Std.)
5 31941	In	ntake Valve (1/32" OS) (Incl. 9)
6 31942	E	xhaust Valve (Std.)
6 31943		xhaust Valve (1/32" OS) (Incl. 9)
7 650592		íey, Flywheel
8 31944		Spring, Valve
9 31946		Cap, Lower valve spring (1/32" OS)
9 31945		Cap, Lower valve spring (Std.)
9A 31945		Cap, Lower valve spring (Std.)
9A 31946		Cap, Lower valve spring (1/32" OS)
10 20810		in, Valve spring retainer
11 33937B		Crankshaft (Incl.12,13,78,79,209,210 & 211)
12 29783		in, Crankshaft gear
13 31931		Gear, Crankshaft
14A 32001C		Piston & Pin Ass'y. (Std.)(Incl.16)(3 -5/16")
14A 32002B		
14A 32002B 14A 32003B		Piston & Pin Ass'y. (.010" OS) (Incl. 16) Piston & Pin Ass'y. (.020" OS) (Incl. 16)
		Piston & Pin Ass'y. (.030" OS) (Incl. 16)
14A 32619B		Piston, Pin & Ring Set (Std.) (3-5/16 " Bore)
14 34508		o () (
14 34509		Viston, Pin & Ring Set (.010" OS)
14 34510		Viston, Pin & Ring Set (.020" OS)
14 34850		Viston, Pin & Ring Set (.030" OS)
14 34523		Viston, Pin & Ring Set (.040" OS)
14 32620B		Piston & Pin Ass'y. (.040" OS) (Incl. 16)
15 32004		Ring Set (Std.) (3-5/16" Bore)
15 32005		Ring Set (.010" OS)
15 32006		Ring Set (.020" OS)
15 32623		Ring Set (.030" OS)
15 32624		Ring Set (.040" OS)
15 32321		Re-Ringing Set, Piston
16 31919		Ring, Piston pin retaining
17 33093A		Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
17 34383		Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
17 34384	C	Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18 32077	B	Bolt, Connecting rod
19 26073	V	Vasher, Connecting rod
20 28264	N	lut Assy., Lock
21 33470	С	Camshaft (MCR)
22 31939	Li	ifter, Valve
23A 31956A	*	Gasket, Cylinder cover
23 34002A	С	Cover, Cylinder (Incl. 4, 30, 119 & 2 13)
25A 29673		Gasket, Oil fill
25A 35499		O" Ring
26 33069		Dipstick (Incl. 25A)
28 32426		Spacer, Governor rod
29 650492		Screw, 1/4-20 x 2-1/4"
30 31927		Dil Drain Plug
31 31968		ink, Governor
32 650451		Screw, 1/4-20 x 1"
33 31964		Xamp, Governor lever
34 29193		Ring, Retaining
35 31963		ever, Governor adjusting
		ockwasher
36 650518 37 650544		
37 650544 38 7975		Screw, 10-24 x 7/8"
JU 1913	IN	lut, 10-24

		Description
39	31965	Plate, Governor spring
40	30312	Screw, 10-32 x 1/2"
41	31967	Spring, Governor
	30590A	Washer, Flat
	32425	Rod Assy., Governor
	31948	Spool, Governor
	29193	Ring, Retaining
	31947	Gear Assy., Governor
	31930	
		Shaft, Mechanical Governor
	32000A	* Gasket, Cylinder head
	33034	Head, Cylinder
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650711	Screw, 5/16-18 x 1-5/8" (Use as required)
51	650628A	Screw, 5/16-18 x 2-3/8" (Use as requi red)
51	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
51	650714	Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650692	Screw, 5/16-18 x 1-3/4" (Use as required)
	650603	Screw, $5/16-18 \times 5/8$ " (Use as require d)
	33636	Resistor Spark Plug (RJ-8C)
	34251	
		Resistor Spark Plug (RJ-17LM)
	33035	Cover, Cylinder head
	28537	Washer, Plain
	650691	Washer, Flat (Use as required)
	650690	Washer, Belleville (Use as required)
58	8274	Washer, Lock (Use as required)
59	650128	Screw, 10-24 x 1/2"
60	31976	Extension, Blower housing
63	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
63	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
67	650517	
		Screw, 1/4-20 x 27/32" (Use as required)
	650561	Screw, 1/4-20 x 5/8" (Use as required)
	30063	Screw, 1/4-20 x 1/2" (Use as required)
	792028	Screw, 5/16-18 x 7/8" (Use as require d)
	26460	Clamp, Fuel line (Use as required)
	29774	Fuel Line (Braided) (8.25") (Use as r equired)
72	30705	Fuel Line (Braided) (16") (Use as req uired)
72	30962	Fuel Line (Braided) (32") (Use as req uired)
	30965	Fuel Line (Braided) (48") (Use as req uired)
	32579	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	33356	Terminal
	28545	Grommet, Plastic
	650760	
		Screw, 8-32 x 3/8"
	31932	Bearing, Tapered roller
	31928	Cup, Bearing
80	32031	Spacer, Steel (.010" thick) NOTE: Determine the gap
		between the cover and the machined surface on the cylinder
		which can be from .001"up to .007" in which case no shim
		gaskets will be required. Use of gasket must be limited to a
		gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used


	Part Number	Qty Description
81	31971	* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to combined total of .010" thick. Steel spacersmust be used as req
	32599 31972	"O" Ring * Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to combined total of .010" thick. Steel spacersmust be used as req
83	32577	Cover, Cylinder NOTE: Determine the gap between the cov and the machined surface on the cylinder which can be fror .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined tota of .010" thick. Steel spacersmust be used as required to eliminat
84A 85 86 87 91 92 95 96 98 99 100 101 102 103 104 105 106 107 108	792028 650679 650666 650594 33044A 8274 650595 8274 650624 31958 31957 35350 650128 28558 31966 31984A 650597 650591 33099 33853 34238	Screw, 5/16-18 x 7/8" Lockwasher, 5/16" (Use as required) Washer, Lock Nut, Flywheel, 3/4-16 Blower Hsg. (Incl.73) (For electric s tarter) Washer, Lock Screw, 5/16-24 x 3/8" Washer, Lock Screw, 5/16-24 x 9/16" * Gasket, Breather Breather Assy. Tube, Breather Screw, 10-24 x 1/2" Washer, Wave Bushing, Control lever Lever, Control Screw, 10-24 x 5/8" Screw, 10-24 x 2" Spring Nipple, Exhaust pipe Muffler
112 113 114 115 120 121 122E 122D 123 125A 126 128 128 128 128 128 128	34236 33038 29752 650587 27272 650399 30767 32377 32380 31925 31926 650513 650713 650713 650429 792028 26073 8274	Plug, Button (Use as required) Nut & Lockwasher Assy. Stud, Carburetor * Gasket, Air cleaner Screw, 10-32 x 5/8" Spacer, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Element, Air cleaner Cover, Air cleaner Nut, Wing Screw, 5/16-18 x 5/8" (Use as require d) Screw, 5/16-18 x 7/8" (Use as require d) Screw, 5/16-18 x 7/8" (Use as require d) Washer, Flat (Use as required) Lockwasher, Split (Use as required)


Ref #	Part Number Qty	Description
144	29443	Clip, Wire
145	31960	* Gasket, Carburetor
147	32478	Baffle, Air
151	33356	Terminal, Ground
156	730201	Trigger Pin Kit (Use as required)
173	610118	Cover, Spark plug (Use as required)
176	31992	Spacer, Screen
177	8345	Washer, 1/4 plain (Use as required)
178	27070	Washer, Lock 1/4 E.T. (Use as require d)
178	650675	Washer, Flat 1/4 (Use as required)
184	27793	Clip, Conduit
185	28942	Screw, 10-32 x 3/8"
187	650713	Screw, 5/16-18 x 5/8"
188	26073	Washer, Flat
216	33467	Tube, Extension, Oil fill
217	650744	Screw, 10-24 x 7/8"
246	33776	Screen, Starter pulley
247	31980	Pulley, Starter
248	650680	Screw, 1/4-20 x 1-1/2"
249	32046	Rope Assy., Starter (Use as required)
264	650661	Screw, 1/4-20 x 3/4"
265	610408	Nut, Hex
266	610750	Grommet, Lead wire
267	610748	Solid State Magneto (Incl.151,173,265 ,266)
278	610746	Solid State Flywheel
299	34346	Decal, Instruction
299B	550223	Decal, Name
299B	32676	Decal, Solid State
299A	31752	Decal, Air cleaner
300	32255A	Valve, Seat, Spring & Gasket Assy.
301	631328A	Carburetor (Incl. 145) (Refer to Division 5, Section A, page 94 for breakdown)
304	33237A	* Gasket Set (Incl. items marked *)

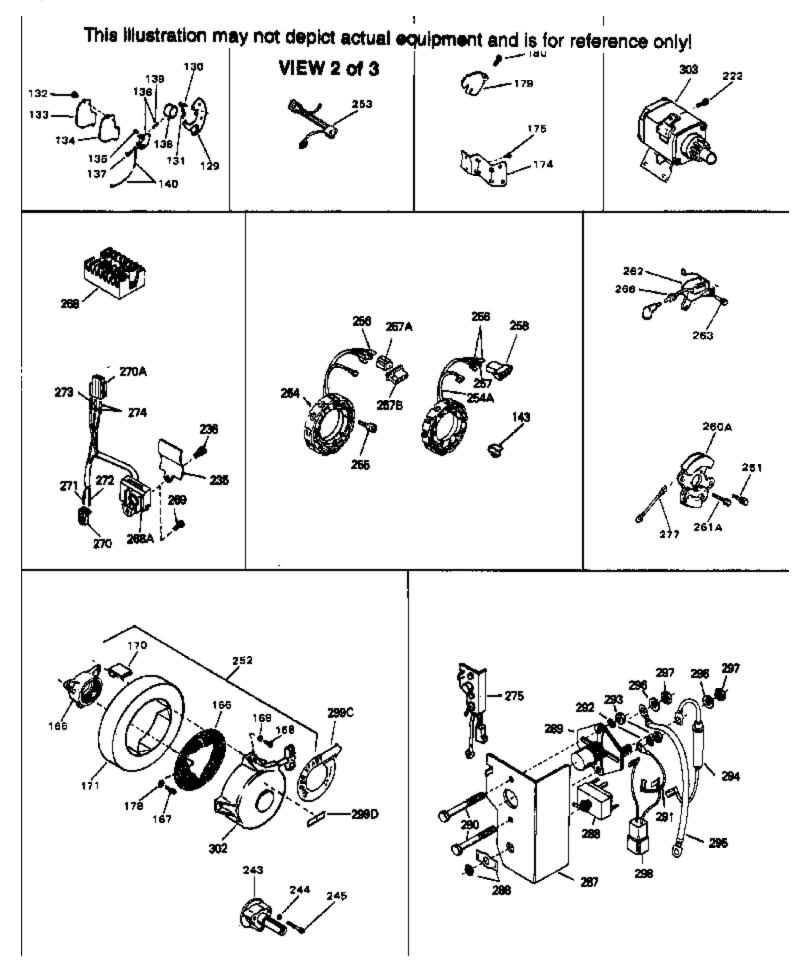


Ref #	Part Number	Qty Description
178	27070	Washer, Lock 1/4 E.T. (Use as require d)
178	650675	Washer, Flat 1/4 (Use as required)
180	650701	Screw, 8-18 x 7/16" (Use as required)
222	792028	Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
222	650781	Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276	Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
236	650736	Screw, 10-16 x 3/8" (Use as required)
	730134	Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
253	33018	Harness Assy., Adapter (Use as requir ed)
	610761	Alternator Coil (Solid State) (10 Amp) (Incl. Nos. 253, 256 & 257A)
255	650416	Screw, 10-32 x 1"
256	610922	Terminal, Female
257B	610824	Flat Connector (Female terminals) (As req.)
257A	610819	Connector, Pyramid (For female termin als)
266	610750	Grommet, Lead wire
	610749	Solid State Regulator (10 Amp)
	730198	Starter Switch Kit(Incl. 287-298) (As req.)
	33709	Ground Wire
303	33835	Electric Starter Motor (12 Volt) NOTE: The 32817 and 33835 starter motors are used interchangeably on the se models. Refer to service numberstamped on end cap of motor, or on decal for identification. Refer to Division 5, Section D for breakdown.

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY DEM.

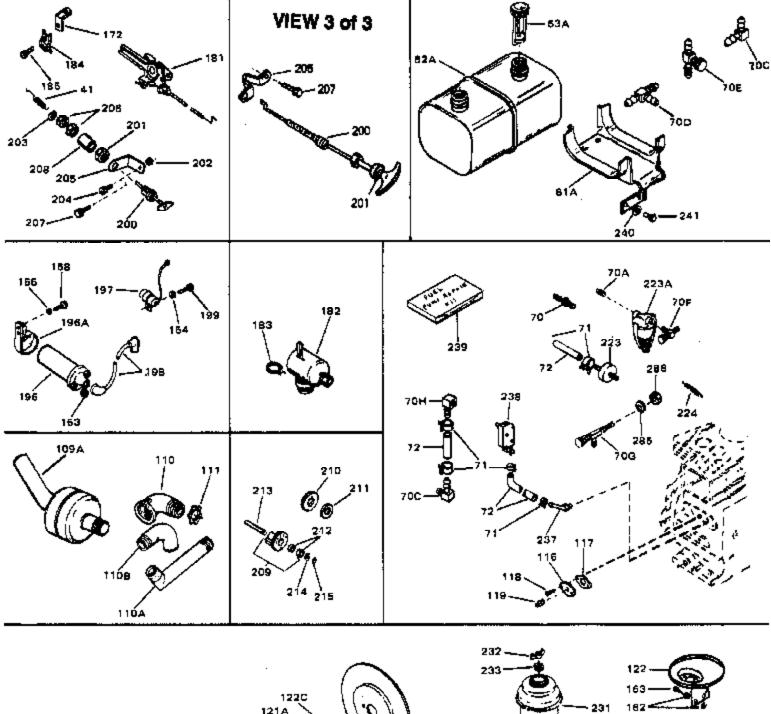

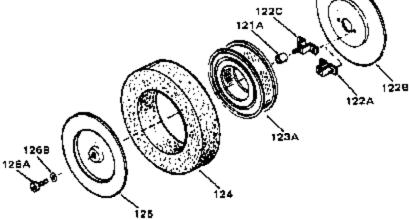

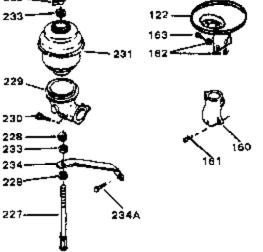

HH80-110123E Engine Parts List #3

Ref #	Part Number Q	ty Description
41	31967	Spring, Governor
70	29634	Fitting, Fuel line
71	26460	Clamp, Fuel line (Use as required)
72	29774	Fuel Line (Braided) (8.25") (Use as r equired)
72	30705	Fuel Line (Braided) (16") (Use as req uired)
72	30962	Fuel Line (Braided) (32") (Use as req uired)
72	30965	Fuel Line (Braided) (48") (Use as req uired)
119	28534	Pipe Plug, 1/8-27 (Use as required)
119	9556	Plug, Pipe, 1/8-27 (Use as required)
184	27793	Clip, Conduit
185	28942	Screw, 10-32 x 3/8"
209	33822A	Weight Assy. Kit, Counterbalance (Gears have helical teeth, which replace earlier straight tooth gears.) (Incl. 33964 weight assy. & 33963 gear)
210	33963	Gear, Counterbalance Weight
211	33499	Spacer
212	33501	Bearing, Needle
213	33502	Shaft, Counterbalance
214	33503	Washer, Thrust
215	792017	Ring, Retaining