




Pof #	Part Number Qty	Description
	34922A	Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	650494	Screw, 6-40 x 5/16"
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	30700	Yoke, Governor
		•
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	32630	Seal, Oil
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
00	050504	• •
	650561	Screw, 1/4-20 x 5/8"
	33365B	Crankshaft (Incl. 108 & 109)
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
37A	30322	Nut & Lockwasher, 8-32
38	29642	Ring, Retaining
40	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
40	34861A	Piston, Pin & Ring Set (.010" OS)
40	34862A	Piston, Pin & Ring Set (.020" OS)
41	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	Ring Set (.010" OS)
	34868A	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650662C	Bolt, Connecting rod (2 pieces)
		,
	650662C	Bolt, Connecting rod (2 pieces)
	34034	Lifter, Valve
	34242	Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33367B	Cover, Cylinder (Incl. 71, 75 & 80)
71	33368	Bushing, Crankshaft
72	27642	Plug, Oil drain
75	31950	Seal, Oil
80	31845	Shaft, Mechanical governor
81	30590A	Washer, Flat
82	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	650815	5 · 5
		Washer, Belleville
	8116	Nut, Hex
	650489	Screw, 1/4-20 x 5/8"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)


Ref #	Part Number C	Oty Description
	33245	Gear, Crankshaft
	34923A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
126	34036	Intake Valve (1/32" OS) (Incl. 151)
127	650691	Washer (Do not use with No. 6021A scr ew.)
128	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
100	002171	650691 washer.)
		000091 Washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650737	Screw, 1/4-20 x 1/2" (Use as required )
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650890	Washer, Internal Lock
	30747	Clip, Spark plug shorting
135	33636	Resistor Spark Plug
139	33369	Bracket, Governor gear
140	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
172	28425	Cover, Breather
173	35350	Tube, Breather
174	650128	Screw, 10-24 x 1/2"
178	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	33263	* Gasket, Carburetor
	34707	Pipe, Intake
	34661	• •
		Link, Governor lever
	34664	Control Bracket (Incl.19,203, 204, 20 6 & 209)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
207	33878	Link, Governor lever-to-throttle
209	650821	Screw, 10-32 x 1/2"
210	27793	Clip, Conduit
211	28942	Screw, 10-32 x 3/8"
222A		Pop Rivet (Can be purchased locally)
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
		• • • • • • • • • • • • • • • • • • • •
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
265	33272B	Cover, Cylinder head
275	33280A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
		• • • • • • • • • • • • • • • • • • • •
2//	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)


Ref#	Part Number	Qty	Description
	33013		Cover, Starter bubble
282	650760		Screw, 8-32 x 7/16"
285A	33662		Hub & Screen Assy.
287	29752		Nut, 1/4-28
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
291	30705		Fuel Line (Braided 16")(40cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were builtwith different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	31297		Dipstick (Incl. 307)
	31291		Plug, Cover
340	34154		Plate, Upper fuel tank mtg.
341	34155		Bracket, Lower fuel tank mtg.
342	650561		Screw, 1/4-20 x 5/8"
370A	34686		Decal, Name
370	34346		Decal, Instruction
370	35274		Decal, Instruction
379	631021		Inlet Needle, Seat & Clip Assy.
380	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page A4-4 for breakdown or Fiche 18B, Grid D-3)
400	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional

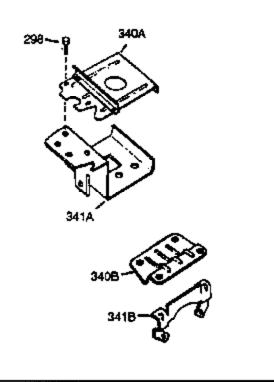


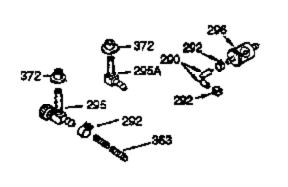


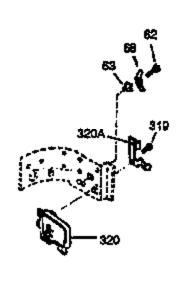


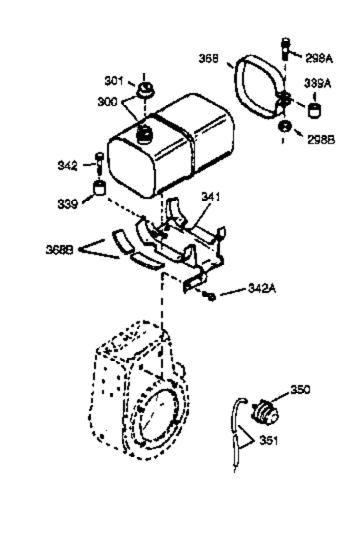

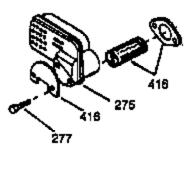 


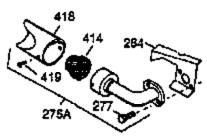

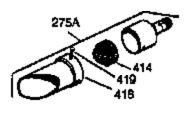




Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required )
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
274	35865		Gasket, Exhaust
275	33280A		Muffler
	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33662		Hub & Screen Assy.
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
201 /	33032		Fuel Cap (Red Diactic) (Spurt Peristant Law Profile) (Lice as
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
			1

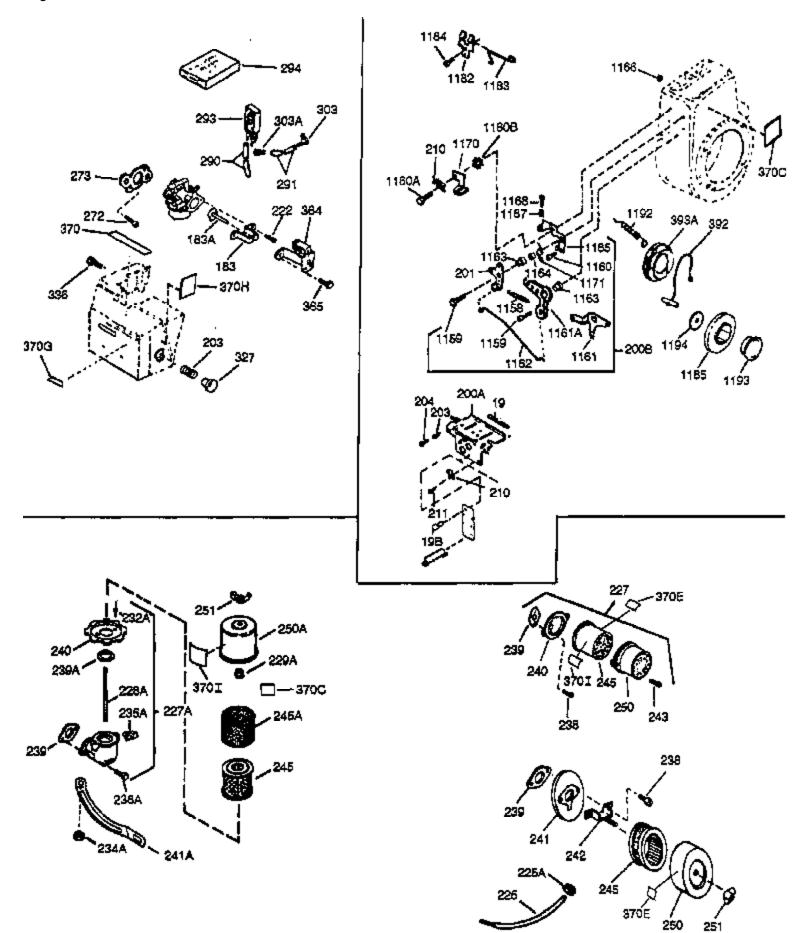

Ref #	Part Number Q	ty Description
37A	30322	Nut & Lockwasher, 8-32
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	Screw, 5/16-18 x 5/8"
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
200B	730152	Control Bracket (Incl.1158-1171)(As r eq.)
203	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
222A	200 12	Pop Rivet (Can be purchased locally)
	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
221	750127	required)
238	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
	33662	Hub & Screen Assy.
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	
		Fuel Line (Braided 16")(40cm)(As required)
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
294	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
3∩1∆	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00171	01210	as required) (1.5" I.D.)
0044	05055	
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	32958	Fitting, Fuel
	29673	* Gasket, Oil filler
	31291	Plug, Cover
	34346	Decal, Instruction
	35274	Decal, Instruction
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
1159	30312	Screw, 10-32 x 1/2"
1160	28820	Screw, 10-32 x 1/2"
1160	27070	Lockwasher
1185	33816	Hub & Screen Assy.
		•

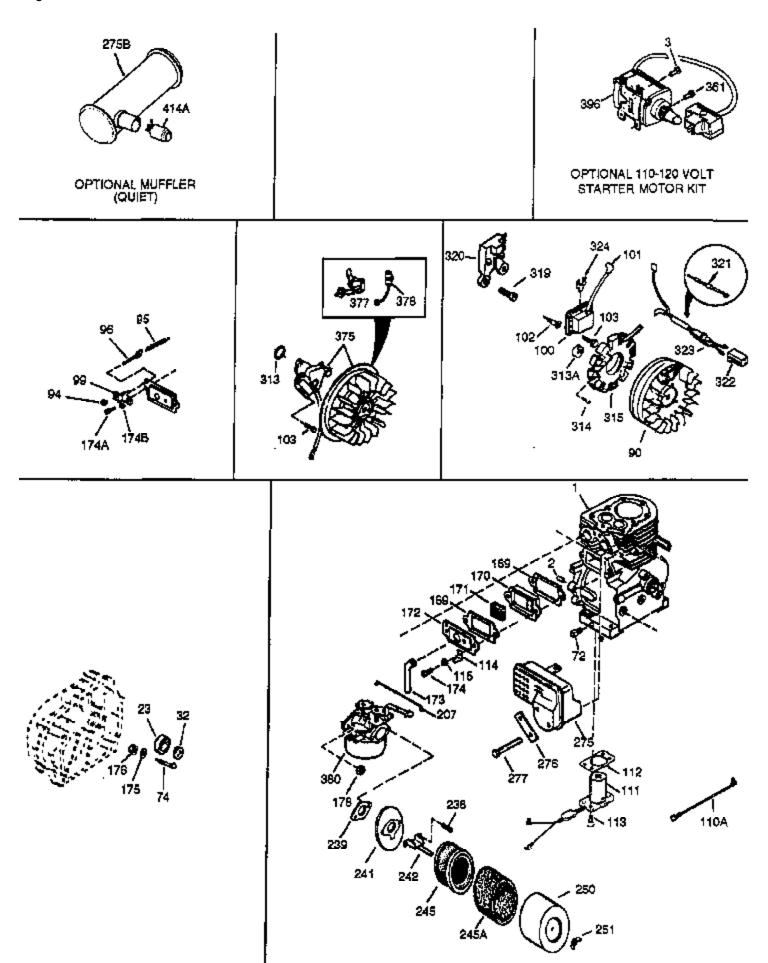

1 2 37A 72 103 129 131A 131 169 170 171 172 173 174 178 207 222A 238 239 241 242 245 250B 251	Part Number 34922A 27652 30322 27642 650489 650727 650713 650737 650738 27896A 28423 28424 28425 35350 650128 29752 33878  28820 27272A 33266 33267 33268 33269A 650513 391026	Qty	Description  Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)  Pin, Dowel  Nut & Lockwasher, 8-32  Plug, Oil drain  Screw, 1/4-20 x 5/8"  Screw, 5/16-18 x 1-3/4 (Use as requir ed)  Screw, 5/16-18 x 5/8"  Screw, 1/4-20 x 1/2" (Use as required)  * Grew, 1/4-20 x 5/8 (Use as required)  * Gasket, Breather  Body, Breather  Element, Breather  Cover, Breather  Tube, Breather  Screw, 10-24 x 1/2"  Nut & Lockwasher, 1/4-28  Link, Governor lever-to-throttle  Pop Rivet (Can be purchased locally)  Screw, 10-32 x 1/2"  * Gasket, Air cleaner  Bracket, Air cleaner  Bracket, Air cleaner  Bracket, Air cleaner  Cover, Air cleaner  Nut, Wing 1/4-20  Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.)
276 276 277 277 285A	33280A 31588 35741 650729 651002 33662 410144B		Muffler Plate, Muffler locking Plate, Muffler locking Screw, 5/16-18 x 3-3/16" (Use as required) Screw, 5/16-18 x 4-1/4" (Use as required) Hub & Screen Assy. Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
306 313A 338A	35355 29673 33876 31291 610842		Fuel Cap (Red Plastic)(1.75" I.D.)  * Gasket, Oil filler Gasket, Stator (Used only on Std. poi nt ign.) Plug, Cover Magneto NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 28 for breakdown or Fiche 18B, Grid F-1)
378	30547A 30548B 632242		Breaker Points (Use with Std. point i gn.) Condenser Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page A4-4 for breakdown or Fiche 18B, Grid D-3)
	730226 35824		SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional