



Ref #	Part Number Qty	
1	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
2	27652	Pin, Dowel
3	650820	Screw, 1/4-20 x 1/2"
	30968	Nipple, Oil drain
	30969	Cap, Oil drain
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	650494	Screw, 6-40 x 5/16"
		•
	30700	Yoke, Governor
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
20	32630	Seal, Oil
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
26	650561	Screw, 1/4-20 x 5/8"
30	33719B	Crankshaft (Incl. 108 & 109)
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	30322	Nut & Lockwasher, 8-32
	29216	Locknut, 10-32
	29642	Ring, Retaining
	34543	
		Piston, Pin & Ring Set (Std.) (3-3/16 ")
	34544	Piston, Pin & Ring Set (.010" OS)
	34545	Piston, Pin & Ring Set (.020" OS)
	34031B	Piston & Pin Ass'y. (Std.)(3-3/16")(I ncl.43)
	34032B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34033B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	34037	Ring Set (Std.) (3-3/16" Bore)
42	34038	Ring Set (.010" OS)
42	34039	Ring Set (.020" OS)
43	27888	Ring, Piston Pin retaining
	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650662C	Bolt, Connecting rod (2 pieces)
	650662C	Bolt, Connecting rod (2 pieces)
	34034	Lifter, Valve
	34242	
		Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	34126	Bracket, Grommet mounting
	650760	Screw, 8-32 x 3/8"
63	28545	Grommet, Plastic
65	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33367B	Cover, Cylinder (Incl. 71, 75 & 80)
	33368	Bushing, Crankshaft
	27642	Plug, Oil drain
	31950	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
84	29193	Ring, Retaining
86	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
01		

		Qty	Description
	650815		Washer, Belleville
93	8116		Nut, Hex
101	610118		Cover, Spark plug
103	650489		Screw, 1/4-20 x 5/8"
	29783		Pin, Crankshaft gear (Only serviceable when gear is pinned
100	20.00		to crank.)
	33245		Gear, Crankshaft
110	34240		Ground Wire
119	34041A		* Gasket, Cylinder head
120	34030A		Head, Cylinder
125	27878A		Exhaust Valve (Std.) (Incl. 151)
125	27880A		Exhaust Valve (1/32" OS) (Ind. 151)
	34035		Intake Valve (Std.) (Incl. 151)
	34036		Intake Valve (1/32" OS) (Incl. 151)
	650691		Washer (Do not use with No. 6021A scr ew.)
	650690		Washer, Belleville (Use as required)
	650727		Screw, 5/16-18 x 1-3/4 (Use as required)
130	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
			650691 washer.)
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A but discard 650691 washer.)
120	650694A		Screw, 5/16-18 x 2" (Use as required)
	650713		Screw, 5/16-18 x 5/8"
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650890		Washer, Internal Lock
	33636		Resistor Spark Plug
	33369		Bracket, Governor gear
140	650836		Screw, 10-24 x 1/2"
149	27882		Cap, Upper valve spring
150	27881		Spring, Valve
151	32581		Cap, Lower valve spring
	27896A		* Gasket, Breather
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Breather
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
	30088A		Screw, 1/4-28 x 1"
	34587		Bracket, Choke
	33263		* Gasket, Carburetor
	33877		Pipe, Intake
	34667		Link, Governor lever
200	34664		Control Bracket (Incl.19,203, 204, 20 6 & 209)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	33878		Link, Governor lever-to-throttle
	650821		Screw, 10-32 x 1/2"
	27793		Clip, Conduit
			•
211	28942		Screw, 10-32 x 3/8"
	3/1780		Rod, Choke
219			
219 220	35438		Knob, Control
219 220 222A	35438		Knob, Control Pop Rivet (Can be purchased locally)
219 220 222A 222			Knob, Control


		Description
	27915A	* Gasket, Intake pipe
	34145	Blower Housing (For electric starter)
261	650788	Screw, 5/16-18 x 3/4"
262	29747B	Screw, 5/16-24 x 21/32"
265	33272B	Cover, Cylinder head
275	33280A	Muffler
276	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, $5/16-18 \times 4-1/4$ " (Use as required)
	33013	Cover, Starter bubble
	650760	Screw, 8-32 x 7/16"
	33662	Hub & Screen Assy.
	29752	Nut, 1/4-28
	29774	
		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
	26460	Fuel Line Clamp (Use as required)
	650665	Screw, 1/4-15 x 7/8"
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
3010	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
3017	4101 41 B	I.D.)
		i.u.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
3010	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
001/1	34210	as required) (1.5" I.D.)
		as required) (1.5 1.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
305	33893A	Oil Fill Tube
307	33590	"O" Ring
310	34011A	Dipstick (Incl. 307)
336	650765	Screw, 10-32 x 1/2"
	34666	Cover, Carburetor
	31291	Plug, Cover
	28942	Screw, Sems 10-32 x 3/8"
	34154	Plate, Upper fuel tank mtg.
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	34141	
		Guard, Starter
	32576	Seal, Snow Guard
	650767	Screw, 8-32 x 27/64"
	550223	Decal, Name
	34589	Decal, Choke
	34417	Decal, Primer
	34416	Decal, Instruction
	35274	Decal, Instruction
	631021	Inlet Needle, Seat & Clip Assy.
380	632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page 168 for breakdown or Fiche18B, Grid E-9)
/00	33279G	* Gasket Set (Incl. items marked *)
	730225	SAE 30 4-Cycle Engine Oil (Quart)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional

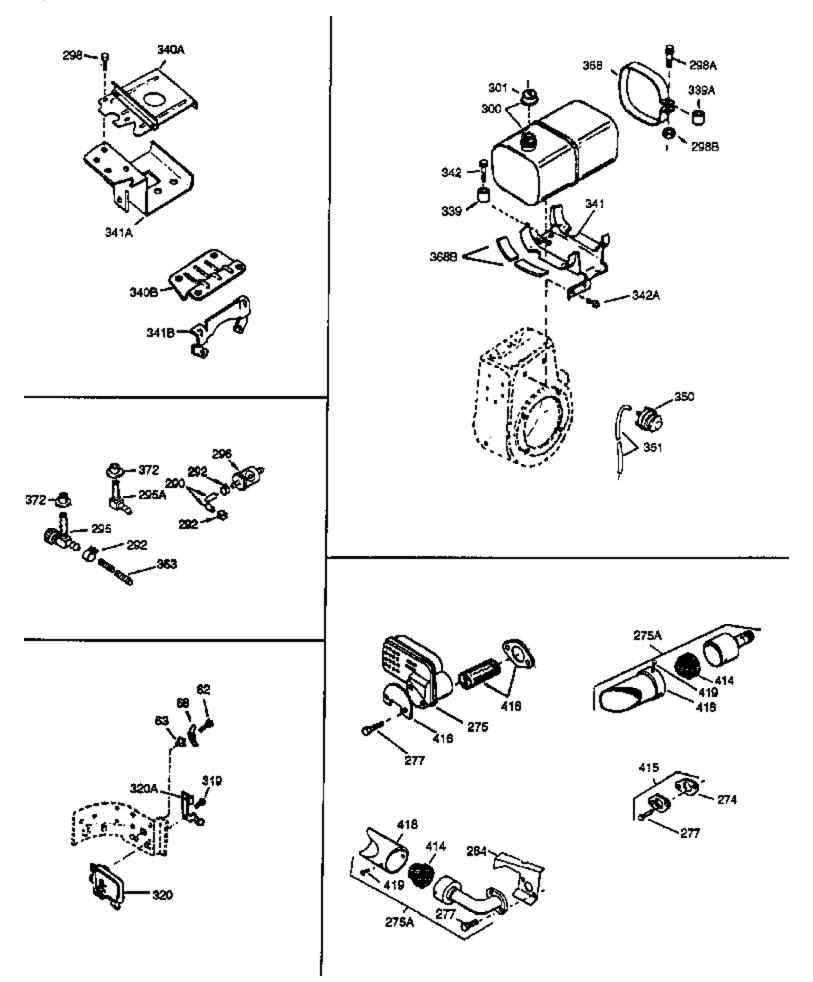

Ref #	Part Number Q	ty Description
37A	30322	Nut & Lockwasher, 8-32
62	650760	Screw, 8-32 x 3/8"
63	28545	Grommet, Plastic
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
222A		Pop Rivet (Can be purchased locally)
274	35865	Gasket, Exhaust
275	33280A	Muffler
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
285A	33662	Hub & Screen Assy.
290	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fuel Line (Braided 32")(80cm)(As required)
	26460	Fuel Line Clamp (Use as required)
298	650665	Screw, 1/4-15 x 7/8"
	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
00111	00002	required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	34666	Cover, Carburetor
	31291	Plug, Cover
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	570629A	Primer Assy.
	32180C	•
		Line, Primer
	34417	Decal, Primer
	33323	Opt.Muffler Screen (Mini-Bike applica tion)
	730130	Kit, Exhaust adapter (Incl. 274 & 277)
	33700	Cover & Tube, Muffler (use as require d)
	650578	Screw, 8-18 x 3/8" (use as required)
421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional

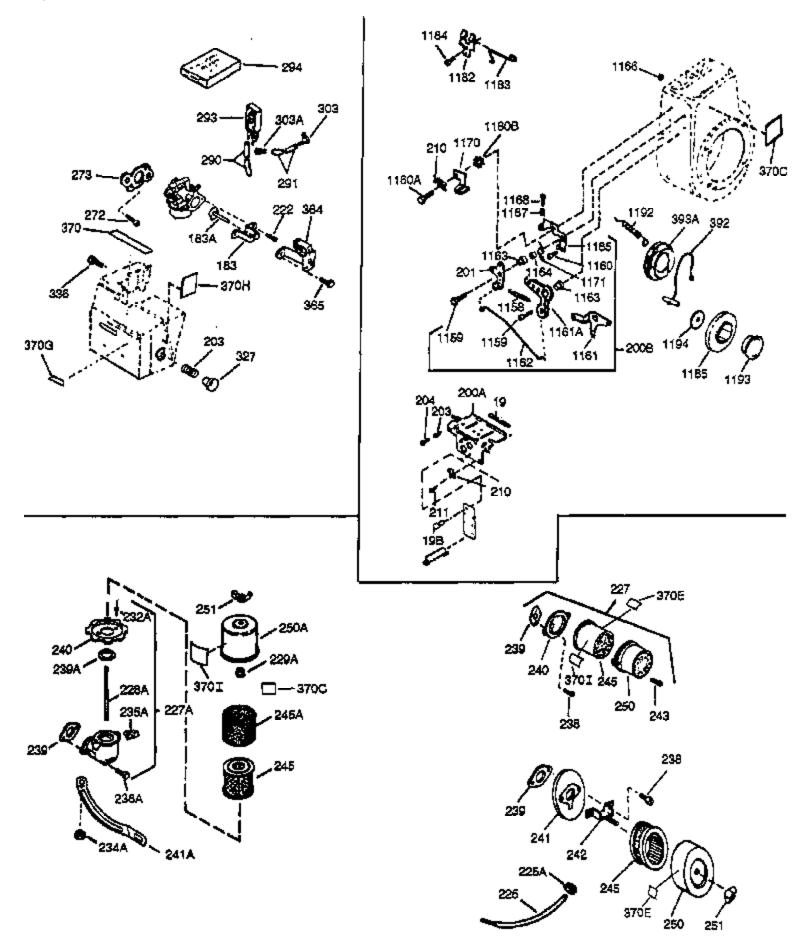

	Part Number		Description
37A	30322	I	Nut & Lockwasher, 8-32
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	34587		Bracket, Choke
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
	31342		Spring, Compression
204	650549		Screw, 5-40 x 7/16"
210	27793	(Clip, Conduit
211	28942		Screw, 10-32 x 3/8"
	28820		Screw, 10-32 x 1/2"
222A			Pop Rivet (Can be purchased locally)
221	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
		I	required)
2851	33662		Hub & Scroon Assy
			Hub & Screen Assy.
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
291	30705		Fuel Line (Braided 16")(40cm)(As requ ired)
293	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		i	are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair ki
			is used with the 35813 and 35800 fuel pumps.
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pump
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair ki
			is used with the 35813 and 35800 fuel pumps.
		1	is used with the 30013 and 30000 fuel purply.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
			,
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use a
		I	required) (1.5" I.D.)
201 0	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
30 IA	34210		
		ć	as required) (1.5" I.D.)
3014	35355	1	Fuel Cap (Red Plastic)(1.75" I.D.)
	32958		Fitting, Fuel
	650765		Screw, 10-32 x 1/2"
	34666		Cover, Carburetor
	31291	I	Plug, Cover
364	33377	I	Bracket, Carburetor cover mtg.
365	650767		Screw, 8-32 x 27/64"
	34416		Decal, Instruction
	35274		Decal, Instruction
	34589		
			Decal, Choke
	34417		Decal, Primer
	34414		Decal, Warning
101	730226	;	SAE 5W30 4-Cycle Engine Oil (Quart)
421	35824		Muffler Optional
			Screw, 10-32 x 1/2"
422	30312		
422 1159	30312 28820		
422 1159 1160	28820	;	Screw, 10-32 x 1/2"
422 1159 1160 1160		:	

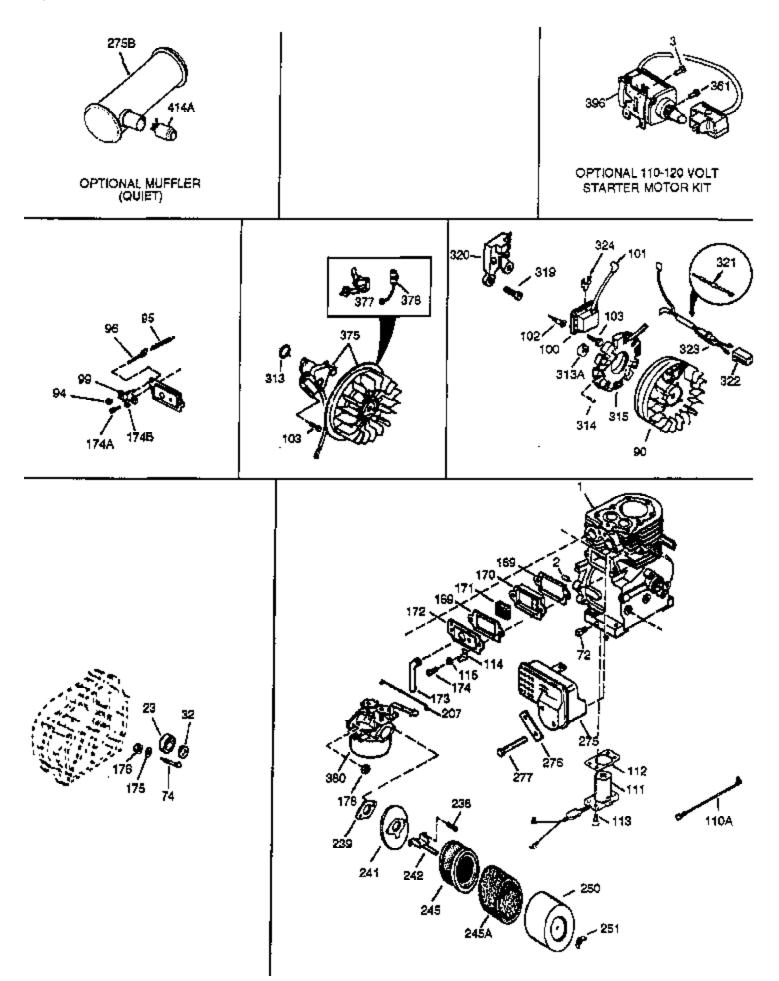

		ty Description
	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
2	27652	Pin, Dowel
	650820	Screw, 1/4-20 x 1/2"
37A	30322	Nut & Lockwasher, 8-32
72	27642	Plug, Oil drain
101	610118	Cover, Spark plug
103	650489	Screw, 1/4-20 x 5/8"
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
LIOD	001020	mufflercan be used on any model.)
		3 <i>i</i>
	33280A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33662	Hub & Screen Assy.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
0017		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	34666	Cover, Carburetor
	31291	Plug, Cover
	34417	Decal, Primer
	610848	Magneto (w/ring gear for 120 Volt sta rter) NOTE: The
010	010010	complete magneto is not available as an assembly.
		Themagneto number is shown for reference purpose only.
		Order component parts individually, as shown in parts list.
		(Refer to Division 5, Section B, page 28 for breakdown or
		Fiche 18B, Grid F-1
377	30547A	Breaker Points (Use with Std. point i gn.)
378	30548B	Condenser
380	632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page 168 for breakdown or Fiche18B, Grid E-9)
104	720226	10
	730226 35824	SAE 5W30 4-Cycle Engine Oil (Quart)
422	00024	Muffler Optional