



Ref #	Part Number Qty	Description
	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
	27652	Pin, Dowel
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	30699C	
		Rod Assy., Governor (Incl. 15A & 15B)
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
20	32630	Seal, Oil
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
26	650561	Sorow 1/4 20 x 5/8"
		Screw, 1/4-20 x 5/8"
	33720B	Crankshaft (Incl. 108 & 109)
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
37	29216	Locknut, 10-32
37A	30322	Nut & Lockwasher, 8-32
38	29642	Ring, Retaining
	34543	Piston, Pin & Ring Set (Std.) (3-3/16 ")
	34544	Piston, Pin & Ring Set (.010" OS)
	34545	Piston, Pin & Ring Set (.020" OS)
	34031B	Piston & Pin Ass'y. (Std.)(3-3/16")(I ncl.43)
	34032B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34033B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34037	Ring Set (Std.) (3-3/16" Bore)
42	34038	Ring Set (.010" OS)
42	34039	Ring Set (.020" OS)
43	27888	Ring, Piston Pin retaining
	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650662C	Bolt, Connecting rod (2 pieces)
	650662C	Bolt, Connecting rod (2 pieces)
	34034	Lifter, Valve
	34242	Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	650128	Screw, 10-24 x 1/2"
69	35262	* Gasket, Flange
70	33626B	Cyl.Cover (Incl.71,75,80,179,180,220, 221)
72	27642	Plug, Oil drain
	33625	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as required)
	650832	Screw, 1/4-20 x 1-11/16" (Use as requ ired)
89	32589	Key, Flywheel
	650815	Washer, Belleville
	8116	Nut, Hex
	27276	Cover, Spark plug
	650489	Screw, 1/4-20 x 5/8"
	29783	
100	23103	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)

119	33245	Gear, Crankshaft
120	34041A	* Gasket, Cylinder head
	34030A	Head, Cylinder
125	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	
		Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
		650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650890	Washer, Internal Lock
	30747	Clip, Spark plug shorting
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
149	27882	Cap, Upper valve spring
150	27881	Spring, Valve
151	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
184	33263	* Gasket, Carburetor
185	33877	Pipe, Intake
	33372	Link, Governor lever-to-bellcrank
	33878	Link, Governor lever-to-throttle
	27793	Clip, Conduit
210 222A		Pop Rivet (Can be purchased locally)
	650279	
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
261	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
	33280A	Muffler
	31588	Plate, Muffler locking
		•
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
281	33013	Cover, Starter bubble
282	650760	Screw, 8-32 x 7/16"
285A		Hub & Screen Assy.
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
200	30962	Fuel Line (Braided 32")(80cm)(As required)

Ref # Part Number	Qty Description
291 30705	Fuel Line (Braided 16")(40cm)(As required)
292 26460	Fuel Line Clamp (Use as required)
298 650665	Screw, 1/4-15 x 7/8"
300 34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were builtwith different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
301A 410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A 33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A 34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
301A 35355	Fuel Cap (Red Plastic)(1.75" I.D.)
306 29673	* Gasket, Oil filler
310 31297	Dipstick (Incl. 307)
338A 31291	Plug, Cover
340 34154	Plate, Upper fuel tank mtg.
341 34155	Bracket, Lower fuel tank mtg.
342 650561	Screw, 1/4-20 x 5/8"
370A 550223	Decal, Name
370 34346	Decal, Instruction
370 35274	Decal, Instruction
379 631021	Inlet Needle, Seat & Clip Assy.
380 631931A	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 150 for breakdown Grid E-5)
400 33279G	* Gasket Set (Incl. items marked *)
420 730225	SAE 30 4-Cycle Engine Oil (Quart)
421 730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422 35824	Muffler Optional

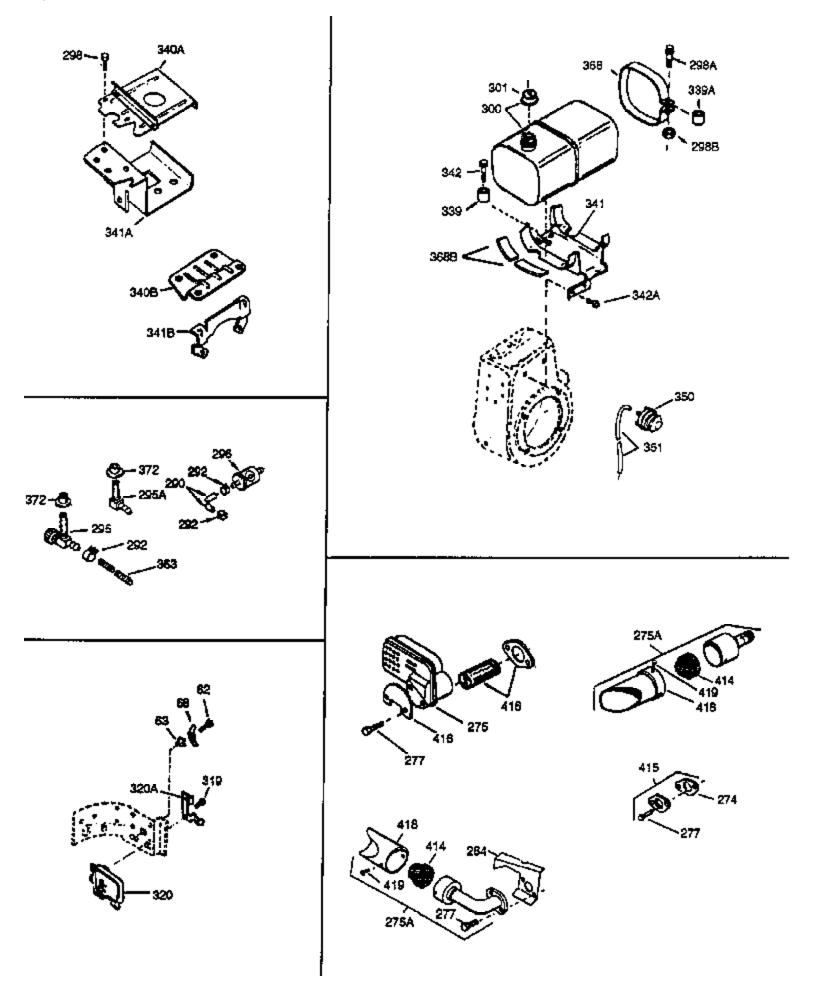


		/ Description
	30322	Nut & Lockwasher, 8-32
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
222A		Pop Rivet (Can be purchased locally)
	33269A	Cover, Air cleaner
	35865	Gasket, Exhaust
	33280A	Muffler
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
285A	33286	Hub & Screen Assy.
290	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fuel Line (Braided 32")(80cm)(As requ ired)
292	26460	Fuel Line Clamp (Use as required)
298	650665	Screw, 1/4-15 x 7/8"
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
201 0	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
501A	410144B	I.D.)
		l.U.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
201 0	34210	Fuel Can (Pad Plactic) (Spurt Paciatant, High Profile) (Las
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
306	29673	* Gasket, Öil filler
338A	31291	Plug, Cover
	34155	Bracket, Lower fuel tank mtg.
342	650561	Screw, 1/4-20 x 5/8"
414	33323	Opt.Muffler Screen (Mini-Bike applica tion)
	730130	Kit, Exhaust adapter (Incl. 274 & 277)
	33700	Cover & Tube, Muffler (use as require d)
	650578	Screw, 8-18 x 3/8" (use as required)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional

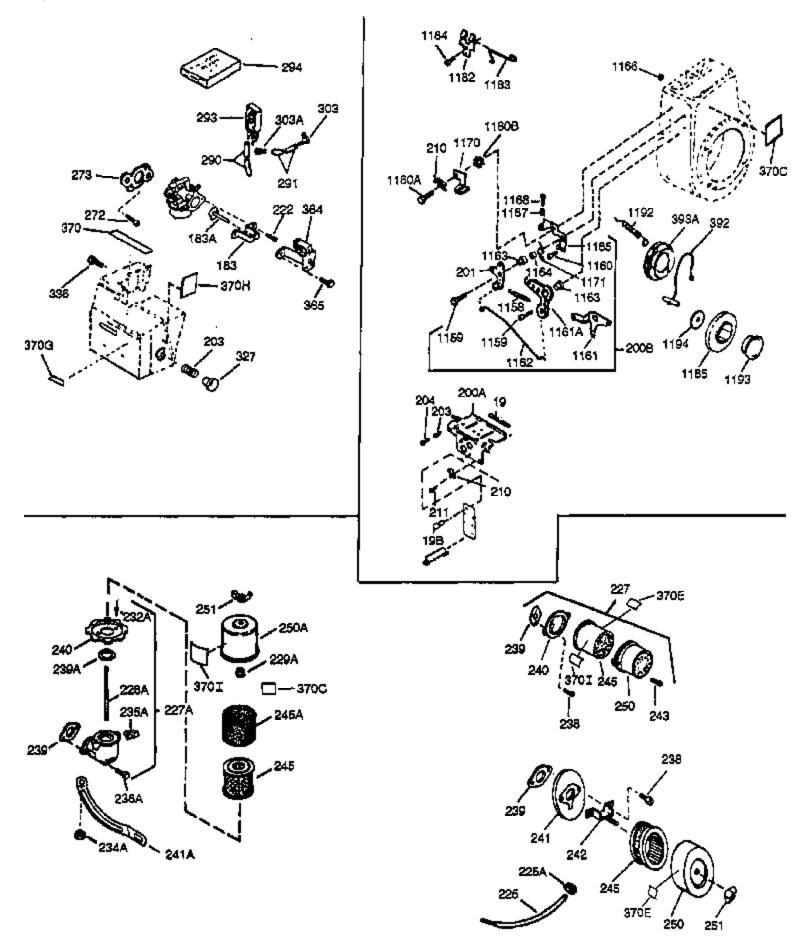

	Part Number	Qty	Description
	30322		Nut & Lockwasher, 8-32
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713		Screw, 5/16-18 x 5/8"
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
201	30201A		Lever, Speed control
210	27793		Clip, Conduit
222A			Pop Rivet (Can be purchased locally)
227	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
			required)
238	28820		Screw, 10-32 x 1/2"
	27272A		* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
	33269A		
	650513		Cover, Air cleaner
	33286		Nut, Wing 1/4-20
			Hub & Screen Assy.
	29774 30962		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
			Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As required)
293	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
0014			
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
3010	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
50 IA	34210		as required) (1.5" I.D.)
			as required) (1.5 1.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
303	32958		Fitting, Fuel
306	29673		* Gasket, Oil filler
338A	31291		Plug, Cover
370	34346		Decal, Instruction
370	35274		Decal, Instruction
	590343		Rope & Handle, Starter
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional
1158	33578		Spring, Extension
	30312		Screw, 10-32 x 1/2"
	650399		Screw, 10-32 x 5/8"
	28820		Screw, 10-32 x 1/2"
	27070		Lockwasher
	33372		Link, Governor lever-to-bellcrank
	29530		Bushing, Bellcrank lever
	29530		Bushing, Bell crank lever
	28562		Bushing, R.P.M adjusting lever
	30199A		Speed Adjusting Bracket (Incl. 167 & 168)
1100			

Ref #	Part Number	Qty	Description
1166	33450		Nut, Lock
1167	32924		Spring, Compression
1168	650688		Screw, 10-32 x 1"
1185	33816		Hub & Screen Assy.

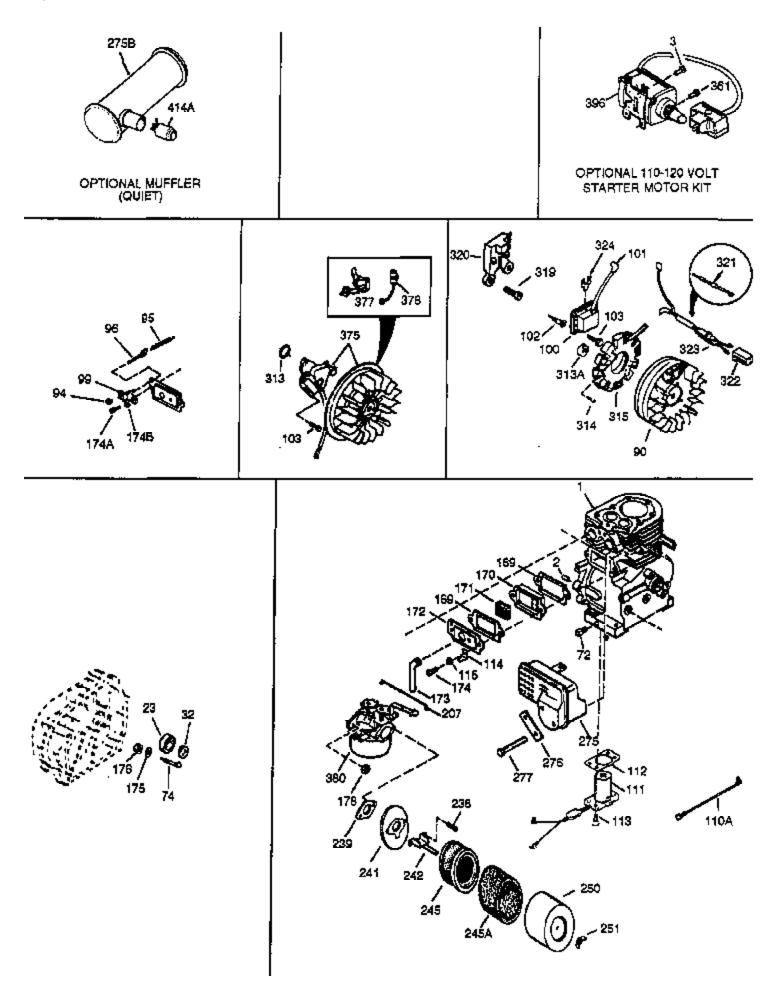

	Part Number Qty	
1	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
2	27652	Pin, Dowel
	33627	Bearing, Ball
	33628	Washer, Thrust
	30322	Nut & Lockwasher, 8-32
	27642	Plug, Oil drain
	31855	Retainer, Bearing
101	27276	Cover, Spark plug
103	650489	Screw, 1/4-20 x 5/8"
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	27896A	* Gasket, Breather
	28423	Body, Breather
171	28424	Element, Breather
172	28425	Cover, Breather
173	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	650778	Lockwasher
	650580	Nut, Lock
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
238	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	
		Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
251	650513	Nut, Wing 1/4-20
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
075	222224	
	33280A	Muffler
276	31588	Plate, Muffler locking
276	35741	Plate, Muffler locking
277	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	33286	Hub & Screen Assy.
501A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
3∩1∆	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
301A	33002	
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	
		Plug, Cover
3/5	610842	Magneto NOTE: The complete magneto is not available as
		an assembly. Themagneto number is shown for reference
		purpose only. Order component parts individually, as shown
		in parts list. (Refer to Division 5, Section B, page 28 for
		breakdown or Fiche 18B, Grid F-1)
377	30547A	Breaker Points (Use with Std. point i gn.)
		· - · ·

Ref #	Part Number	Qty	Description
378	30548B		Condenser
380	631931A		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 150 for breakdown Grid E-5)
	730226 35824		SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional