




D-(#	Det Northern	Description
	,	/ Description
	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	650494	Screw, 6-40 x 5/16"
	30700	Yoke, Governor
16	33454	Governor Lever Assy.
17	29916	Clamp, Governor lever
18	650548	Screw, 8-32 x 5/16"
20	35319	Seal, Oil
	29536	Blower Housing Baffle (Without electric starter knockout)
-		(Use as required)
0=	0=0=04	
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
25	35326	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
		·
	35420A	Crankshaft
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
40	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
40	34861A	Piston, Pin & Ring Set (.010" OS)
40	34862A	Piston, Pin & Ring Set (.020" OS)
41	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	Ring Set (.010" OS)
	34868A	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
	35373A	
		Rod Assy., Connecting (Incl. 46, 47 & 49)
	650908	Bolt, Connecting rod
	650882	Connecting Rod Bolt (2 pcs. on early Specs.)
	34034	Lifter, Valve
	35374	Dipper, Oil
	35375	Camshaft (MCR)
	33273A	Extension, Blower housing
65	650128	Screw, 10-24 x 1/2"
69	35262	* Gasket, Flange
70	33626B	Cyl.Cover (Incl.71,75,80,179,180,220, 221)
72	27642	Plug, Oil drain
75	33625	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	35378	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	611090	Flywheel
	650880	Washer, Lock
	650881	Nut, 5/8-18
	35135	Solid State Assy.
101	27276	Cover, Spark plug
102	650872	Stud, Solid state mounting
		-


	D (N)	B 1.0
		Description T 15 10 01 11
	650814	Screw, Torx T-15, 10-24 x 1"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
109	33245	Gear, Crankshaft
	34923A	* Gasket, Cylinder head
	34030A	
		Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
		650691 washer.)
120	CEO711	Corour F/16 10 x 1 F/0 " (Llos as required) (Con use 6001)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650890	Washer, Internal Lock
	30747	
		Clip, Spark plug shorting
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
169	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
172	28425	Cover, Breather
173	35350	Tube, Breather
174	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	33263	* Gasket, Carburetor
	34707	Pipe, Intake
	34661	Link, Governor lever
	34677	Control Bracket (Incl.19, 203, 204, 2 06, 209)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
		·
	33878	Link, Governor lever-to-throttle
	650821	Screw, 10-32 x 1/2"
	32410	Knob, Speed control
222A	050070	Pop Rivet (Can be purchased locally)
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
260	33375D	Blower Housing (For electric starter)
261	650788	Screw, 5/16-18 x 3/4"
262	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
	33280A	Muffler
	31588	Plate, Muffler locking
=, 0	-	, ···- -


Ref #	Part Number	Qty	Description
276	35741	-	Plate, Muffler locking
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
281	33013		Cover, Starter bubble
282	650760		Screw, 8-32 x 7/16"
285	35287		Cup, Starter
286	35194		Screen, Starter
287	29752		Nut, 1/4-28
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
291	30705		Fuel Line (Braided 16")(40cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were builtwith different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	31297		Dipstick (Incl. 307)
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	34686		Decal, Name
	34346		Decal, Instruction
	35274		Decal, Instruction
	33962		Decal, Control
379	631021		Inlet Needle, Seat & Clip Assy.
	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page A4-4 for breakdown or Fiche 18B, Grid D-3)
400	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional

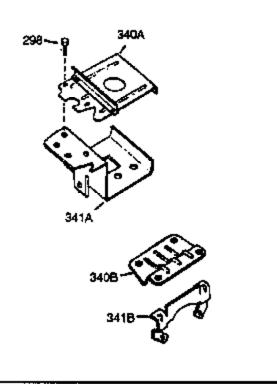


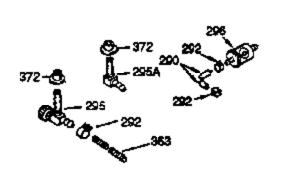


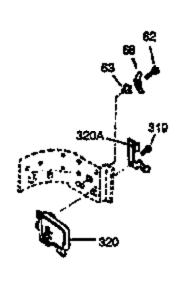


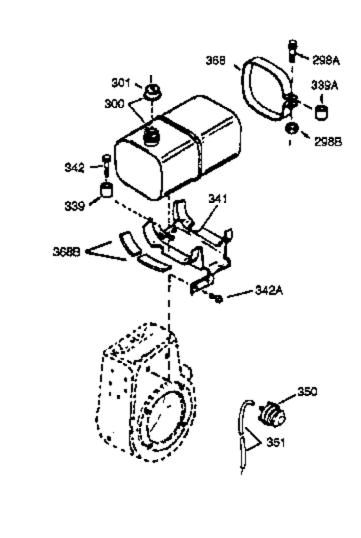

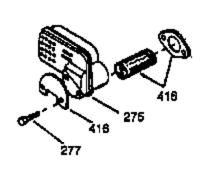 


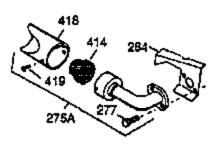

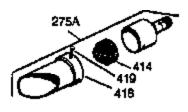



Ref #	Part Number (Qty	Description
37A	30322		Nut & Lockwasher, 8-32
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
274	35865		Gasket, Exhaust
275	33280A		Muffler
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
004.4	00000		,
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
3∩1∆	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional

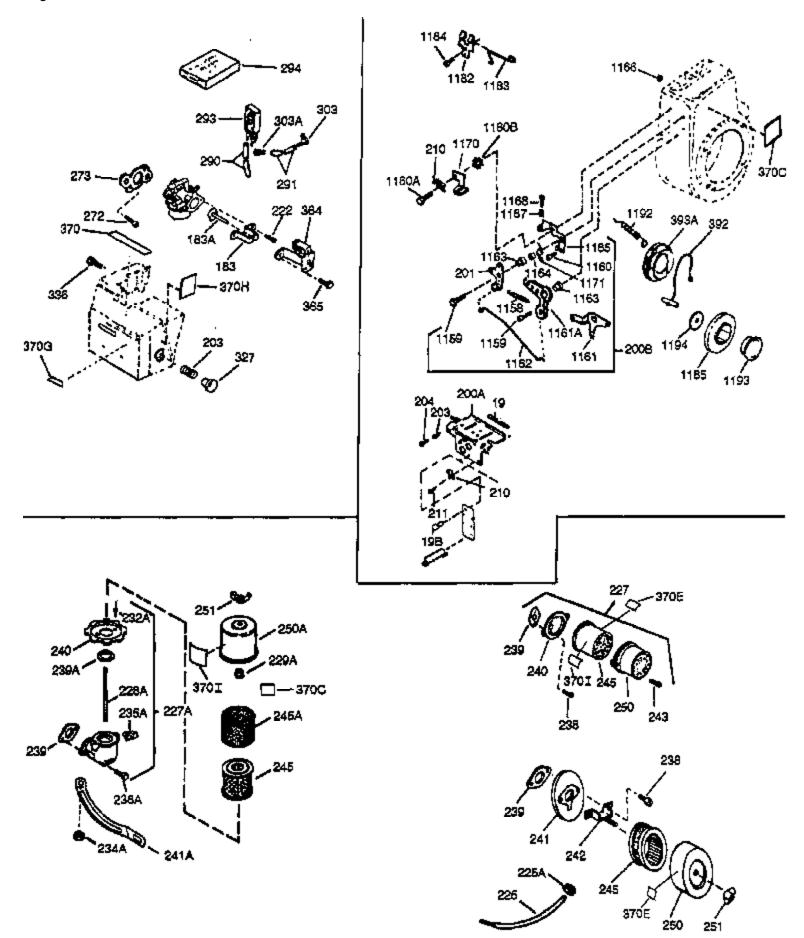

Ref #	Part Number	Qtv	Description
	30322	~-,	Nut & Lockwasher, 8-32
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
222A	000010		Pop Rivet (Can be purchased locally)
	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
ZZ 1	700127		required)
	28820		Screw, 10-32 x 1/2"
	27272A		* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
	33269A		Cover, Air cleaner
	650513		Nut, Wing 1/4-20
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
291	30705		Fuel Line (Braided 16")(40cm)(As required)
293	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
204	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
201	60701		are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
			• •
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
33 // 1			required) (1.5" I.D.)
0011	04040		. , , ,
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	32958		Fitting, Fuel
	29673		* Gasket, Oil filler
	31291		Plug, Cover
	34346		Decal, Instruction
	35274		Decal, Instruction
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
	30312		Screw, 10-32 x 1/2"
	28820		Screw, 10-32 x 1/2"
	27070		Lockwasher
	33816		Hub & Screen Assy.
			· · · · · · · · · · · · · · · · · · ·



Ref #	Part Number C	tty Description
	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
23	33627	Bearing, Ball
	33628	Washer, Thrust
	30322	Nut & Lockwasher, 8-32
	27642	Plug, Oil drain
	31855	Retainer, Bearing
	611090	Flywheel
	35135	Solid State Assy.
	27276	Cover, Spark plug
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	650778	•
		Lockwasher Nut. Lock
	650580	Nut, Lock
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A	20020	Pop Rivet (Can be purchased locally)
	28820	Screw, 10-32 x 1/2" * Cooket. Air clooper
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
	33280A	Muffler Muffler (Incl. 284, 284 A. 8, 416) (This aparts arrestor
2/58	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
276	31588	Plate, Muffler locking
276	35741	Plate, Muffler locking
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
201 /	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
30 IA	33032	required) (1.5" I.D.)
		1 / (/
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	Plug, Cover
	30547A	Breaker Points (Use with Std. point i gn.)
	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
300	OULLTL	page A4-4 for breakdown or Fiche 18B, Grid D-3)
		,
421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)

Ref # Part Number Otv	Description
Rei # Pait Number Qty	Description
422 35824	Muffler Optional
422 33624	Muttler Optional