




Ref #	Part Number	Qty [Description
	35371		Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652		Pin, Dowel
			·
	30699C		Rod Assy., Governor (Incl. 15A & 15B)
	650494		Screw, 6-40 x 5/16"
	30700		Yoke, Governor
	33454	(Governor Lever Assy.
17	29916	(Clamp, Governor lever
18	650548	9	Screw, 8-32 x 5/16"
	35319		Seal, Oil
	29536		Blower Housing Baffle (Without electric starter knockout)
20	25000		(Use as required)
05	050504		` ,
25	35256A		Blower Housing Baffle (With electric starter knockout) (Use
			as required)
25	35326	E	Baffle, Blower housing
26	650561	5	Screw, 1/4-20 x 5/8"
30	35420A	(Crankshaft
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
	29216		Locknut, 10-32
	30322		Nut & Lockwasher, 8-32
	29642		Ring, Retaining
40	34860A	F	Piston, Pin & Ring Set (Std.)(3-5/16")
40	34861A	F	Piston, Pin & Ring Set (.010" OS)
40	34862A	F	Piston, Pin & Ring Set (.020" OS)
	34863		Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864		Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A		Ring Set (Std.) (3-5/16" Bore)
	34867A		Ring Set (.010" OS)
42	34868A	F	Ring Set (.020" OS)
43	27888	F	Ring, Piston Pin retaining
45	35373A	F	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650908		Bolt, Connecting rod
	650882		Connecting Rod Bolt (2 pcs. on early Specs.)
	34034		Lifter, Valve
	35374		Dipper, Oil
	35375		Camshaft (MCR)
	33273A		Extension, Blower housing
64	650802		Screw, 1/4-20 x 5/8"
65	650128	5	Screw, 10-24 x 1/2"
69	35262	*	* Gasket, Flange
	33626B		Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	27642		Plug, Oil drain
	33625		Seal, Oil
	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
	35378	(Gear Assy., Governor (Incl. 81)
83	30588A	9	Spool, Governor
84	29193		Ring, Retaining
	650833		Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832		Screw, 1/4-20 x 1-11/16" (Use as required)
	32589		Key, Flywheel
	611090		Flywheel
	650880		Washer, Lock
93	650881	1	Nut, 5/8-18
	35135		Solid State Assy.
	27276		Cover, Spark plug
701	-		, - ₁ y


D-11	Det North and Co.	Description
		/ Description
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
109	33245	Gear, Crankshaft
	34923A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
	6021A	
130	0021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
		650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 1/2 (Ose as required)
	650890	Washer, Internal Lock
	30747	•
	33636	Clip, Spark plug shorting
		Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	33263	* Gasket, Carburetor
	34707	Pipe, Intake
	34661	Link, Governor lever
	34677	Control Bracket (Incl.19, 203, 204, 2 06, 209)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
207	33878	Link, Governor lever-to-throttle
	650821	Screw, 10-32 x 1/2"
215	32410	Knob, Speed control
222A		Pop Rivet (Can be purchased locally)
223	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
	33280A	Muffler
210		


Ref #	Part Number	Qty	Description
276	31588	-	Plate, Muffler locking
276	35741		Plate, Muffler locking
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
281	33013		Cover, Starter bubble
	650760		Screw, 8-32 x 7/16"
	35287		Cup, Starter
	35446		Screen, Starter
	29752		Nut, 1/4-28
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
300	34130A		builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
			1-1/2 1.D. Openling use ruel cap 30000.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
201 /	22022		Fuel Can (Bad Blastia) (Court Begintent Law Brofile) (Llee co
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
201 /	25255		Fuel Cap (Ped Pleatie)/4.75" LD.)
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	31297		Dipstick (Incl. 307)
	35392		Plug, Starter
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33962		Decal, Control
	34346		Decal, Instruction
	35274		Decal, Instruction
	34686		Decal, Name
	631021		Inlet Needle, Seat & Clip Assy.
380	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
			page A4-4 for breakdown or Fiche 18B, Grid D-3)
300	590633		Rewind Starter (Refer to Division 5, Section C, page 30 for
390	00000		breakdown or Fiche 18B, Grid G-1)
			•
400	33279G		* Gasket Set (Incl. items marked *)
420	730225		SAE 30 4-Cycle Engine Oil (Quart)
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional
			•

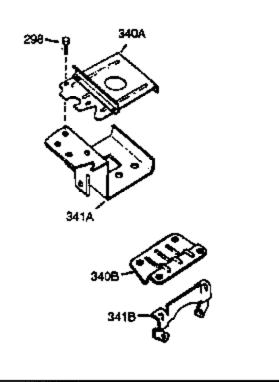

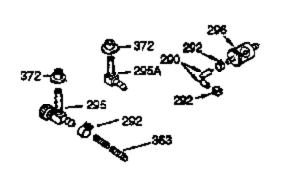


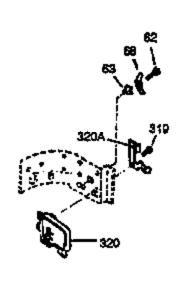

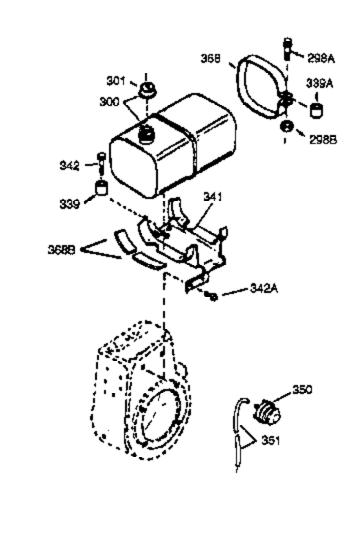


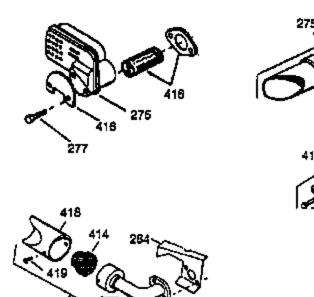

Ref #	Part Number	Qty Descrip	tion
37A	30322	Nut & L	ockwasher, 8-32
64	650802	Screw,	1/4-20 x 5/8"
129	650727	Screw,	5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	Screw,	5/16-18 x 5/8"
131	650737	Screw,	1/4-20 x 1/2" (Use as required)
131	650738	Screw,	1/4-20 x 5/8 (Use as required)
222A		Pop Riv	vet (Can be purchased locally)
250B	33269A	Cover, A	Air cleaner
274	35865	Gasket	, Exhaust
275	33280A	Muffler	
277	650729	Screw,	5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw,	5/16-18 x 4-1/4" (Use as requi red)
290	29774	Fuel Lin	ne (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fuel Lir	ne (Braided 32")(80cm)(As requ ired)
292	26460	Fuel Lin	ne Clamp (Use as required)
298	650665	Screw,	1/4-15 x 7/8"
300	34156A	Fuel Ta	nk (Incl. 292 & 301) NOTE: These tanks were
		builtwith	n different size fuel inlet openings. Tanks with the
		1-3/16"	I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.	D. opening use fuel cap 35355.
301Δ	410144B	Fuel Ca	ap (White Plastic)(Standard) (Use as required) (1.5"
30171	4101410	I.D.)	tp (vvrite i lastic)(claridata) (ose as required) (1.5
		,	
301A	33032		ap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required	d) (1.5" I.D.)
301A	34210	Fuel Ca	ap (Red Plastic) (Spurt Resistant, High Profile) (Use
			ired) (1.5" I.D.)
201 /	25255	Fuel Ca	np (Pod Plastia)/1.75" I.D.)
	35355 29673		ap (Red Plastic)(1.75" I.D.) et, Oil filler
	31291	Plug, Co	•
	34155		, Lower fuel tank mtg.
	650561		, Lower ruer tank mig. 1/4-20 x 5/8"
	33323		ffler Screen (Mini-Bike applica tion)
	730130	•	nier Screen (Mini-bike applica tion) laust adapter (Incl. 274 & 277)
	33700	•	k Tube, Muffler (use as require d)
	650578		
	730226		8-18 x 3/8" (use as required) V30 4-Cycle Engine Oil (Quart)
	750226 35824		V30 4-Cycle Engine Oil (Quart) Optional
422	0002T	iviuiiiei v	Οριιοι Idi

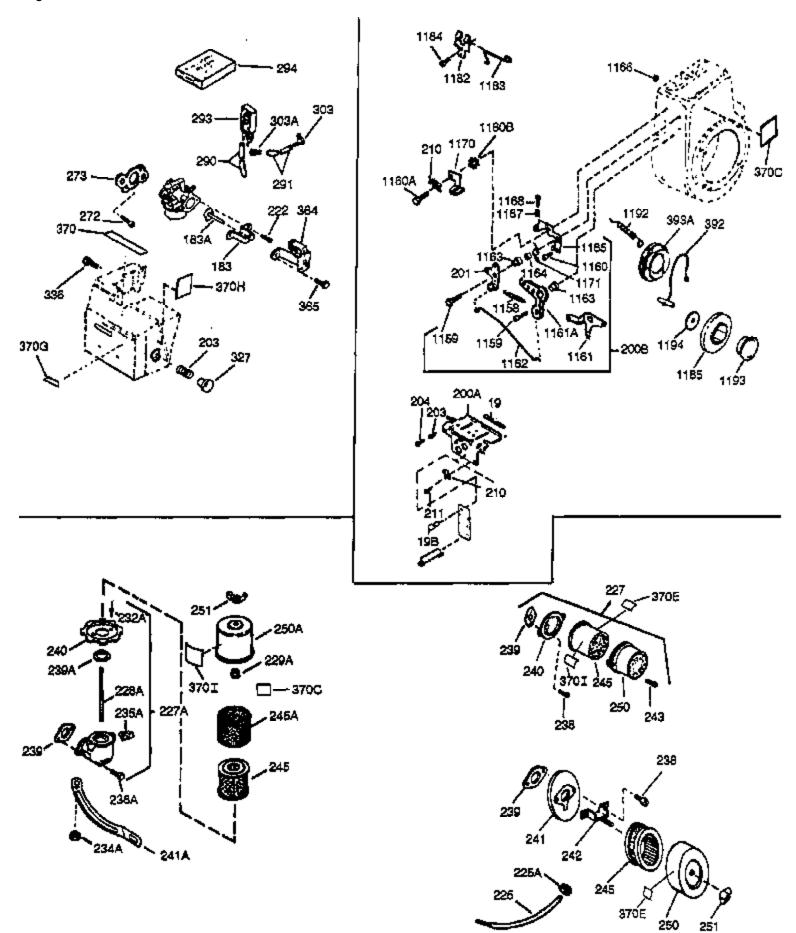

Ref #	Part Number	Qty	Description
37A 64 129 131A 131 200B 203 204 222A	30322 650802 650727 650713 650737 650738 730152 31342 650549	<u>a,y</u>	Nut & Lockwasher, 8-32 Screw, 1/4-20 x 5/8" Screw, 5/16-18 x 1-3/4 (Use as requir ed) Screw, 5/16-18 x 5/8" Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Control Bracket (Incl.1158-1171)(As r eq.) Spring, Compression Screw, 5-40 x 7/16" Pop Rivet (Can be purchased locally) Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
238 239 241	28820 27272A 33266 33267		required) Screw, 10-32 x 1/2" * Gasket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner
245 250B 251 290 290 291	33268 33269A 650513 29774 30962 30705 33715		Element, Air cleaner Cover, Air cleaner Nut, Wing 1/4-20 Fuel Line (Braided 8-1/4")(21cm)(As r equired) Fuel Line (Braided 32")(80cm)(As required) Fuel Line (Braided 16")(40cm)(As required) Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
303 306 327 338A 370 370 421 422 1159 1160 1160	35355 32958 29673 35392 31291 34346 35274 730226 35824 30312 28820 27070 33816		Fuel Cap (Red Plastic)(1.75" I.D.) Fitting, Fuel * Gasket, Oil filler Plug, Starter Plug, Cover Decal, Instruction Decal, Instruction SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional Screw, 10-32 x 1/2" Screw, 10-32 x 1/2" Lockwasher Hub & Screen Assy.

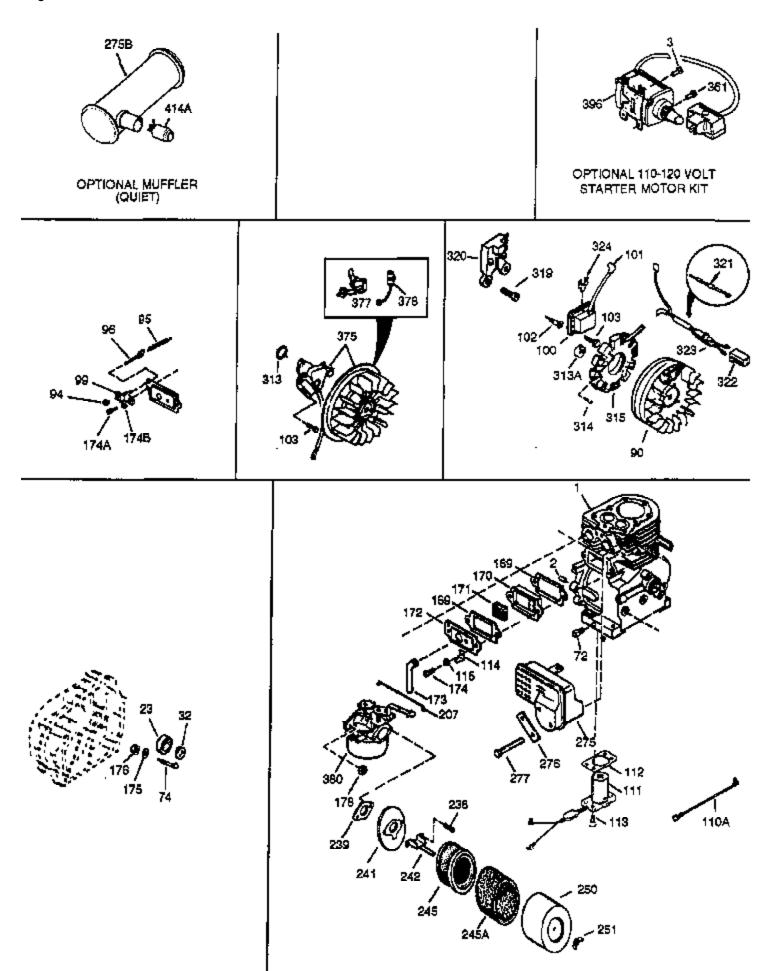

Ref #	Part Number Q	ty Description
	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652	Pin, Dowel
23	33627	Bearing, Ball
32	33628	Washer, Thrust
37A	30322	Nut & Lockwasher, 8-32
64	650802	Screw, 1/4-20 x 5/8"
	27642	Plug, Oil drain
	31855	Retainer, Bearing
	611090	Flywheel
	35135	Solid State Assy.
	27276	Cover, Spark plug
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	650778	Lockwasher
	650580	
	29752	Nut, Lock
		Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A	20020	Pop Rivet (Can be purchased locally)
	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
2/5B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
275	33280A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
30 IA	שדוטודי	I.D.)
		•
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
50 t	· - · · · · · · · · · · · · · · · ·	as required) (1.5" I.D.)
2011	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	Plug, Cover
	30547A	Breaker Points (Use with Std. point i gn.)
380	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page A4-4 for breakdown or Fiche 18B, Grid D-3)

Ref # Part Number	Qty Description
421 730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422 35824	Muffler Optional