




Def #	Dord M. work on	Description
	Part Number Qt	
	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
15B	650494	Screw, 6-40 x 5/16"
15A	30700	Yoke, Governor
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	35319	Seal, Oil
		·
20	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
	35326	Baffle, Blower housing
26	650561	Screw, 1/4-20 x 5/8"
30	35420A	Crankshaft
35	29826	Screw, 10-32 x 3/4"
36	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
	34860A	
		Piston, Pin & Ring Set (Std.)(3-5/16")
	34861A	Piston, Pin & Ring Set (.010" OS)
	34862A	Piston, Pin & Ring Set (.020" OS)
	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	34866A	Ring Set (Std.) (3-5/16" Bore)
42	34867A	Ring Set (.010" OS)
	34868A	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
	35373A	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650908	Bolt, Connecting rod
	650882	
		Connecting Rod Bolt (2 pcs. on early Specs.)
	34034	Lifter, Valve
	35374	Dipper, Oil
	35375	Camshaft (MCR)
	33273A	Extension, Blower housing
64	650802	Screw, 1/4-20 x 5/8"
65	650128	Screw, 10-24 x 1/2"
69	35262	* Gasket, Flange
70	33626B	Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	27642	Plug, Oil drain
	33625	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	35378	
		Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as requ ired)
89	32589	Key, Flywheel
90	611090	Flywheel
	650880	Washer, Lock
	650881	Nut, 5/8-18
	35135	Solid State Assy.
	27276	Cover, Spark plug
101		Sover, Spain plug


D.(#	Dard N. Julyan	December 2
		y Description
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
109	33245	Gear, Crankshaft
	34923A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
130	0021A	650691 washer.)
		030091 Washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required )
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650890	Washer, Internal Lock
	30747	Clip, Spark plug shorting
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
	27881	
	32581	Spring, Valve
		Cap, Lower valve spring
	27896A 28423	* Gasket, Breather
	28424	Body, Breather
		Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	33263	* Gasket, Carburetor
	34707	Pipe, Intake
	34661	Link, Governor lever
	34677	Control Bracket (Incl.19, 203, 204, 2 06, 209)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	33878	Link, Governor lever-to-throttle
	650821	Screw, 10-32 x 1/2"
	32410	Knob, Speed control
222A	650270	Pop Rivet (Can be purchased locally)
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
275	33280A	Muffler


Ref #	Part Number	Qty	Description
276	31588		Plate, Muffler locking
276	35741		Plate, Muffler locking
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
	33013		Cover, Starter bubble
	650760		Screw, 8-32 x 7/16"
	35287		Cup, Starter
	35446		Screen, Starter
	29752		Nut, 1/4-28
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
2214	4404.448		
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
<b>55</b> t			required) (1.5" I.D.)
2214	0.404.0		
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	31297		Dipstick (Incl. 307)
	35392		Plug, Starter
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33962		Decal, Control
	34346		Decal, Instruction
	35274		Decal, Instruction
	34686		Decal, Name
	631021		Inlet Needle, Seat & Clip Assy.
	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
300	·		page A4-4 for breakdown or Fiche 18B, Grid D-3)
<b>.</b>	<b>T</b> 00000		, ,
390	590633		Rewind Starter (Refer to Division 5, Section C, page 30 for
			breakdown or Fiche 18B, Grid G-1)
400	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
722	00021		Mamor Optional

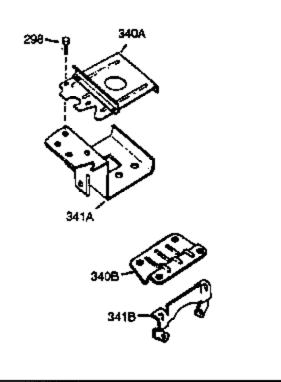


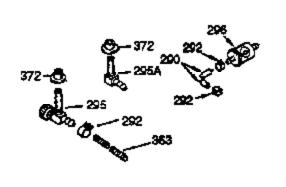


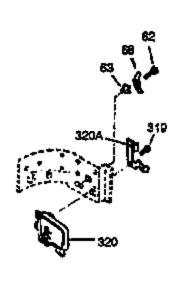


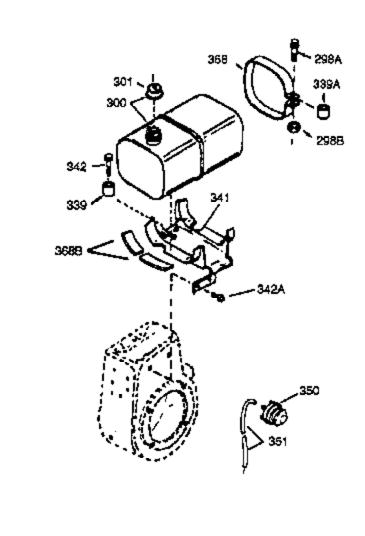

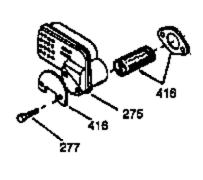  


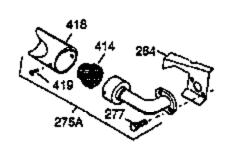






Ref #	Part Number	Qty Descrip	tion
37A	30322	Nut & L	ockwasher, 8-32
64	650802	Screw,	1/4-20 x 5/8"
129	650727	Screw,	5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	Screw,	5/16-18 x 5/8"
131	650737	Screw,	1/4-20 x 1/2" (Use as required )
131	650738	Screw,	1/4-20 x 5/8 (Use as required)
222A		Pop Riv	vet (Can be purchased locally)
250B	33269A	Cover, A	Air cleaner
274	35865	Gasket	, Exhaust
275	33280A	Muffler	
277	650729	Screw,	5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw,	5/16-18 x 4-1/4" (Use as requi red)
290	29774	Fuel Lin	ne (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fuel Lir	ne (Braided 32")(80cm)(As requ ired)
292	26460	Fuel Lin	ne Clamp (Use as required)
298	650665	Screw,	1/4-15 x 7/8"
300	34156A	Fuel Ta	nk (Incl. 292 & 301) NOTE: These tanks were
		builtwith	n different size fuel inlet openings. Tanks with the
		1-3/16"	I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.	D. opening use fuel cap 35355.
301Δ	410144B	Fuel Ca	ap (White Plastic)(Standard) (Use as required) (1.5"
30171	4101410	I.D.)	tp (vvrite i lastic)(claridata) (ose as required) (1.5
		,	
301A	33032		ap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required	d) (1.5" I.D.)
301A	34210	Fuel Ca	ap (Red Plastic) (Spurt Resistant, High Profile) (Use
			ired) (1.5" I.D.)
201 /	25255	Fuel Ca	np (Pod Plastia)/1.75" I.D.)
	35355 29673		ap (Red Plastic)(1.75" I.D.) et, Oil filler
	31291	Plug, Co	•
	34155		, Lower fuel tank mtg.
	650561		, Lower ruer tank mig. 1/4-20 x 5/8"
	33323		ffler Screen (Mini-Bike applica tion)
	730130	•	nier Screen (Mini-bike applica tion) laust adapter (Incl. 274 & 277 )
	33700	•	k Tube, Muffler (use as require d)
	650578		
	730226		8-18 x 3/8" (use as required) V30 4-Cycle Engine Oil (Quart)
	750226 35824		V30 4-Cycle Engine Oil (Quart) Optional
422	0002T	iviuiiiei v	Οριιοι Idi

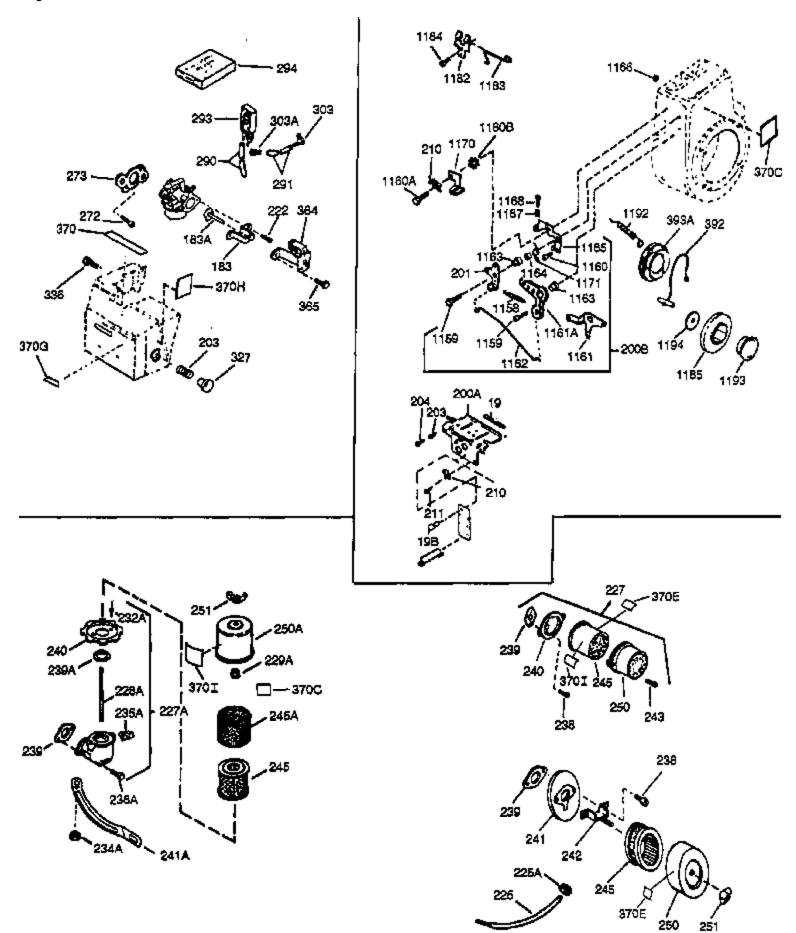

Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
64	650802		Screw, 1/4-20 x 5/8"
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713		Screw, 5/16-18 x 5/8"
	650737		Screw, 1/4-20 x 1/2" (Use as required )
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
222A			Pop Rivet (Can be purchased locally)
227	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as required)
238	28820		Screw, 10-32 x 1/2"
239	27272A		* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
	33269A		Cover, Air cleaner
	650513		Nut, Wing 1/4-20
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As requ ired)
	30705		Fuel Line (Braided 16")(40cm)(As required)
293	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
00.4	05704		···
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
			•
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
303	32958		Fitting, Fuel
306	29673		* Gasket, Oil filler
	35392		Plug, Starter
	31291		Plug, Cover
	34346		Decal, Instruction
	35274		Decal, Instruction
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
	30312		Screw, 10-32 x 1/2"
	28820		Screw, 10-32 x 1/2"
	27070		Lockwasher
1185	33816		Hub & Screen Assy.

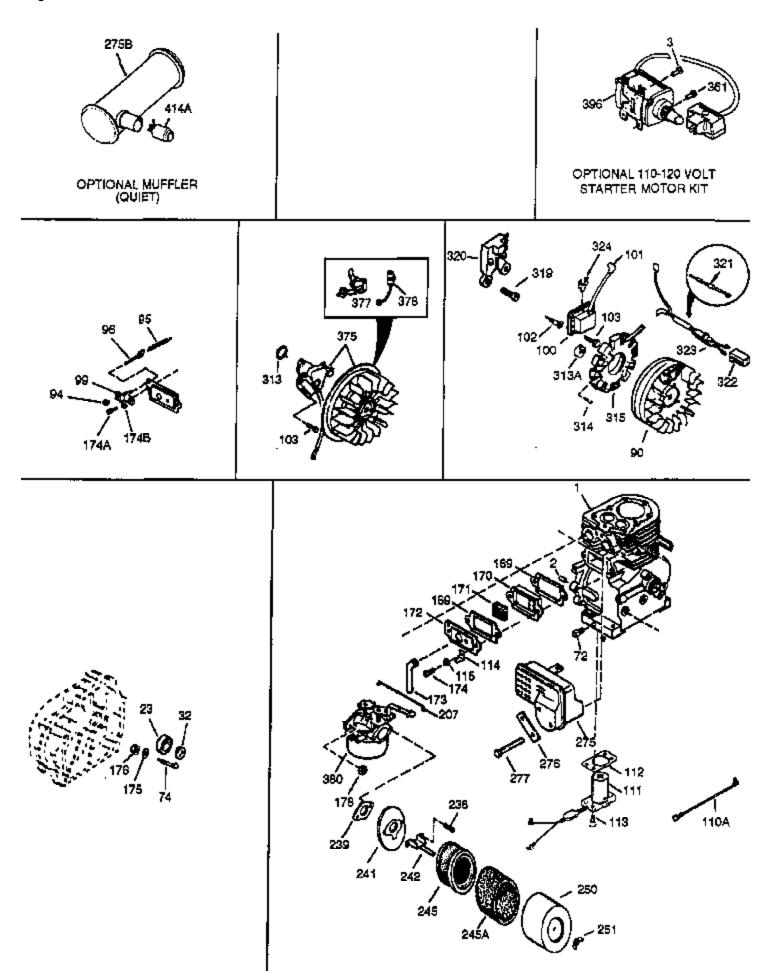

Ref #	Part Number Qty	Description
1	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652	Pin, Dowel
	33627	Bearing, Ball
	33628	Washer, Thrust
	30322	Nut & Lockwasher, 8-32
	650802	Screw, 1/4-20 x 5/8"
	27642	
		Plug, Oil drain
	31855	Retainer, Bearing
	611090	Flywheel
	35135	Solid State Assy.
	27276	Cover, Spark plug
	650872	Stud, Solid state mounting
103	650814	Screw, Torx T-15, 10-24 x 1"
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required )
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	
		Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	650778	Lockwasher
176	650580	Nut, Lock
178	29752	Nut & Lockwasher, 1/4-28
207	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
		,
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
275	222004	Muffler
	33280A	
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
204 A	22022	Fire Con (Dad Blootis) (Court Decistors Love Profile) (Llee of
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
301A	0 <del>1</del> 210	as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	Plug, Cover
	30547A 622242	Breaker Points (Use with Std. point i gn.)
380	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page A4-4 for breakdown or Fiche 18B, Grid D-3)

Ref # Part Number	Qty Description
421 730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422 35824	Muffler Optional