



Ref #	Part Number Qty	Description
1	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
2	27652	Pin, Dowel
3	650820	Screw, 1/4-20 x 1/2"
4	32678	Nipple, Oil drain
	30969	Cap, Óil drain
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	33454	Governor Lever Assy.
	29916	•
		Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	32630	Seal, Oil
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
20		as required)
26	650561	Screw, 1/4-20 x 5/8"
30	33365B	Crankshaft (Incl. 108 & 109)
35	29826	Screw, 10-32 x 3/4"
36	29918	Lockwasher, #8 E.T.
37	29216	Locknut, 10-32
37A	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
	34543	Piston, Pin & Ring Set (Std.) (3-3/16 ")
	34544	Piston, Pin & Ring Set (.010" OS)
	34545	Piston, Pin & Ring Set (.020" OS)
	34031B	Piston & Pin Ass'y. (Std.)(3-3/16")(I ncl.43)
	34032B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34033B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34037	Ring Set (Std.) (3-3/16" Bore)
	34038	Ring Set (.010" OS)
	34039	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650662C	Bolt, Connecting rod (2 pieces)
	650662C	Bolt, Connecting rod (2 pieces)
	34034	Lifter, Valve
49	34242	Dipper, Oil
50	34143	Camshaft (MCR)
60	33273A	Extension, Blower housing
61	34126	Bracket, Grommet mounting
62	650760	Screw, 8-32 x 3/8"
63	28545	Grommet, Plastic
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33367B	Cover, Cylinder (Incl. 71, 75 & 80)
	33368	Bushing, Crankshaft
	27642	Plug, Oil drain
	31950	Seal, Oil
	31845	Shaft, Mechanical governor
		· · · · · · · · · · · · · · · · · · ·
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as required)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
89	32589	Key, Flywheel

	Part Number	Qty	Description
92	650815		Washer, Belleville
93	8116		Nut, Hex
	610118		Cover, Spark plug
	650489		Screw, 1/4-20 x 5/8"
108	29783		Pin, Crankshaft gear (Only serviceable when gear is pinned
			to crank.)
	33245		Gear, Crankshaft
110	34240		Ground Wire
119	34923A		* Gasket, Cylinder head
120	34030A		Head, Cylinder
125	27878A		Exhaust Valve (Std.) (Incl. 151)
	27880A		Exhaust Valve (1/32" OS) (Incl. 151)
	34035		Intake Valve (Std.) (Incl. 151)
	34036		Intake Valve (1/32" OS) (Incl. 151)
	650691		Washer (Do not use with No. 6021A scr ew.)
	650690		Washer, Belleville (Use as required)
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No
			650691 washer.)
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
			but discard 650691 washer.)
130	650694A		Screw, 5/16-18 x 2" (Use as required)
	650737		Screw, $1/4-20 \ge 1/2$ " (Use as required)
	650738		
			Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"
	650890		Washer, Internal Lock
	33636		Resistor Spark Plug
	33369		Bracket, Governor gear
140	650836		Screw, 10-24 x 1/2"
149A	35862		Seal Assy., Intake valve
150	27881		Spring, Valve
151	32581		Cap, Lower valve spring
	27896A		* Gasket, Breather
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Breather
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
	30088A		Screw, 1/4-28 x 1"
	34587		Bracket, Choke
184	33263		* Gasket, Carburetor
185	33877		Pipe, Intake
	34667		Link, Governor lever
	34664		Control Bracket (Incl.19,203, 204, 20 6 & 209)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	610973		Terminal Assy.
	33878		Link, Governor lever-to-throttle
	650821		Screw, 10-32 x 1/2"
210	27793		Clip, Conduit
211	28942		Screw, 10-32 x 3/8"
	34586		Rod, Choke
	35438		Knob, Control
	28820		Screw, 10-32 x 1/2"
222			
222 222A	20020		Pop Rivet (Can be purchased locally)


223 650378 224 27915A 260 34822A 261 650788	Screw, Torx T-30, 5/16-18 x 1-1/8" * Gasket, Intake pipe
260 34822A	
	Plower Housing
261 650788	Blower Housing
	Screw, 5/16-18 x 3/4"
262 29747B	Screw, 5/16-24 x 21/32"
265 33272B	Cover, Cylinder head
275 33280A	Muffler
276 31588	Plate, Muffler locking
276 35741	•
	Plate, Muffler locking
277 650729	Screw, 5/16-18 x 3-3/16" (Use as required)
277 651002	Screw, 5/16-18 x 4-1/4" (Use as required)
281 33013	Cover, Starter bubble
282 650760	Screw, 8-32 x 7/16"
285A 33662	Hub & Screen Assy.
287 29752	Nut, 1/4-28
290 29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290 30962	Fuel Line (Braided 32")(80cm)(As required)
291 30705	Fuel Line (Braided 16")(40cm)(As required)
292 26460	Fuel Line Clamp (Use as required)
295 32961	Valve, Fuel shut-off
298 650665	Screw, 1/4-15 x 7/8"
300 34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
	builtwith different size fuel inlet openings. Tanks with the
	1-3/16" I.D. opening use fuel cap 34210. Tanks with the
	1-1/2" I.D. opening use fuel cap 35355.
301A 410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
	I.D.)
301A 33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
	required) (1.5" I.D.)
2014 24210	Fuel Con (Ded Destie) (Sourt Desistant High Brofile) (Lee
301A 34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
	as required) (1.5" I.D.)
301A 35355	Fuel Cap (Red Plastic)(1.75" I.D.)
305 33893A	Oil Fill Tube
307 33590	"O" Ring
310 34011A	Dipstick (Incl. 307)
336 650765	Screw, 10-32 x 1/2"
337 34666	Cover, Carburetor
338A 31291	Plug, Cover
338 28942	Screw, Sems 10-32 x 3/8"
340 34154	Plate, Upper fuel tank mtg.
341 34155	Bracket, Lower fuel tank mtg.
342 650561	Screw, 1/4-20 x 5/8"
359 34141	Guard, Starter
360 32576	Seal, Snow Guard
365 650767	Screw, 8-32 x 27/64"
370 35274	Decal, Instruction
379 631021	Inlet Needle, Seat & Clip Assy.
380 632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
	page 168 for breakdown or Fiche18B, Grid E-9)
390 590479	Rewind Starter
	* Gasket Set (Incl. items marked *)
400 33279G	
400 33279G 420 730225	SAE 30 4-Cycle Engine Oil (Quart)
420 730225	SAE 30 4-Cycle Engine Oil (Quart)
	SAE 30 4-Cycle Engine Oil (Quart) SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional

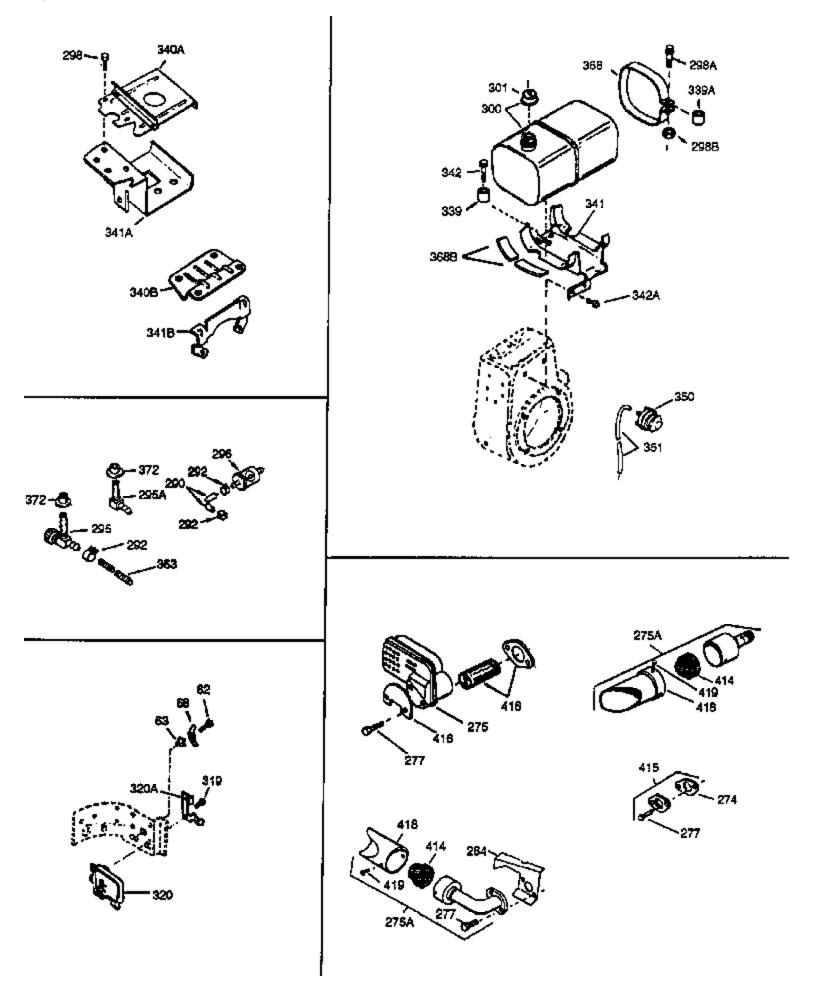

Ref #	Part Number 0	Qty Description
37A	30322	Nut & Lockwasher, 8-32
62	650760	Screw, 8-32 x 3/8"
63	28545	Grommet, Plastic
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	Screw, 5/16-18 x 5/8"
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
222A		Pop Rivet (Can be purchased locally)
274	35865	Gasket, Exhaust
275	33280A	Muffler
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
285A	33662	Hub & Screen Assy.
290	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fuel Line (Braided 32")(80cm)(As requ ired)
292	26460	Fuel Line Clamp (Use as required)
295	32961	Valve, Fuel shut-off
298	650665	Screw, 1/4-15 x 7/8"
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
3014	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
301A	410144D	
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use a
		required) (1.5" I.D.)
301A	24210	Fuel Can (Red Diactic) (Spurt Resistant, High Profile) (Lice
JUIA	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
337	34666	Cover, Carburetor
338A	31291	Plug, Cover
341	34155	Bracket, Lower fuel tank mtg.
342	650561	Screw, 1/4-20 x 5/8"
350	570682	Primer Assy.
351	32180C	Line, Primer
414	33323	Opt.Muffler Screen (Mini-Bike applica tion)
	730130	Kit, Exhaust adapter (Incl. 274 & 277)
	33700	Cover & Tube, Muffler (use as require d)
	650578	Screw, 8-18 x 3/8" (use as required)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional

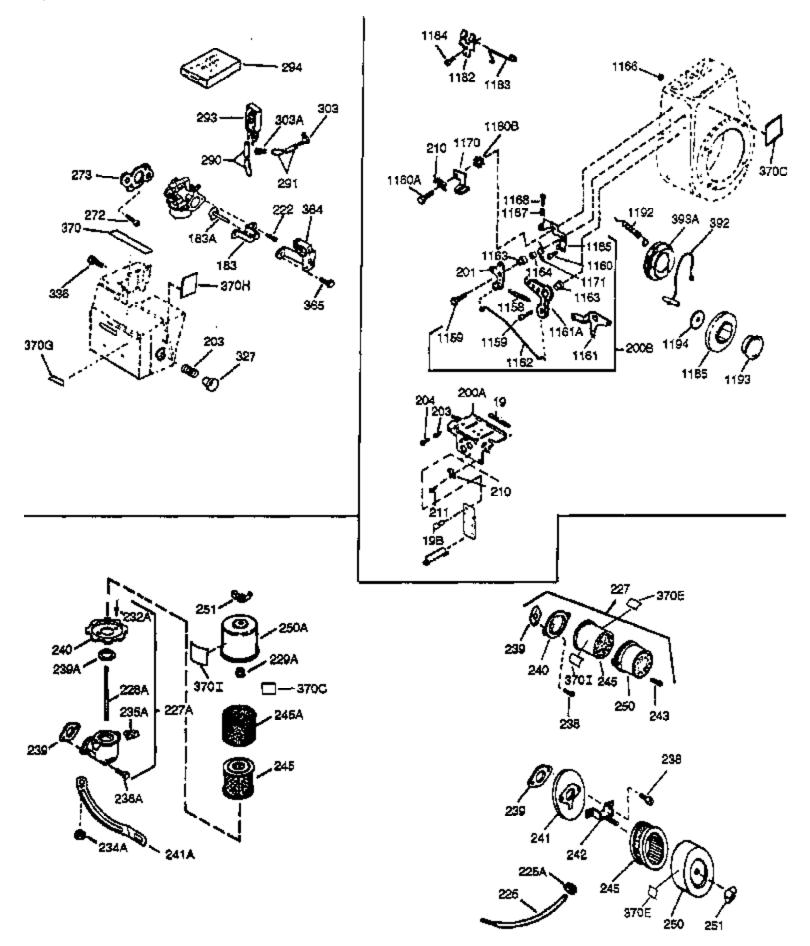

		ty Description
	30322	Nut & Lockwasher, 8-32
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	Screw, 5/16-18 x 5/8"
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
	34587	Bracket, Choke
	730152	Control Bracket (Incl.1158-1171)(As r eq.)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	
		Clip, Conduit
	28942	Screw, 10-32 x 3/8"
	28820	Screw, 10-32 x 1/2"
222A		Pop Rivet (Can be purchased locally)
227	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
		required)
20E A	33662	Hub & Saraan Aaay
		Hub & Screen Assy.
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
00.4	05704	
294	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
2010	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
301A	410144D	
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
201 0	35355	Fuel Cap (Pad Plactic)(1.75" I.D.)
		Fuel Cap (Red Plastic)(1.75" I.D.)
	32958	Fitting, Fuel
	650765	Screw, 10-32 x 1/2"
	34666	Cover, Carburetor
338A	31291	Plug, Cover
364	33377	Bracket, Carburetor cover mtg.
365	650767	Screw, 8-32 x 27/64"
	35274	Decal, Instruction
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
1150		Screw, 10-32 x 1/2"
1159	00000	
1160		Screw, 10-32 x 1/2"
1160 1160	28820 27070 33816	Screw, 10-32 x 1/2" Lockwasher Hub & Screen Assy.

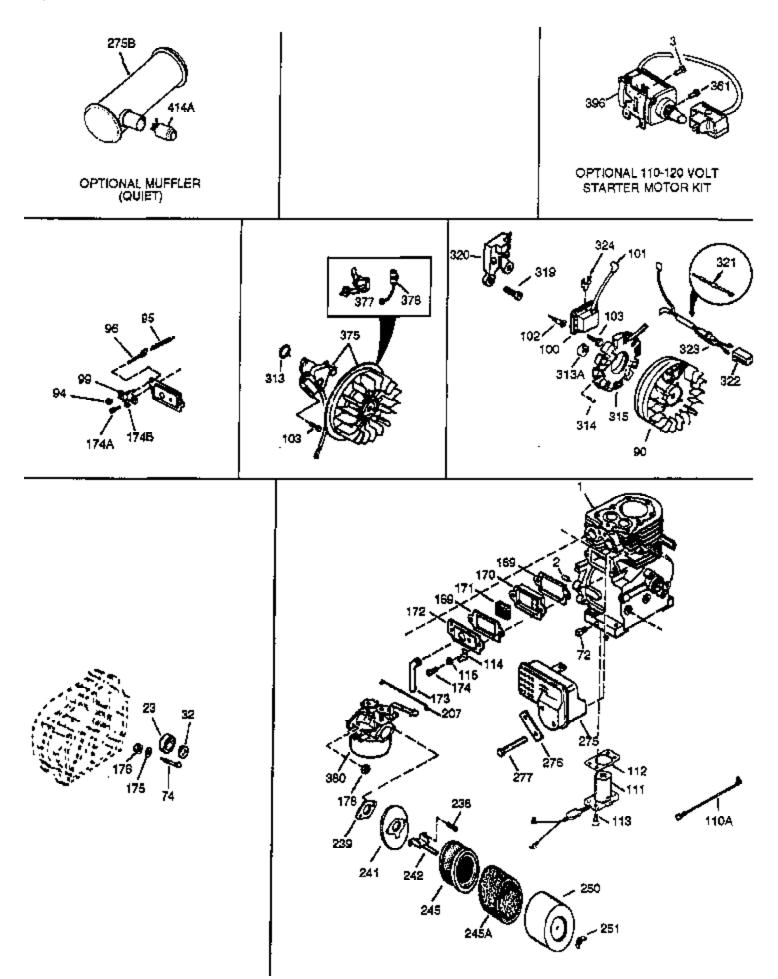

		y Description
1	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
2	27652	Pin, Dowel
3	650820	Screw, 1/4-20 x 1/2"
37A	30322	Nut & Lockwasher, 8-32
	27642	Plug, Oil drain
	610118	Cover, Spark plug
	650489	Screw, 1/4-20 x 5/8"
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, $1/4-20 \times 1/2$ (Use as required) Screw, $1/4-20 \times 5/8$ (Use as required)
	27896A	
		* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
275	33280A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	
		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
285A		Hub & Screen Assy.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
201 0	24210	Fuel Cap (Pad Diastia) (Spurt Provisiont High Profile) (Las
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
313A		Gasket, Stator (Used only on Std. poi nt ign.)
	34666	Cover, Carburetor
338A		Plug, Cover
	610848	Magneto (w/ring gear for 120 Volt sta rter) NOTE: The
010	0100-10	complete magneto is not available as an assembly.
		Themagneto number is shown for reference purpose only.
		Order component parts individually, as shown in parts list.
		(Refer to Division 5, Section B, page 28 for breakdown or
		Fiche 18B, Grid F-1
377	30547A	Breaker Points (Use with Std. point i gn.)
	30548B	Condenser
	632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page 168 for breakdown or Fiche18B, Grid E-9)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional