




Ref #	Part Number Qty	Description
	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
	27652	Pin, Dowel
	650494	Screw, 6-40 x 5/16"
15	30699C	Rod Assy., Governor (Incl. 15A & 15B)
15A	30700	Yoke, Governor
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	32630	Seal, Oil
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
25	33230A	as required)
	0=0=04	. ,
	650561	Screw, 1/4-20 x 5/8"
30	33720B	Crankshaft (Incl. 108 & 109)
35	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
		·
	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
40	34543	Piston, Pin & Ring Set (Std.) (3-3/16 ")
40	34544	Piston, Pin & Ring Set (.010" OS)
	34545	Piston, Pin & Ring Set (.020" OS)
	34031B	Piston & Pin Ass'y. (Std.)(3-3/16")(I ncl.43)
	34032B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34033B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	34037	Ring Set (Std.) (3-3/16" Bore)
42	34038	Ring Set (.010" OS)
42	34039	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650662C	Bolt, Connecting rod (2 pieces)
	650662C	Bolt, Connecting rod (2 pieces)
48	34034	Lifter, Valve
49A	32590	Plate, Lock & Oil dipper (This plate can be replaced by No.
		34242 Oil dipper but No. 650662C screws must be used)
40	34242	,
		Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
65	650128	Screw, 10-24 x 1/2"
69	35262	* Gasket, Flange
	33626B	Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	27642	Plug, Oil drain
	33625	O .
		Seal, Oil
	31845	Shaft, Mechanical governor
81	30590A	Washer, Flat
82	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
		O
	650833	Screw, 1/4-20 x 1-3/16 (Use as required)
	650832	Screw, 1/4-20 x 1-11/16" (Use as requ ired)
89	32589	Key, Flywheel
92	650815	Washer, Belleville
	8116	Nut, Hex
	610118	Cover, Spark plug
103	650489	Screw, 1/4-20 x 5/8"


-		Qty	Description
108	29783		Pin, Crankshaft gear (Only serviceable when gear is pinned
			to crank.)
100	33245		Gear, Crankshaft
			•
	35349		Ground Wire
	34041A		* Gasket, Cylinder head
	34030A		Head, Cylinder
	27878A		Exhaust Valve (Std.) (Incl. 151)
	27880A		Exhaust Valve (1/32" OS) (Incl. 151)
	34035		Intake Valve (Std.) (Incl. 151)
126	34036		Intake Valve (1/32" OS) (Incl. 151)
127	650691		Washer (Do not use with No. 6021A scr ew.)
128	650690		Washer, Belleville (Use as required)
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
			650691 washer.)
			Washer.
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
			but discard 650691 washer.)
400	6506044		Coron, E/16 19 v 2" (Llos as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650713		Screw, 5/16-18 x 5/8"
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650890		Washer, Internal Lock
135	33636		Resistor Spark Plug
139	33369		Bracket, Governor gear
140	650836		Screw, 10-24 x 1/2"
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	27896A		* Gasket, Breather
	28423		·
			Body, Breather
	28424		Element, Breather
	28425		Cover, Breather
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
	30088A		Screw, 1/4-28 x 1"
	33263		* Gasket, Carburetor
185	33877		Pipe, Intake
186	33371		Link, Governor lever
203	31342		Spring, Compression
204	650549		Screw, 5-40 x 7/16"
	33878		Link, Governor lever-to-throttle
	650767		Screw, 8-32 x 5/8"
222A			Pop Rivet (Can be purchased locally)
	650378		Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A		* Gasket, Intake pipe
	33269A		Cover, Air cleaner
	33375D		Blower Housing (For electric starter)
	650788		Screw, 5/16-18 x 3/4"
	29747B		Screw, 5/16-24 x 21/32"
	33272B		Cover, Cylinder head
	33280A		Muffler
276	31588		Plate, Muffler locking
276	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
<i></i>	-		,


Ref #	Part Number	Qty	Description
281	33013		Cover, Starter bubble
282	650760		Screw, 8-32 x 7/16"
285A	33662		Hub & Screen Assy.
287	29752		Nut, 1/4-28
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
291	30705		Fuel Line (Braided 16")(40cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
••••			I.D.)
2214	0000		·
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
3∩1∆	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	33893A		Oil Fill Tube
	33590		"O" Ring
	34011A		Dipstick (Incl. 307)
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	34346		Decal, Instruction
	35274		Decal, Instruction
370A	550223		Decal, Name
379	631021		Inlet Needle, Seat & Clip Assy.
380	631931		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
			page 140 for breakdown Grid E-3)
400	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
722	000 <u>2</u> T		Manior Optional

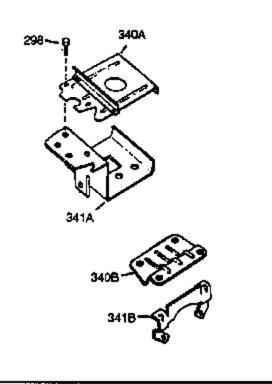


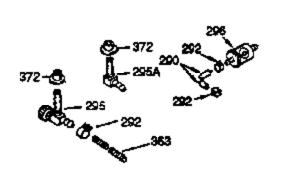


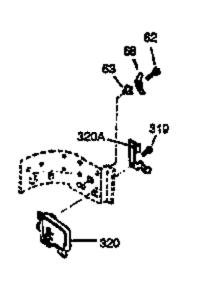

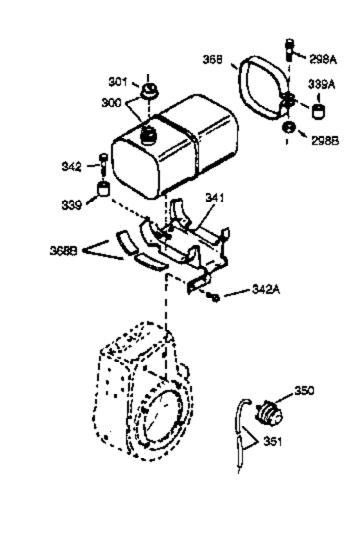

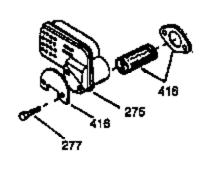


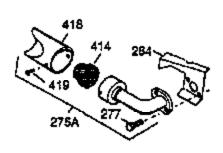

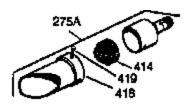



Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
274	35865		Gasket, Exhaust
275	33280A		Muffler
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
285A	33662		Hub & Screen Assy.
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
00171	4101416		I.D.)
			·
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
204 A	25255		
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

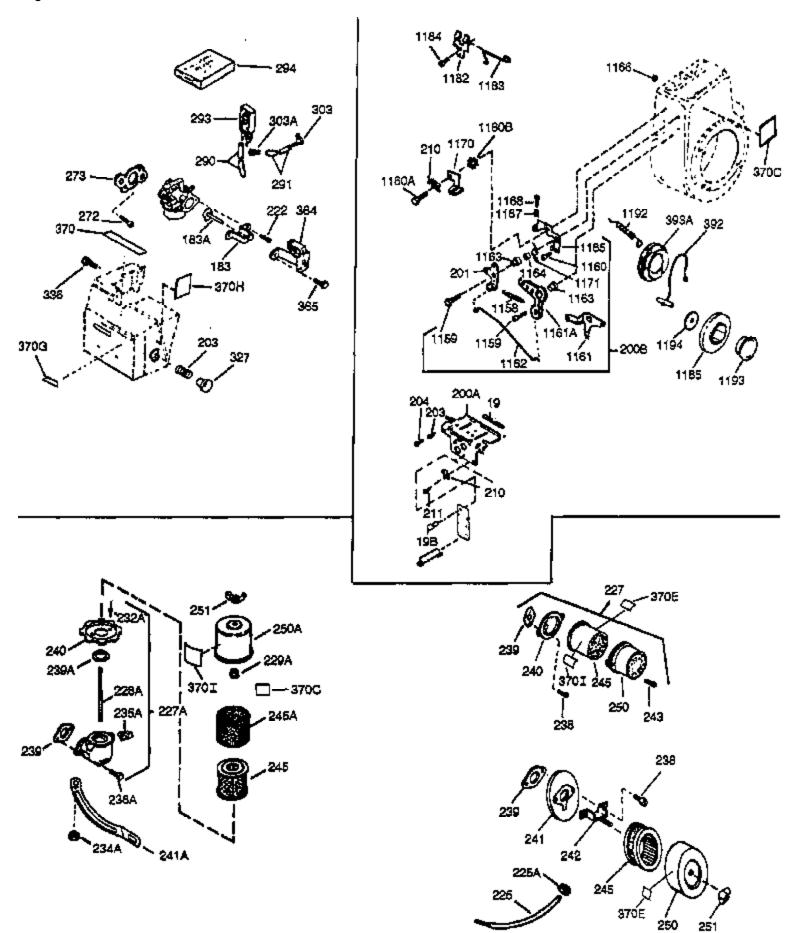

Ref #	Part Number Q	ty Description
37A	30322	Nut & Lockwasher, 8-32
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	33388A	Control Bracket (Incl. 19, 203, 204 & 206)
	730152	Control Bracket (Incl. 15, 265, 264 & 266) Control Bracket (Incl. 1158-1171)(As r eq.)
	31342	
		Spring, Compression
	650549	Screw, 5-40 x 7/16"
	650767	Screw, 8-32 x 5/8"
222A		Pop Rivet (Can be purchased locally)
227	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
		required)
220	28820	Scrow 10.22 v 1/2"
		Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
245	33268	Element, Air cleaner
250B	33269A	Cover, Air cleaner
251	650513	Nut, Wing 1/4-20
	33662	Hub & Screen Assy.
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
204	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
254	30731	are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
	-	I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
201 /	24240	Fuel Can (Rad Blastia) (Spurt Registent, High Brofile) (Llee
30 IA	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	32958	Fitting, Fuel
	31291	Plug, Cover
	34346	Decal, Instruction
	35274	Decal, Instruction
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
	33374	Spring Extension
1159	30312	Screw, 10-32 x 1/2"
	28820	Screw, 10-32 x 1/2"
	27070	Lockwasher
	33816	Hub & Screen Assy.
1100	330.0	1.100 & 30100117.00y.



	Part Number Qty	
	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
	27652	Pin, Dowel
	33627	Bearing, Ball
	33628	Washer, Thrust
	30322	Nut & Lockwasher, 8-32
	27642	Plug, Oil drain
	31855	Retainer, Bearing
	610118	Cover, Spark plug
	650489	Screw, 1/4-20 x 5/8"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
169	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
172	28425	Cover, Breather
173	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
175	650778	Lockwasher
	650580	Nut, Lock
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
	33280A	Muffler
	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
2100	331020	mufflercan be used on any model.)
		• •
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33662	Hub & Screen Assy.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
3∩1∆	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
30 IA	30002	required) (1.5" I.D.)
		. , ,
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
3∩1∆	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	Plug, Cover
	610842	Magneto NOTE: The complete magneto is not available as
373	0100-12	an assembly. Themagneto number is shown for reference
		purpose only. Order component parts individually, as shown
		in parts list. (Refer to Division 5, Section B, page 28 for
		breakdown or Fiche 18B, Grid F-1)
377	30547A	Breaker Points (Use with Std. point i gn.)
378	30548B	Condenser

Ref # Part Nu	umber Qty	Description
380 631931		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 140 for breakdown Grid E-3)
421 730226 422 35824		SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional