



	Part Number Q 34922A	ty Description Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
15A	30700	Yoke, Governor
15B	650494	Screw, 6-40 x 5/16"
16	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	32630	Seal, Oil
		,
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use as required)
25	29536	Blower Housing Baffle (Without electric starter knockout) (Use as required)
	650561	Screw, 1/4-20 x 5/8"
	33453A	Crankshaft (Incl. 108 & 109)
	29826	Screw, 10-32 x 3/4"
36	29918	Lockwasher, #8 E.T.
37A	30322	Nut & Lockwasher, 8-32
	29216	Locknut, 10-32
	29642	Ring, Retaining
	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
	34861A	
		Piston, Pin & Ring Set (.010" OS)
	34862A	Piston, Pin & Ring Set (.020" OS)
	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	34866A	Ring Set (Std.) (3-5/16" Bore)
42	34867A	Ring Set (.010" OS)
42	34868A	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650662C	
		Bolt, Connecting rod (2 pieces)
	650662C	Bolt, Connecting rod (2 pieces)
	34034	Lifter, Valve
	34242	Dipper, Oil
50	34143	Camshaft (MCR)
60	33273A	Extension, Blower housing
62	650760	Screw, 8-32 x 3/8"
63	28545	Grommet, Plastic
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33367B	
		Cover, Cylinder (Incl. 71, 75 & 80)
	33368	Bushing, Crankshaft
	27642	Plug, Oil drain
	31950	Seal, Oil
	31845	Shaft, Mechanical governor
81	30590A	Washer, Flat
82	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as required)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	650815	Washer, Belleville
93	8116	Nut, Hex
101	27276	Cover, Spark plug
101		

	Part Number Q 29783	 ty Description Pin, Crankshaft gear (Only serviceable when gear is pinned to crank.)
100	22245	
	33245	Gear, Crankshaft
	30831	Ground Wire (Incl. 156)
	34923A	* Gasket, Cylinder head
120	34030A	Head, Cylinder
125	27878A	Exhaust Valve (Std.) (Incl. 151)
125	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No 650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, $1/4-20 \times 1/2$ (Use as required)
	650890	Washer, Internal Lock
	30747	Clip, Spark plug shorting
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
140	650836	Screw, 10-24 x 1/2"
149A	35862	Seal Assy., Intake valve
150	27881	Spring, Valve
151	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
184	33263	* Gasket, Carburetor
	34707	Pipe, Intake
	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
		•••
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
276	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	33662	Hub & Screen Assy.
	29752	Nut, 1/4-28
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fuel Line (Braided 32")(80cm)(As requ ired)
	30705	Fuel Line (Braided 16")(40cm)(As requ ired)


Ref #	Part Number	Qty Description
298	26460 650665 34156A	Fuel Line Clamp (Use as required) Screw, 1/4-15 x 7/8" Fuel Tank (Incl. 292 & 301) NOTE: These tanks were builtwith different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
305 307 310 311 312 338A 340 341 342 361 370 379	35355 33951A 33590 34122A 27625 29673 31291 34154 34155 650561 30063 35274 631021 632255	Fuel Cap (Red Plastic)(1.75" I.D.) Oil Fill Tube "O" Ring Dipstick (Incl. 307) Oil Fill Plug (Incl. 312) * Gasket, Oil filler plug Plug, Cover Plate, Upper fuel tank mtg. Bracket, Lower fuel tank mtg. Screw, 1/4-20 x 5/8" Screw, Torx T-30, 1/4-20 x 1/2" Decal, Instruction Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page A4-4 for breakdown or Fiche 18B, Grid D-3)
395	35763A	Electric Starter Motor (12 Volt) (Refer to service number stamped on end cap of motor, or on decal, for identification. Refer to Division 5, Section D for breakdown or Fiche 18B, Grid G-6)
420 421	33279G 730225 730226 35824	* Gasket Set (Incl. items marked *) SAE 30 4-Cycle Engine Oil (Quart) SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional

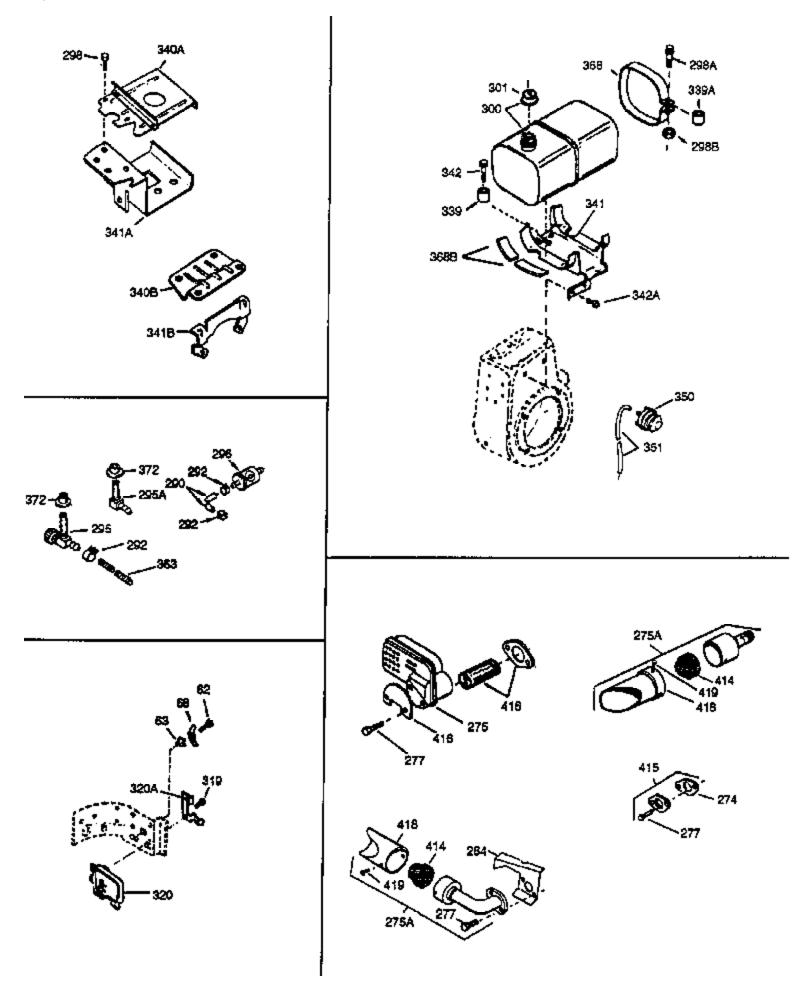

Ref #	Part Number Qty	Description
37A	30322	Nut & Lockwasher, 8-32
	650760	Screw, 8-32 x 3/8"
63	28545	Grommet, Plastic
68	33356	Tab, Ground terminal
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	Screw, 5/16-18 x 5/8"
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
222A		Pop Rivet (Can be purchased locally)
250B	33269A	Cover, Air cleaner
274	35865	Gasket, Exhaust
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
285A	33662	Hub & Screen Assy.
290	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fuel Line (Braided 32")(80cm)(As required)
292	26460	Fuel Line Clamp (Use as required)
298	650665	Screw, 1/4-15 x 7/8"
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
3014	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
5017		I.D.)
		-
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00177	01210	as required) (1.5" I.D.)
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	31291	Plug, Cover
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	33323	Opt.Muffler Screen (Mini-Bike applica tion)
	730130	Kit, Exhaust adapter (Incl. 274 & 277)
	33700	Cover & Tube, Muffler (use as require d)
	650578	Screw, 8-18 x 3/8" (use as required)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
400	35824	Muffler Optional

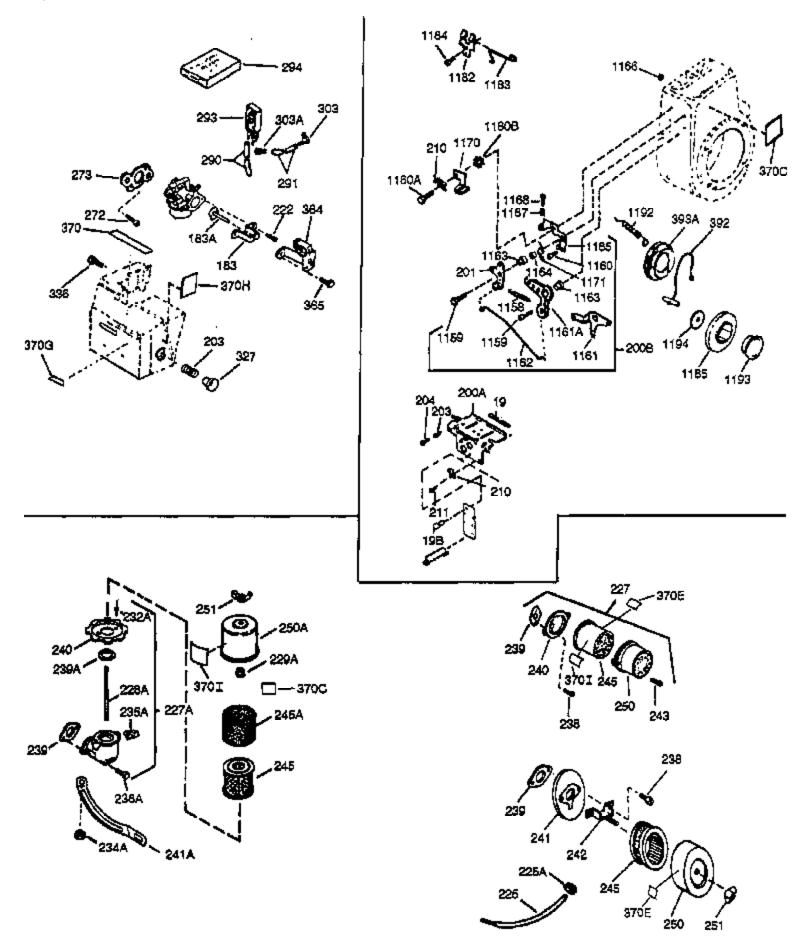

Ref #	Part Number C	ty Description
37A	30322	Nut & Lockwasher, 8-32
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737	Screw, $1/4-20 \times 1/2$ " (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
200B	730152	Control Bracket (Incl.1158-1171)(As r eq.)
222A		Pop Rivet (Can be purchased locally)
	700107	1 (1 , 2)
221	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
		required)
220	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
241	33266	Bracket, Air cleaner
242	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
251	650513	Nut, Wing 1/4-20
285A	33662	Hub & Screen Assy.
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
291	30705	Fuel Line (Braided 16")(40cm)(As requ ired)
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair k
		is used with the 35813 and 35800 fuel pumps.
20/	33010	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pump
204	33010	
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair k
		is used with the 35813 and 35800 fuel pumps.
204	25701	Fuel Dump Densir Kit NOTE, 24205 and 22745 (M/D) num
294	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pump
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair k
		is used with the 35813 and 35800 fuel pumps.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
		. , , , ,
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	32958	Fitting, Fuèl
	33713	Fitting, Fuel line elbow
	31291	Plug, Cover
370	35274	Decal, Instruction
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	
		Muffler Optional
	30312	Screw, 10-32 x 1/2"
1160	28820	Screw, 10-32 x 1/2"
	27070	Lockwasher
1160	27070 33816	Lockwasher Hub & Screen Assy.

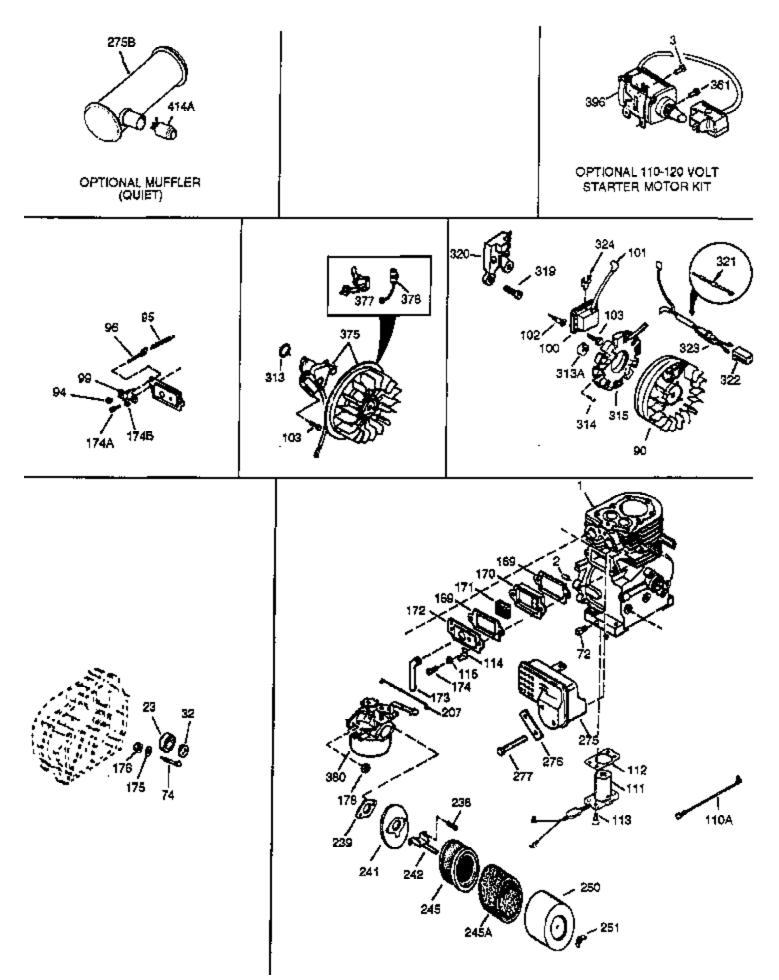

	Part Number Qt 34922A	y Description Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30322	Nut & Lockwasher, 8-32
	27642	Plug, Oil drain
	33450	Lock Nut, 10-32
	30886A	Spring, Governor bolt
	30845A	Bolt, Governor adjusting
	27276	Cover, Spark plug
	650489	Screw, 1/4-20 x 5/8"
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
169	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	
		Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A	00000	Pop Rivet (Can be purchased locally)
	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
245	33268	Element, Air cleaner
250B	33269A	Cover, Air cleaner
251	650513	Nut, Wing 1/4-20
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
		• •
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
285A	33662	Hub & Screen Assy.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
204 4	22020	, Fuel Ora (Ded Plantic) (Crunt Desistant Law Profile) (Lies or
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
001/1	01210	as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
313A	33876	Gasket, Stator (Used only on Std. poi nt ign.)
338A	31291	Plug, Cover
	30063	Screw, Torx T-30, 1/4-20 x 1/2"
	610848	Magneto (w/ring gear for 120 Volt sta rter) NOTE: The
0.0		complete magneto is not available as an assembly.
		Themagneto number is shown for reference purpose only.
		Order component parts individually, as shown in parts list.
		(Refer to Division 5, Section B, page 28 for breakdown or
		Fiche 18B, Grid F-1
377	30547A	Breaker Points (Use with Std. point i gn.)
	30548B	Condenser
	632255	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
000		page A4-4 for breakdown or Fiche 18B, Grid D-3)
		$page \cap T T in ind and ind $

Ref #	Part Number	Qty	Description
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional