




Ref #	Part Number (Qtv	Description
	34922A	,	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652		Pin, Dowel
	650494		Screw, 6-40 x 5/16"
	30700		
			Yoke, Governor
	30699C		Rod Assy., Governor (Incl. 15A & 15B)
	33454		Governor Lever Assy.
	29916		Clamp, Governor lever
	650548		Screw, 8-32 x 5/16"
20	32630		Seal, Oil
25	35256A		Blower Housing Baffle (With electric starter knockout) (Use
			as required)
25	29536		• ,
23	29000		Blower Housing Baffle (Without electric starter knockout)
			(Use as required)
26	650561		Screw, 1/4-20 x 5/8"
	35207		Crankshaft (Incl. 108 & 109)
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
	29216		Locknut, 10-32
			·
	30322		Nut & Lockwasher, 8-32
	29642		Ring, Retaining
	34860A		Piston, Pin & Ring Set (Std.)(3-5/16")
	34861A		Piston, Pin & Ring Set (.010" OS)
	34862A		Piston, Pin & Ring Set (.020" OS)
41	34863		Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41	34864		Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	34865		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	34866A		Ring Set (Std.) (3-5/16" Bore)
42	34867A		Ring Set (.010" OS)
	34868A		Ring Set (.020" OS)
	27888		Ring, Piston Pin retaining
	32591C		Rod Assy., Connecting (Incl. 46, 47 & 49)
	650662C		Bolt, Connecting rod (2 pieces)
	650662C		Bolt, Connecting rod (2 pieces)
			· · · · · · · · · · · · · · · · · · ·
	34034		Lifter, Valve
	34242		Dipper, Oil
	34143		Camshaft (MCR)
	33273A		Extension, Blower housing
	650760		Screw, 8-32 x 3/8"
	28545		Grommet, Plastic
65	650128		Screw, 10-24 x 1/2"
69	35262		* Gasket, Flange
70	33367B		Cover, Cylinder (Incl. 71, 75 & 80)
	33368		Bushing, Crankshaft
	27642		Plug, Oil drain
	31950		Seal, Oil
	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
	30591		·
			Gear Assy., Governor (Incl. 81)
	30588A		Spool, Governor
	29193		Ring, Retaining
	650833		Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832		Screw, 1/4-20 x 1-11/16" (Use as requ ired)
	32589		Key, Flywheel
90	611091		Flywheel (w/ring gear)
92	650815		Washer, Belleville
	8116		Nut, Hex
	35135		Solid State Assy.
			•


Def #	Deat Normalism	. Description
		/ Description
	27276	Cover, Spark plug
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
109	33245	Gear, Crankshaft
	35183	Wire, Ground
	34923A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
130	0021A	650691 washer.)
		03009 i washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650890	Washer, Internal Lock
	30747	Clip, Spark plug shorting
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	·
	28424	Body, Breather Element, Breather
	28425	
	35350	Cover, Breather
		Tube, Breather
	650128 29752	Screw, 10-24 x 1/2" Nut 8 Lodgworder, 1/4 28
		Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1" * Cooket Corburator
	33263	* Gasket, Carburetor
	34707 33878	Pipe, Intake Link, Governor lever-to-throttle
207 222A	33070	,
	650270	Pop Rivet (Can be purchased locally)
	650378 37045 A	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner Rlower Housing (For electric starter)
	33375D	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4" Screw, 5/16-24 x 21/22"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33013	Cover, Starter bubble
282	650760	Screw, 8-32 x 7/16"


Ref #	Part Number Qt	y Description
285	32125	Cup, Starter
286	35194	Screen, Starter
287	29752	Nut, 1/4-28
290	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fuel Line (Braided 32")(80cm)(As requ ired)
291	30705	Fuel Line (Braided 16")(40cm)(As requ ired)
292	26460	Fuel Line Clamp (Use as required)
	650665	Screw, 1/4-15 x 7/8"
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were builtwith different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
310	31297	Dipstick (Incl. 307)
310B	35941	Dipstick (Incl. 306)
325	34246	Clip, Ground wire
338A	31291	Plug, Cover
340	34154	Plate, Upper fuel tank mtg.
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	34346	Decal, Instruction
	35274	Decal, Instruction
	631021	Inlet Needle, Seat & Clip Assy.
380	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page A4-4 for breakdown or Fiche 18B, Grid D-3)
400	33279G	* Gasket Set (Incl. items marked *)
420	730225	SAE 30 4-Cycle Engine Oil (Quart)
421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional (

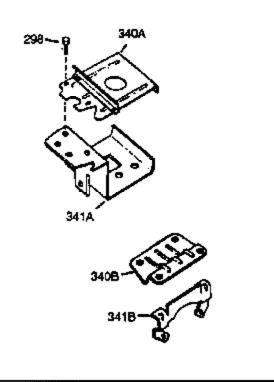


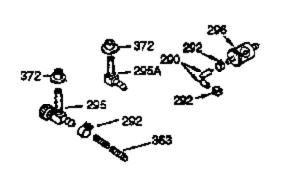


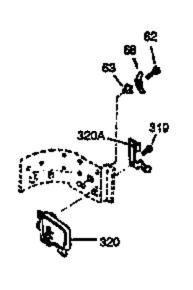


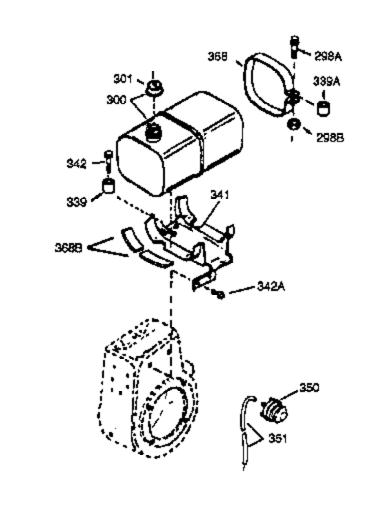

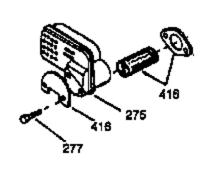 

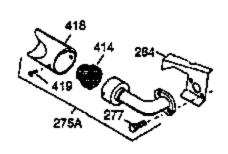

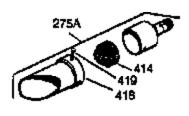




Ref #	Part Number (Qty	Description
37A	30322	•	Nut & Lockwasher, 8-32
62	650760		Screw, 8-32 x 3/8"
63	28545		Grommet, Plastic
68	33356		Tab, Ground terminal
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
274	35865		Gasket, Exhaust
	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
204.4	4404.44D		·
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301Δ	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
30 IA	34210		as required) (1.5" I.D.)
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	35941		Dipstick (Incl. 306)
338A	31291		Plug, Cover
341	34155		Bracket, Lower fuel tank mtg.
342	650561		Screw, 1/4-20 x 5/8"
414	33323		Opt.Muffler Screen (Mini-Bike applica tion)
415	730130		Kit, Exhaust adapter (Incl. 274 & 277)
418	33700		Cover & Tube, Muffler (use as require d)
419	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
			•



Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
222A			Pop Rivet (Can be purchased locally)
227	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
			required)
230	28820		Screw, 10-32 x 1/2"
	27272A		* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
250B	33269A		Cover, Air cleaner
251	650513		Nut, Wing 1/4-20
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As requ ired)
	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
293	337 13		• • • • • • • • • • • • • • • • • • • •
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
204	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
234	33791		
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
00171	1101110		I.D.)
			,
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
004.4	0.4040		E al Care (Dad Disatis) (Oa at Dasista et Histo Desile) (Ha
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
3∩1∆	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	32958		Fitting, Fuel
	29673		* Gasket, Oil filler
	35941		Dipstick (Incl. 306)
	31291		Plug, Cover
	34346		Decal, Instruction
370	35274		Decal, Instruction
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
	30312		Screw, 10-32 x 1/2"
	28820		Screw, 10-32 x 1/2"
			Lockwasher
	27070		
1185	33816		Hub & Screen Assy.

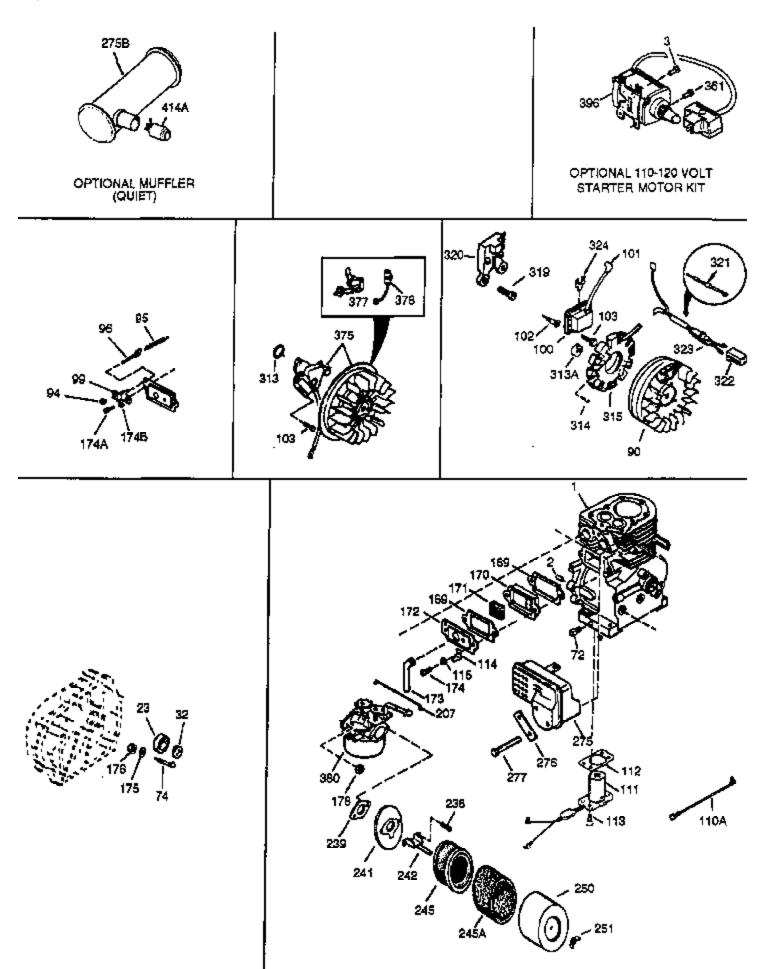

Ref #	Part Number (∩tv	Description
	34922A	αιу	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652		Pin, Dowel
	30322		Nut & Lockwasher, 8-32
	27642		Plug, Oil drain
			<u> </u>
	611091		Flywheel (w/ring gear)
	33450		Lock Nut, 10-32
	30886A		Spring, Governor bolt
	30845A		Bolt, Governor adjusting
	35135		Solid State Assy.
	27276		Cover, Spark plug
	650872		Stud, Solid state mounting
103	650814		Screw, Torx T-15, 10-24 x 1"
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
169	27896A		* Gasket, Breather
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Breather
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
	33878		Link, Governor lever-to-throttle
222A	33070		Pop Rivet (Can be purchased locally)
	28820		
	27272A		Screw, 10-32 x 1/2" * Cooket Air depart
			* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
	33269A		Cover, Air cleaner
	650513		Nut, Wing 1/4-20
275B	391026		Muffler (Incl. 284, 284A & 416) (This spark arrester
			mufflercan be used on any model.)
276	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
30 IA	10176		I.D.)
			•
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301Δ	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
30 IA	34210		as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
306	29673		* Gasket, Oil filler
310B	35941		Dipstick (Incl. 306)
	33876		Gasket, Stator (Used only on Std. poi nt ign.)
	31291		Plug, Cover
	30547A		Breaker Points (Use with Std. point i gn.)
	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
550			page A4-4 for breakdown or Fiche 18B, Grid D-3)
			,
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional