




Ref #	Part Number C	Oty Description
	34922A	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652	Pin, Dowel
	650494	Screw, 6-40 x 5/16"
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	30700	Yoke, Governor
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
		·
	33857	Spring Assy., Extension (Incl. 19B)
	32630	Seal, Oil
25	29536	Blower Housing Baffle (Without electric starter knockout) (Use as required)
25	252564	,
20	35256A	Blower Housing Baffle (With electric starter knockout) (Use as required)
26	650561	Screw, 1/4-20 x 5/8"
		•
	35226	Crankshaft (Incl. 108 & 109)
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
	34861A	Piston, Pin & Ring Set (.010" OS)
40	34862A	Piston, Pin & Ring Set (.020" OS)
41	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	Ring Set (.010" OS)
	34868A	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650662C	Bolt, Connecting rod (2 pieces)
	650662C	Bolt, Connecting rod (2 pieces)
	34034	Lifter, Valve
	34242	Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	650128	•
	35262	Screw, 10-24 x 1/2" * Cooket, Floore
		* Gasket, Flange
	33626B	Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	27642	Plug, Oil drain
	33625	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as requ ired)
89	32589	Key, Flywheel
90	611092	Flywheel (3 Amp)
	650815	Washer, Belleville
	8116	Nut, Hex
	35135	Solid State Assy.
	610118	Cover, Spark plug
	650872	Stud, Solid state mounting
.02		


	5 (1)	B 12
		Description T 15 10 01 11
	650814	Screw, Torx T-15, 10-24 x 1"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
109	33245	Gear, Crankshaft
	34923A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
130	0021A	650691 washer.)
		000091 Washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650890	Washer, Internal Lock
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	•
	28425	Element, Breather
		Cover, Breather
	35350 650438	Tube, Breather
	650128 650517	Screw, 10-24 x 1/2"
	650517	Screw, 1/4-20 x 27/32"
	33263	* Gasket, Carburetor
	34661	Link, Governor lever
	30196	Screw, 5/16-18 x 3/4"
	34349A	Flange, Carburetor mounting
	34784	Control Bracket (Incl.19, 203, 204, 2 06, 209)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	34785	Link, Governor lever-to-throttle
	650821	Screw, 10-32 x 1/2"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
222A	27915A	Pop Rivet (Can be purchased locally) * Casket Intake pine
		* Gasket, Intake pipe
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)


D-1."	Deat Marchan	<u> </u>	Described
		Qty	Description
	33013		Cover, Starter bubble
	650760		Screw, 8-32 x 7/16"
	32125		Cup, Starter
	35194		Screen, Starter
	29752		Nut, 1/4-28
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As requ ired)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
3∩1Δ	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
30171	4101416		I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
33 17 1	0.2.0		as required) (1.5" I.D.)
004.4	05055		. , , ,
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	31297		Dipstick (Incl. 307)
	611095		Alternator Coil (3 Amp, A.C.)(Incl.32 2 & 323)
	34246		Clip, Ground wire
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	34686		Decal, Name
	34346		Decal, Instruction
	35274		Decal, Instruction
	631725		Inlet Needle, Seat & Clip Assy.
380	632406		Carburetor (Incl. 184 & 379) (Refer to Div. 5, Sec. A, page
			A3-8 for breakdown or Fiche 18B, Grid D-1)
400	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
722	000 <u>L</u> T		Maillot Optional

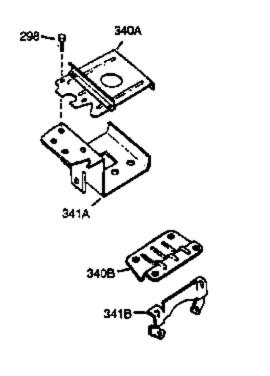


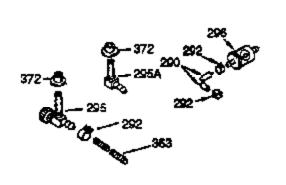


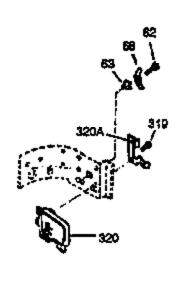


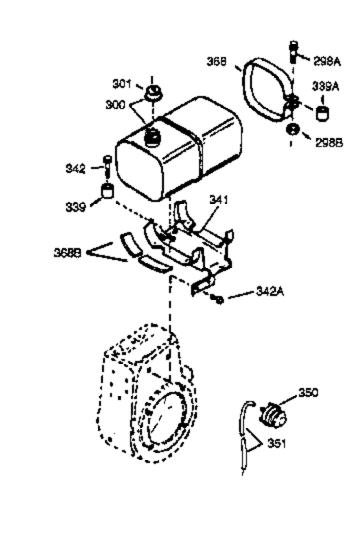

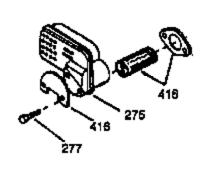  

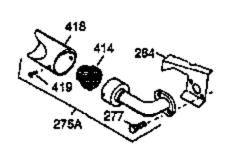






Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
187A	30196		Screw, 5/16-18 x 3/4"
187	34349A		Flange, Carburetor mounting
222A			Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
274	35865		Gasket, Exhaust
275A	33714		Muffler (Incl. 284, 284A & 414)
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
284	34390		Deflector
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
204 A	22022		·
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
2∩1∆	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	611095		Alternator Coil (3 Amp, A.C.)(Incl.32 2 & 323)
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional



Ref #	Part Number Qty	Description
	28942	Screw, 10-32 x 3/8"
	33857	Spring Assy., Extension (Incl. 19B)
	30322	Nut & Lockwasher, 8-32
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	
		Screw, 1/4-20 x 5/8 (Use as required)
	30196	Screw, 5/16-18 x 3/4"
	34349A	Flange, Carburetor mounting
	730152	Control Bracket (Incl.1158-1171)(As r eq.)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
222A		Pop Rivet (Can be purchased locally)
225A	631334	Gasket, Carburetor
225	35043	Tube Assy., Carburetor
227	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
		required)
238	28820	Screw, 10-32 x 1/2"
239	27272A	* Gasket, Air cleaner
241	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 32)(40cm)(As required)
	34385	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
293	34303	
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
294	33010	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
201	33313	are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
00.4	05704	• •
294	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
2011	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
SUIA	00002	required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	32958	Fitting, Fuel
	33713	Fitting, Fuel line elbow
500	33. 13	. Kan g, i doi ii lo olooti

Ref #	Part Number (Oty Description
303A	34237	Fitting, Fuel
306	29673	* Gasket, Oil filler
316	611095	Alternator Coil (3 Amp, A.C.)(Incl.32 2 & 323)
338A	31291	Plug, Cover
370	34346	Decal, Instruction
370	35274	Decal, Instruction
421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional
1159	30312	Screw, 10-32 x 1/2"
1160	28820	Screw, 10-32 x 1/2"
1160	27070	Lockwasher
1185	33816	Hub & Screen Assy.

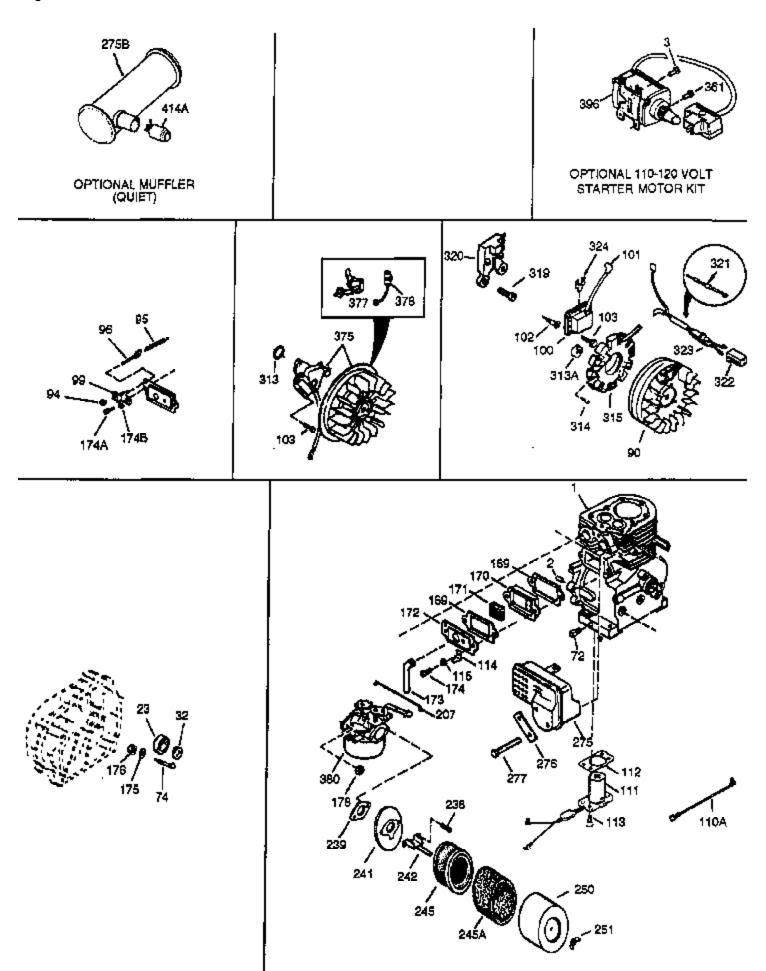

Ref #	Part Number	Qty	Description
1	34922A		Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652		Pin, Dowel
	33627		Bearing, Ball
32	33628		Washer, Thrust
37A	30322		Nut & Lockwasher, 8-32
	27642		Plug, Oil drain
			-
	31855		Retainer, Bearing
90	611092		Flywheel (3 Amp)
100	35135		Solid State Assy.
	610118		•
			Cover, Spark plug
	650872		Stud, Solid state mounting
103	650814		Screw, Torx T-15, 10-24 x 1"
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737		· · · · · · · · · · · · · · · · · · ·
			Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
	27896A		* Gasket, Breather
	28423		
			Body, Breather
171	28424		Element, Breather
172	28425		Cover, Breather
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
175	650778		Lockwasher
176	650580		Nut, Lock
	30196		Screw, 5/16-18 x 3/4"
	34349A		Flange, Carburetor mounting
207	34785		Link, Governor lever-to-throttle
222A			Pop Rivet (Can be purchased locally)
	28820		Screw, 10-32 x 1/2"
	27272A		* Gasket, Air cleaner
241	33266		Bracket, Air cleaner
242	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
			·
	33269A		Cover, Air cleaner
251	650513		Nut, Wing 1/4-20
275B	391026		Muffler (Incl. 284, 284A & 416) (This spark arrester
2.02	00.1020		mufflercan be used on any model.)
			mumercan be used on any model.)
276	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
			1.0.1
301Δ	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
301A	30002		
			required) (1.5" I.D.)
201 /	24240		Fuel Can (Pad Plactic) (Spurt Posicional High Profile) (Llac
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
004.4	05055		E al Oan (Dad Disat's)/4 ZEILLD)
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
306	29673		* Gasket, Oil filler
313A	33876		Gasket, Stator (Used only on Std. poi nt ign.)
	35189		Spacer, Coil
	650873		Screw, 1/4-20 x 3/4"
316	611095		Alternator Coil (3 Amp, A.C.)(Incl.32 2 & 323)
	610823		Connector, Pyramid
	610822		Terminal, Male
338A	31291		Plug, Cover
377	30547A		Breaker Points (Use with Std. point i gn.)
÷			,

Ref #	Part Number	Qty	Description
380 (632406	•	Carburetor (Incl. 184 & 379) (Refer to Div. 5, Sec. A, page A3-8 for breakdown or Fiche 18B, Grid D-1)
	730226 35824		SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional