




D-(#	Dest Novel con	Designation
		Description
	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
	27652	Pin, Dowel
	650494	Screw, 6-40 x 5/16"
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
15A	30700	Yoke, Governor
16	33454	Governor Lever Assy.
17	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	32630	Seal, Oil
	29536	Blower Housing Baffle (Without electric starter knockout)
25	23000	(Use as required)
		(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
00	050504	
	650561	Screw, 1/4-20 x 5/8"
	33624A	Crankshaft (Incl. 108 & 109)
	29826	Screw, 10-32 x 3/4"
36	29918	Lockwasher, #8 E.T.
37	29216	Locknut, 10-32
37A	30322	Nut & Lockwasher, 8-32
38	29642	Ring, Retaining
	34543	Piston, Pin & Ring Set (Std.) (3-3/16 ")
	34544	Piston, Pin & Ring Set (.010" OS)
	34545	Piston, Pin & Ring Set (.020" OS)
	34031B	
		Piston & Pin Ass'y. (Std.)(3-3/16")(I ncl.43)
	34032B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34033B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34037	Ring Set (Std.) (3-3/16" Bore)
	34038	Ring Set (.010" OS)
42	34039	Ring Set (.020" OS)
43	27888	Ring, Piston Pin retaining
45	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650662C	Bolt, Connecting rod (2 pieces)
47	650662C	Bolt, Connecting rod (2 pieces)
48	34034	Lifter, Valve
	34242	Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	650760	Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33626B	Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	27642	Plug, Oil drain
	33625	Seal, Oil
80	31845	Shaft, Mechanical governor
81	30590A	Washer, Flat
82	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
		. ,
	32589 650845	Key, Flywheel
	650815	Washer, Belleville
	8116	Nut, Hex
	610118	Cover, Spark plug
103	650516	Screw, 1/4-20 x 1-1/8"


Ref #	Part Number (Qtv	Description
	29783	,	Pin, Crankshaft gear (Only serviceable when gear is pinned
			to crank.)
400	00045		,
	33245		Gear, Crankshaft
	30831		Ground Wire (Incl. 156)
	34923A		* Gasket, Cylinder head
	34030A		Head, Cylinder
125	27878A		Exhaust Valve (Std.) (Incl. 151)
125	27880A		Exhaust Valve (1/32" OS) (Incl. 151)
126	34035		Intake Valve (Std.) (Incl. 151)
126	34036		Intake Valve (1/32" OS) (Incl. 151)
	650691		Washer (Do not use with No. 6021A scr ew.)
	650690		Washer, Belleville (Use as required)
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
100	002171		650691 washer.)
			000001 Washer.)
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
			but discard 650691 washer.)
400	CEOCO44		Corour F/4C 40 x 2" /Llos on required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"
	650890		Washer, Internal Lock
135	33636		Resistor Spark Plug
139	33369		Bracket, Governor gear
140	650836		Screw, 10-24 x 1/2"
149A	35862		Seal Assy., Intake valve
150	27881		Spring, Valve
	32581		Cap, Lower valve spring
	27896A		* Gasket, Breather
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Breather
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
			·
	650517		Screw, 1/4-20 x 27/32" * Cooleat Corburator
	33263		* Gasket, Carburetor
	33372		Link, Governor lever-to-bellcrank
	34349A		Flange, Carburetor mounting
	30196		Screw, 5/16-18 x 3/4"
	34350		Link, Governor lever-to-throttle
	28942		Screw, 10-32 x 3/8"
222A			Pop Rivet (Can be purchased locally)
224	27915A		* Gasket, Intake pipe
250B	33269A		Cover, Air cleaner
260	33375D		Blower Housing (For electric starter)
261	650788		Screw, 5/16-18 x 3/4"
	29747B		Screw, 5/16-24 x 21/32"
	33272B		Cover, Cylinder head
	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
	33013		Cover, Starter bubble
	650760		Screw, 8-32 x 7/16"
	33662 30753		Hub & Screen Assy.
	29752		Nut, 1/4-28 Final Line (Proided 8.1/4")/21 are)/As required)
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)


Ref #	Part Number	Qty	Description
	30962	_	Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As requ ired)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were builtwith different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
305	33951A		Oil Fill Tube
307	33590		"O" Ring
310	34122A		Dipstick (Incl. 307)
338A	31291		Plug, Cover
340	34154		Plate, Upper fuel tank mtg.
341	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	30063		Screw, Torx T-30, 1/4-20 x 1/2"
	34686		Decal, Name
	34346		Decal, Instruction
	35274		Decal, Instruction
	631725		Inlet Needle, Seat & Clip Assy.
380	632054		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 164 for breakdown or Fiche18B, Grid F-6)
395	35763A		Electric Starter Motor (12 Volt) (Refer to service number stamped on end cap of motor, or on decal, for identification. Refer to Division 5, Section D for breakdown or Fiche 18B, Grid G-6)
400	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

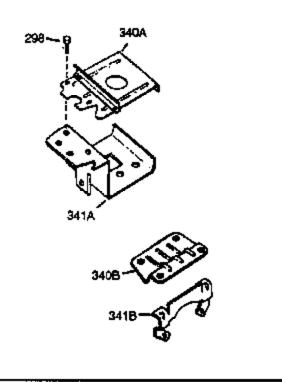


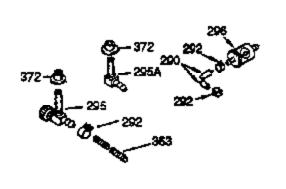


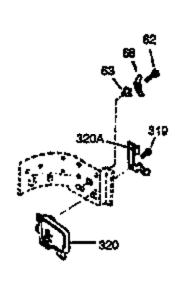


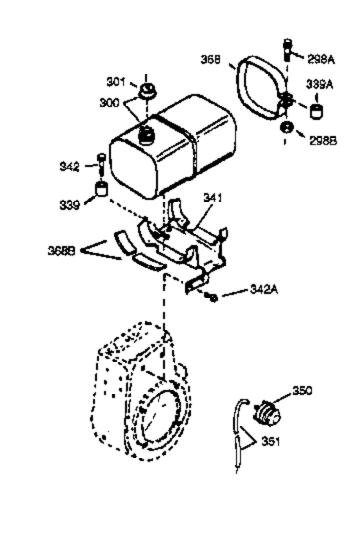

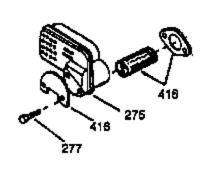  


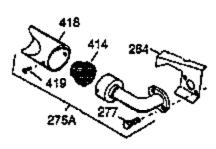






Ref #	Part Number	Qty	Description
	30322		Nut & Lockwasher, 8-32
62	650760		Screw, 8-32 x 3/8"
63	28545		Grommet, Plastic
68	33356		Tab, Ground terminal
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
187	34349A		Flange, Carburetor mounting
187A	30196		Screw, 5/16-18 x 3/4"
222A			Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
274	35865		Gasket, Exhaust
277	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
284	34390		Deflector
285A	33662		Hub & Screen Assy.
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As requ ired)
292	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
00171	1101112		I.D.)
			,
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00171	0.2.0		as required) (1.5" I.D.)
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	28820		Screw, 10-32 x 1/2"
	32765		Clamp, Blower housing extension
	610938		Regulator (7 Amp)
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

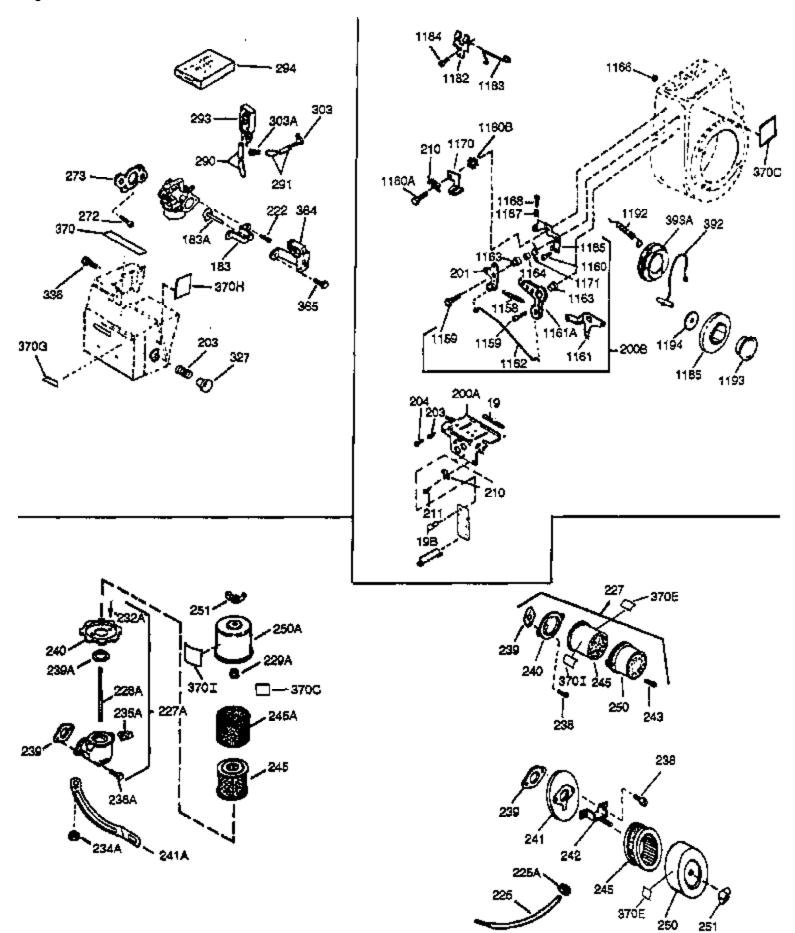

	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	34349A		Flange, Carburetor mounting
	30196		Screw, 5/16-18 x 3/4"
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
	30201A		Lever, Speed control
211	28942		Screw, 10-32 x 3/8"
222A			Pop Rivet (Can be purchased locally)
227	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
			required)
			ioquiioa)
238	28820		Screw, 10-32 x 1/2"
239	27272A		* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
			•
	33269A		Cover, Air cleaner
	650513		Nut, Wing 1/4-20
	33662		Hub & Screen Assy.
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As required)
	34385		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
255	0-1000		are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
203	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
293	337 13		
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
204	33010		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
294	33010		
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
204	25704		Fuel Dump Denois I/it NOTE, 24205 and 22745 (M/D)numps
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
004.4	440444D		
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
3014	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
301A	30002		
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00171	0.210		as required) (1.5" I.D.)
			as required, (1.0 1.0.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	34237		Fitting, Fuel
	32958		Fitting, Fuel
	33713		Fitting, Fuel line elbow
	31291		Plug, Cover
370	34346		Decal, Instruction
370	35274		Decal, Instruction
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
121			

Ref #	Part Number	Qty	Description
422	35824		Muffler Optional
1158	33578		Spring, Extension
1159	30312		Screw, 10-32 x 1/2"
1160	650399		Screw, 10-32 x 5/8"
1160	28820		Screw, 10-32 x 1/2"
1160	27070		Lockwasher
1161	34351		Lever, Bellcrank
1162	33372		Link, Governor lever-to-bellcrank
1163	29530		Bushing, Bell crank lever
1163	29530		Bushing, Bellcrank lever
1164	28562		Bushing, R.P.M adjusting lever
1165	30199A		Speed Adjusting Bracket (Incl. 167 & 168)
1166	33450		Nut, Lock
1167	32924		Spring, Compression
1168	650688		Screw, 10-32 x 1"
1170	34352		Bracket, Idle adjustment
1171	32977		Spring, Torsion
1185	33816		Hub & Screen Assy.

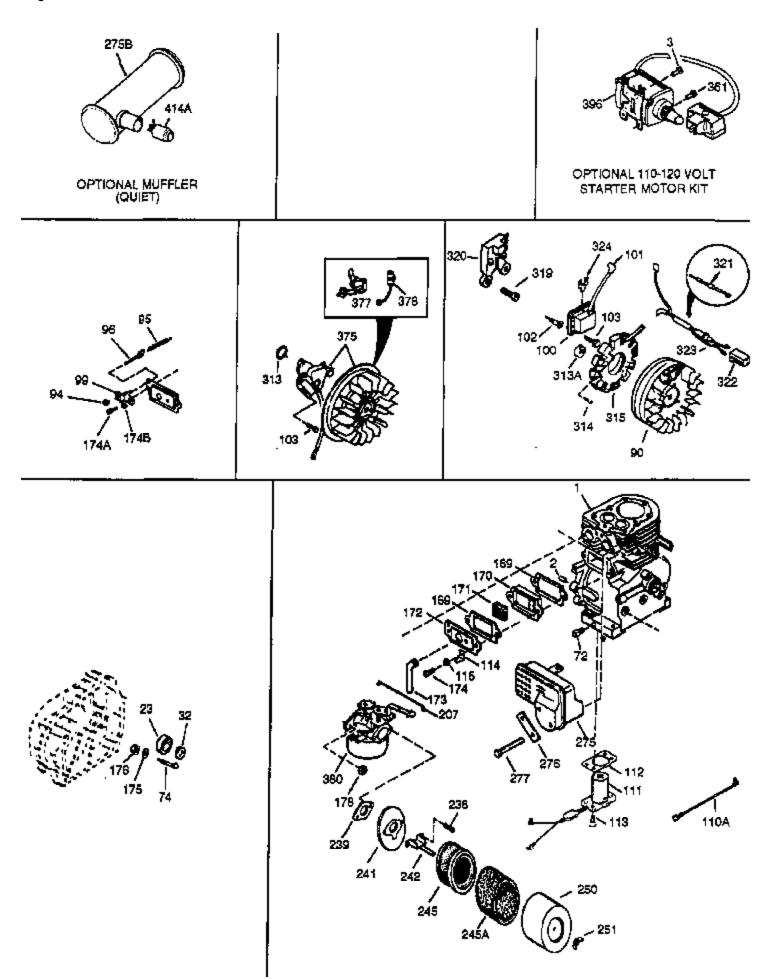

required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	2 27652 23 33627 32 33627 32 33628 37	Ref #	Part Number	Qty	Description
23 33627 32 33628 37A 30322 72 27642 74 31855 101 610118	23 33627 Bearing, Ball 32 33628 Washer, Thrust 37A 30322 Nut & Lockwasher, 8-32 Plug, Oil drain 10 610118 Cover, Spair, plug 103 650516 Screw, 14-20 x 1-1/8" 129 650737 Screw, 5/16-18 x 1-3/4 (Use as require d) 131 650737 Screw, 5/16-18 x 1-3/4 (Use as require d) 131 650738 Screw, 14-20 x 1-2/ (Use as required) 131 650738 Screw, 14-20 x 1-2/ (Use as required) 131 650738 Screw, 14-20 x 5/5 (Use as required) 131 650739 Screw, 5/16-18 x 5/8 169 27995A "Gasket, Breather 170 28423 Body, Breather 171 28424 Element, Breather 172 28425 Cover, Breather 173 35350 Tube, Breather 174 650128 Screw, 10-24 x 1/2" 175 650778 Lockwasher 176 650778 Lockwasher 177 650078 Lockwasher 178 34349A Flange, Carburetor mounting 187 34349A Flange, Carburetor mounting 187 34349A Flange, Carburetor mounting 187 34350 Link, Governor lever-to-throttle 2022A Screw, 10-32 x 1/2" 238 28830 Screw, 10-32 x 1/2" 243 3266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 243 33267 Bracket, Air cleaner 245 33268 Element, Air cleaner 246 33268 Element, Air cleaner 256 33268 Element, Air cleaner 267 35741 Plate, Muffler locking 277 650729 Screw, 16-18 x 4-14" (Use as required) 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 285 x 33662 Hot & Screen x 3-3/16" (Use as required) 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 285 x 33662 Hot & Screen x 3-3/16" (Use as required) 285 x 33662 Hot & Screen x 3-3/16" (Use as required) 286 x 33662 Hot & Screen x 3-3/16" (Use as required) 286 x 33662 Hot & Screen x 3-3/16" (Use as required) 287 x 10-12 x 1/2" 289 2820 Screw, 5/16-18 x 4-1/4" (Use as required) 288 x 120 Screen x 10-3/16 x 4-1/4" (Use as required) 288 x 10-3/16 x 10	1	34096C		Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
23 33627 32 33628 37A 30322 72 27642 74 31855 101 610118	23 33627 Bearing, Ball 32 33628 Washer, Thrust 37A 30322 Nut & Lockwasher, 8-32 Plug, Oil drain 10 610118 Cover, Spair, plug 103 650516 Screw, 14-20 x 1-1/8" 129 650737 Screw, 5/16-18 x 1-3/4 (Use as require d) 131 650737 Screw, 5/16-18 x 1-3/4 (Use as require d) 131 650738 Screw, 14-20 x 1-2/ (Use as required) 131 650738 Screw, 14-20 x 1-2/ (Use as required) 131 650738 Screw, 14-20 x 5/5 (Use as required) 131 650739 Screw, 5/16-18 x 5/8 169 27995A "Gasket, Breather 170 28423 Body, Breather 171 28424 Element, Breather 172 28425 Cover, Breather 173 35350 Tube, Breather 174 650128 Screw, 10-24 x 1/2" 175 650778 Lockwasher 176 650778 Lockwasher 177 650078 Lockwasher 178 34349A Flange, Carburetor mounting 187 34349A Flange, Carburetor mounting 187 34349A Flange, Carburetor mounting 187 34350 Link, Governor lever-to-throttle 2022A Screw, 10-32 x 1/2" 238 28830 Screw, 10-32 x 1/2" 243 3266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 243 33267 Bracket, Air cleaner 245 33268 Element, Air cleaner 246 33268 Element, Air cleaner 256 33268 Element, Air cleaner 267 35741 Plate, Muffler locking 277 650729 Screw, 16-18 x 4-14" (Use as required) 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 285 x 33662 Hot & Screen x 3-3/16" (Use as required) 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 285 x 33662 Hot & Screen x 3-3/16" (Use as required) 285 x 33662 Hot & Screen x 3-3/16" (Use as required) 286 x 33662 Hot & Screen x 3-3/16" (Use as required) 286 x 33662 Hot & Screen x 3-3/16" (Use as required) 287 x 10-12 x 1/2" 289 2820 Screw, 5/16-18 x 4-1/4" (Use as required) 288 x 120 Screen x 10-3/16 x 4-1/4" (Use as required) 288 x 10-3/16 x 10	2	27652		Pin, Dowel
32 33628 37A 30322 7A 27642 7B 18	32 33628 37A 30322 72 27842 74 31855 76 31855 77 31855 78 31855 79 31855 79 31855 79 31855 79 31855 79 31855 79 31855 79 318 3268 79 318 3	23	33627		
37A 30322 72 27642 74 31855 75 27642 74 31855 76 101 610118 76 27642 77 31855 78 Retainer, Bearing 78 20ver, Spark plug 103 650516 129 650727 131 650737 131 650738 131 650738 131 650738 131 650738 131 650738 131 650738 131 650738 131 650738 131 650738 131 650738 131 650738 131 650739 132 650749 133 5350 14 650128 174 650128 175 650778 165080 187 30196 187 30	37A 30322 72 27642 72 27642 74 31855 Retainer, Bearing Retainer, Spark plug Screw, 174-20 x 1-1/8" (Use as require d) Screw, 174-20 x 1-1/8" (Use as required) Screw, 174-20 x 5/8 (Use as required) Screw, 174-20 x 5/8 (Use as required) Screw, 174-20 x 5/8 (Use as required) Screw, 170-28 x 5/8" Retainer Retainer, 1-3-4 (Use as required) Retainer				
72 27642 74 31855 74 31855 75 81855 8 Retainer, Bearing 101 610118 103 650516 1050516 10777 131 650737 131 650737 131 650738 1314 650733 1314 650731 1316 550738 1314 650713 1316 550738 1314 650713 1316 550738 1314 650713 1316 550738 1317 28423 1319 28423 1319 28424 1319 28424 1319 28425 1319 28425 1319 28425 1319 28426 1319 28426 1319 28427 1319 28428 1319 28428 1319 28429 1319 28429 1319 28429 1319 28429 1319 28429 1319 28420 1319 28421 1319 28421 132 28425 133 30390 134 30390 135 285 285 285 285 285 285 285 285 285 28	72 27642 74 31855 74 31855 75 101 610118 76 805016 76 8050277 76 8050277 77 8050277 78 8050277 78 8050277 78 8050278 8050278 805				
Retainer, Bearing	74 31855 Refainer, Bearing 101 610118 Cover, Spark plug 103 650516 Screw, 114-20 x 1-1/8" 129 650737 Screw, 114-20 x 1-1/8" (Use as required) 131 650738 Screw, 114-20 x 172" (Use as required) 131 650738 Screw, 114-20 x 172" (Use as required) 131 650738 Screw, 114-20 x 172" (Use as required) 131 650738 Screw, 114-20 x 172" (Use as required) 131 650738 Screw, 114-20 x 172" (Use as required) 131 650738 Screw, 114-20 x 172" (Use as required) 131 650738 Screw, 114-20 x 172" (Use as required) 131 650738 Screw, 110-24 x 172" 132 6423 Body, Breather 132 6424 Element, Breather 133 3350 Tube, Breather 133 3350 Tube, Breather 134 650128 Screw, 10-24 x 172" 145 650778 Lockwasher 146 650280 Nut, Lock 187A 30196 Screw, 10-24 x 172" 147 3439A Flange, Carburetor mounting 148 207 34390 Link, Governor lever-to-throttle 149 207 34390 Link, Governor lever-to-throttle 140 222A Pop Rivet (Can be purchased locally) 141 33266 Bracket, Air cleaner 142 33267 Bracket, Air cleaner 143 33268 Bracket, Air cleaner 144 33268 Bracket, Air cleaner 145 33268 Bracket, Air cleaner 146 50513 Nut, Wing 114-20 147 35741 Plate, Muffler (lock) 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 147 650729 Screw, 516-18 x 3-3116" (Use as required) 148 Core Air 141" (Use as required) 149 A 33032 Fuel Cap (White Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 150 A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 150 A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 150 A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 150 A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 150 A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 150 A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 150 A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I				
101 610118	101 610118 Cover, Spank plug				
103 650516 129 650727 131 650737 131 650738 131 650738 131 650713 131 650738 131 650713 132 650713 132 650713 133 650713 139 27896A 170 28423 171 28424 171 28424 172 28425 173 35350 174 650128 175 650778 176 650560 187 30196 1	103 650516 129 650727 131 650737 131 650737 131 650737 131 650737 131 650738 131 650733 131 650713 132 650778 132 650778 133 650778 132 650778 133 650778 134 65078 135 101 102 102 102 102 102 102 102 102 102				
129 650727 Screw, 5/16-18 x 1-3/4 (Use as require d)	129 650727 131 650737 131 650738 131 650738 131 650738 131 650738 131 650731 131 650732 131 650732 132 650732 133 6350 144 650128 157 650778 157 650778 158 650778 169 179 179 179 179 179 179 179 179 179 17				
131 650737 Screw, 1/4-20 x 1/2" (Use as required)	131 650737 131 650738 131 650738 131 650738 131 650713 131 650713 131 650713 131 650713 131 650713 131 650713 131 650713 131 650713 131 650713 131 650713 131 650713 131 650713 131 650713 131 650713 142 63423 152 63424 172 28424 172 28424 172 28425 173 36350 174 650128 175 650778 176 650580 177 65078 176 650580 177 177 650778 178 178 178 178 178 178 178 178 178 178				
131 650738 Screw, 1/4-20 x 5/8 (Use as required)	131 650738 Screw, 1/4-20 x 5/8 (Use as required)				
131A 650713 Screw, 5/16-18 x 5/8" 169 27896A *Gasket, Breather 170 28423 Body, Breather 171 28424 Element, Breather 172 28425 Cover, Breather 173 35350 Tube, Breather 174 650128 Screw, 10-24 x 1/2" 175 650778 Lockwasher 176 650580 Nut, Lock 187 34349A Flange, Carburetor mounting 187 34349A Flange 207 34350 Link, Governor lever-to-throttle 222A Pop Rivet (Can be purchased locally) 238 28820 Screw, 10-32 x 1/2" 241 33266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 243 33268 Element, Air cleaner 245 33268 Screw, 14 cleaner 250 33269A Cover, Air cleaner 276 35741 Plate, Muffler locking 277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 276 35741 Plate, Muffler locking 277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 278 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 33376 Gasket, Stator (Used only on Std. poi nt ign.) 302 Screw, 10-32 x 1/2" 303 x 1/2" Screw, 10-32 x 1/2" 304 33976 Gasket, Stator (Used only on Std. poi nt ign.) 305 Screw, 10-32 x 1/2" 306 Screw, 10-32 x 1/2" 307 Screw, 10-32 x 1/2" 308 Screw, 10-32 x 1/2" 309 Screw, 10-32 x 1/2" 309 Screw, 10-32 x 1/2" 309 Screw, 10-32 x 1/2" 300 Screw, 10-3	131A 650713 Screw, 5/16-18 x 5/8" 169 27896A "Gasket, Breather 170 28423 Body, Breather 171 28424 Element, Breather 172 28425 Cover, Breather 173 35350 Tube, Breather 174 650128 Screw, 10-24 x 1/2" 175 650778 Lockwasher 176 650580 Nut, Lock 187 34349A Flange, Carburetor mounting 187 34350 Link, Governor lever-to-throttle 207 34350 Link, Governor lever-to-throttle 2222A Pop Rivet (Can be purchased locally) 238 28820 Screw, 10-32 x 1/2" 239 27272A "Gasket, Air cleaner 241 33266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 243 33268 Element, Air cleaner 245 33268 Element, Air cleaner 250 33269A Cover, Air cleaner 251 650513 Nut, Wing 1/4-20 276 35741 Plate, Muffler (lock.) 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler (lock.) 285 33662 Hub & Screen Assy. 277 650729 Screw, 5/16-18 x 4-1/4" (Use as required) 278 3302 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 333876 Gasket, Stator (Used only on Std. point ign.) 3028				
169 27896A * Gasket, Breather 170 28423 Body, Breather 171 28424 Element, Breather 172 28425 Cover, Breather 173 35350 Tube, Breather 174 650128 Screw, 10-24 x 1/2" 175 650778 Lockwasher 176 650580 Nut, Lock 187 30196 Screw, 5/16-18 x 3/4" 187 34349A Flange, Carburetor mounting 1207 34350 Link, Governor lever-to-throttle 209 Pop Rivet (Can be purchased locally) 222A Flange, Carburetor mounting 238 28820 Screw, 10-32 x 1/2" 239 27272A * Gasket, Air cleaner 241 33266 Bracket, Air cleaner 242 33268 Bracket, Air cleaner 243 33268 Element, Air cleaner 251 650613 Nut, Wing 1/4-20 275 35741 Screw, 5/16-18 x 3-3/3/6" (Use as required) 277 657029 Screw, 5/16-18 x 3-3/3/6" (Use as required) 277	169 27896A "Gasket, Breather Body, Breather Body, Breather 170 28423 Body, Breather 171 28424 Element, Breather Cover, Breather 172 28425 Cover, Breather 173 35350 Tube, Breather 174 650128 Screw, 10-24 x 1/2" Lock washer Nut, Lock 1874 30196 Screw, 5/16-18 x 3/4" 187 34349A Flange, Carburetor mounting Link, Governor lever-to-throttle Pop Rivet (Can be purchased locally) Screw, 10-32 x 1/2" Gasket, Air cleaner 192 27272A Gasket, Air cleaner 192 27272A Gasket, Air cleaner 192 241 33266 Bracket, Air cleaner 192 245 33268 Element, Air cleaner 192 275 275 391026 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler locking Screw, 5/16-18 x 3-3/16" (Use as required) 1.5" LD.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) 1.5" LD.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) 1.5" LD.) 301A 35355 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) 1.5" LD.) 301A 33876 Gasket, Stator (Used only on Std. poi nt ign.) Screw, 10-32 x 1/2" 326 3388 3388 31291 Plug, Cover 10-32 x 1/2" 10				· · · ·
170 28423 Body, Breather Element, Breather 171 28424 Element, Breather Cover, Breather 173 35350 Tube, Breather 174 650128 Screw, 10-24 x 1/2" Lockwasher 176 650580 Nut, Lock 187A 30196 Screw, 5/16-18 x 3/4" Flange, Carburetor mounting Link, Governor lever-to-throttle 222A Pop Rivet (Can be purchased locally) Screw, 10-32 x 1/2" 239 27272A "Gasket, Air cleaner 242 33267 Bracket, Air cleaner 243 33268 Element, Air cleaner 250B 33269A Cover, Air cleaner 251 650513 Nut, Wing 1/4-20 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 1.5" (LD.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 33266 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 33376 Gasket, Stator (Used only on Std. point ign.) Screw, 10-32 x 1/2" Sc	170				
171 28424 Element, Breather Cover, Breather 172 28425 Cover, Breather 173 35350 Tube, Breather 174 650128 Screw, 10-24 x 1/2" Lockwasher 176 650580 Nut, Lock 187A 30196 Screw, 5/16-18 x 3/4" Flange, Carburetor mounting Link, Governor lever-to-throttle Pop Rivet (Can be purchased locally) Screw, 5/16-18 x 3/4" 183 34349A Flange, Carburetor mounting Link, Governor lever-to-throttle Pop Rivet (Can be purchased locally) Screw, 10-32 x 1/2" 3282 Screw, 10-32 x 1/2" 3286 Bracket, Air cleaner 33266 Bracket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner 184 33268 Element, Air cleaner 185	171 28424				·
172 28425 173 35350 174 650128 175 650778 176 650580 177 650580 187 30196 187 30196 187 34349A 187 34349A 187 34350 222A 238 28820 238 28820 277272A 239 277272A 239 277272A 241 33266 252 Bracket, Air cleaner 242 33267 251 650513 251 650513 275 8391026 276 35741 277 650729 277 650729 277 651002 285A 33662 301A 33032 286 Cayen, 10-32 x 1/2" 29 12 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	172 28425 173 35350 174 650128 175 650778 176 650580 177 650580 178 177 650580 178 179 187 30196 188 2024 188 208 188 20 189 20 18				•
173 35350 174 650128 175 650778 176 650580 187A 30196 187A 30196 1873 34349A 187 187 187 187 187 187 187 187 187 187	173 35350				Element, Breather
174 650128 175 650778 176 650578 176 650580 187A 30196 187 34349A 187 34349A 187 34350 188 28820 222A 238 28820 239 27272A 241 33266 242 33267 245 33268 2508 33269A 251 650513 275 391026 276 35741 277 650729 277 651002 2	174 650128 175 650778 176 650578 176 650580 187A 30196 187 34349A 187 34349A 207 34350 222A 238 28820 239 27272A 241 33266 242 33267 245 33268 250B 33269A 251 650513 275B 391026 276 35741 277 650729 277 651002 278 7002 278 7002 278 7002 278 7002 278 7002 278 7002 278 7002 278 7002 278 7002 278 7002 278 7002 278 7002 278 7002 278 7002 278 7	172	28425		Cover, Breather
175 650778 176 650580 187A 30196 187 34349A 187 34349A 207 34350 222A 238 28820 238 28820 241 33266 242 33267 245 33268 2508 32684 2518 3269A 2516 35741 277 650729 276 35741 277 650729 277 651002 277 651002 277 651002 277 651002 277 651002 277 651002 277 651002 277 651002 278 278 278 278 278 278 278 278 278 278	175 65078	173	35350		Tube, Breather
176 650580 Nut, Lock 187A 30196 Screw, 5/16-18 x 3/4" 187 34349A Flange, Carburetor mounting 207 34350 Link, Governor lever-to-throttle 222A Pop Rivet (Can be purchased locally) 232 27272A * Gasket, Air cleaner 241 33266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 245 33268 Element, Air cleaner 250B 33269A Cover, Air deaner 251 650513 Nut, Wing 1/4-20 275B 391026 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler locking 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 3355 Fuel Cap (Red	176 650580	174	650128		Screw, 10-24 x 1/2"
187A 30196 Screw, 5/16-18 x 3/4" Flange, Carburetor mounting 207 34350 Link, Governor lever-to-throttle 222A Pop Rivet (Can be purchased locally)	187A 30196 Screw, 5/16-18 x 3/4" Flange, Carburetor mounting 207 34349A Flange, Carburetor mounting 217 34350 Link, Governor lever-to-throttle Pop Rivet (Can be purchased locally) Screw, 10-32 x 1/2" 238 28820 Screw, 10-32 x 1/2" 32866 Bracket, Air cleaner Bracket, Air cleaner 242 33267 Bracket, Air cleaner Bracket, Air cleaner 245 33268 Cover, Air cleaner 2508 33269A Cover, Air cleaner 251 650513 Nut, Wing 1/4-20 Muffler (Ind. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler locking Screw, 5/16-18 x 3-3/16" (Use as required) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 1.5" 1.D.) 301A 33032 Fuel Cap (White Plastic) (Standard) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 33876 Gasket, Stator (Used only on Std. poi nt ign.) Screw, 10-32 x 1/2" Regulator (7 Amp) Plug, Cover 10-32 x 1/2" 1.0 1	175	650778		Lockwasher
187A 30196 Screw, 5/16-18 x 3/4" Flange, Carburetor mounting 207 34350 Link, Governor lever-to-throttle 222A Pop Rivet (Can be purchased locally)	187A 30196 Screw, 5/16-18 x 3/4" Flange, Carburetor mounting 207 34349A Flange, Carburetor mounting 217 34350 Link, Governor lever-to-throttle Pop Rivet (Can be purchased locally) Screw, 10-32 x 1/2" 238 28820 Screw, 10-32 x 1/2" 32866 Bracket, Air cleaner Bracket, Air cleaner 242 33267 Bracket, Air cleaner Bracket, Air cleaner 245 33268 Cover, Air cleaner 2508 33269A Cover, Air cleaner 251 650513 Nut, Wing 1/4-20 Muffler (Ind. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler locking Screw, 5/16-18 x 3-3/16" (Use as required) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 1.5" 1.D.) 301A 33032 Fuel Cap (White Plastic) (Standard) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 33876 Gasket, Stator (Used only on Std. poi nt ign.) Screw, 10-32 x 1/2" Regulator (7 Amp) Plug, Cover 10-32 x 1/2" 1.0 1	176	650580		Nut, Lock
187 34349A	Flange, Carburetor mounting Link, Governor lever-to-throttle				•
207 34350	Link, Governor lever-to-throtitle				
Pop Rivet (Can be purchased locally)	Pop Rivet (Can be purchased locally) 238 28820 Screw, 10-32 x 1/2" 239 27272A * Gasket, Air cleaner 241 33266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 243 33268 Element, Air cleaner 250B 33269A Cover, Air cleaner 251 650513 Nut, Wing 1/4-20 275B 391026 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler locking 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 285A 33662 Hub & Screen Assy. 301A 34010 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 301B 33876 Screw, 10-32 x 1/2" 301C 302C Screw, 10-32 x 1/2" 303C 610938 Regulator (7 Amp) Plug, Cover Plug, Cover				•
238 28820	238 28820 Screw, 10-32 x 1/2" 239 27272A "Gasket, Air cleaner 241 33266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 245 33268 Element, Air cleaner 250B 33269A Cover, Air cleaner 251 650513 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler locking 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 651002 Screw, 5/16-18 x 3-3/16" (Use as required) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic) (Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35356 Gasket, Stator (Used only on Std. poi nt ign.) 301B 28820 Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) Plug, Cover		3.000		•
* Gasket, Air cleaner 241 33266 242 33267 245 33268 2508 332684 251 650513 275B 391026 276 35741 277 650729 277 651002 285A 33662 301A 33032 * Gasket, Air cleaner * Gasket, Air cleaner * Gasket, Air cleaner Bracket, Air cleaner Bracke, Air cleaner Bracket,	* Gasket, Air cleaner 241 33266 242 33267 245 33268 2508 33269A 251 650513 275B 391026 276 35741 277 650729 277 651002 285A 33662 301A 34210 * Gasket, Air cleaner * Gasket, Air cleaner * Gasket, Air cleaner * Gasket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Cover, Air cleaner Nut, Wing 1/4-20 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) Plate, Muffler locking Screw, 5/16-18 x 3-3/16" (Use as requ ired) Screw, 5/16-18 x 4-1/4" (Use as requi ired) Hub & Screen Assy. Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) **June 1.5" Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) **June 1.5" Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) **June 1.5"		28820		
241 33266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 245 33268 Element, Air cleaner 250B 33269A Cover, Air cleaner 251 650513 Nut, Wing 1/4-20 275B 391026 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler locking 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	241 33266 Bracket, Air cleaner 242 33267 Bracket, Air cleaner 245 33268 Element, Air cleaner 2508 33269A Cover, Air cleaner 251 650513 Nut, Wing 1/4-20 275B 391026 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler locking 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 320 610938 Regulator (7 Amp) 90 Plug, Cover				
242 33267 Bracket, Air cleaner 245 33268 Element, Air cleaner 2508 33269A Cover, Air cleaner 251 650513 Nut, Wing 1/4-20 275B 391026 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler locking 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (1.75" I.D.) 301A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	242 33267 Bracket, Air cleaner 245 33268 Element, Air cleaner 250B 33269A Cover, Air cleaner 251 650513 Nut, Wing 1/4-20 275B 391026 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler locking 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) 338A 31291 Plug, Cover				·
245 33268 Element, Air cleaner	Element, Air cleaner				·
250B 33269A Cover, Air cleaner 251 650513 Nut, Wing 1/4-20 275B 391026 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler locking 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	250B 33269A				·
251 650513 275B 391026 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 277 650729 277 651002 285A 33662 301A 410144B 277 651002 301A 33032 Plue (Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) Gasket, Stator (Used only on Std. poi nt ign.) Screw, 10-32 x 1/2"	251 650513 Nut, Wing 1/4-20 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler locking Screw, 5/16-18 x 3-3/16" (Use as required) Screw, 5/16-18 x 3-3/16" (Use as required) Screw, 5/16-18 x 4-1/4" (Use as required) At 10144B Screen Assy. Support				·
275B 391026 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler locking 277 650729 Screw, 5/16-18 x 3-3/16" (Use as requ ired) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as requi red) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	275B 391026 Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 276 35741 Plate, Muffler locking 277 650729 Screw, 5/16-18 x 3-3/16" (Use as requ ired) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) 338A 31291 Plug, Cover				
mufflercan be used on any model.) 276 35741	mufflercan be used on any model.) 276 35741				
276 35741 Plate, Muffler locking 277 650729 Screw, 5/16-18 x 3-3/16" (Use as requ ired) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as requi red) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) 301A 35356 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	276 35741 Plate, Muffler locking 277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) 338A 31291 Plug, Cover	2/00	391026		
277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	277 650729 Screw, 5/16-18 x 3-3/16" (Use as requ ired) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as requi red) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) 338A 31291 Plug, Cover				mulliercan be used on any model.)
277 650729 Screw, 5/16-18 x 3-3/16" (Use as required) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	277 650729 Screw, 5/16-18 x 3-3/16" (Use as requ ired) 277 651002 Screw, 5/16-18 x 4-1/4" (Use as requi red) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) 338A 31291 Plug, Cover	276	35741		Plate, Muffler locking
277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	277 651002 Screw, 5/16-18 x 4-1/4" (Use as required) 285A 33662 Hub & Screen Assy. 301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) 338A 31291 Plug, Cover				
285A 33662 301A 410144B Hub & Screen Assy. Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) Fuel Cap (Red Plastic) (1.75" I.D.) Gasket, Stator (Used only on Std. poi nt ign.) Screw, 10-32 x 1/2"	285A 33662 301A 410144B 410144B 410144B 51.D.) 301A 33032 Fuel Cap (White Plastic) (Standard) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (1.75" I.D.) 301A 35356 Gasket, Stator (Used only on Std. poi nt ign.) 301B 35356 Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) Plug, Cover				
301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) Fuel Cap (Red Plastic)(1.75" I.D.) Fuel Cap (Red Plastic)(1.75" I.D.) Gasket, Stator (Used only on Std. poi nt ign.) Screw, 10-32 x 1/2"	301A 410144B Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (1.75" I.D.) Fuel Cap (Red Plastic)(1.75" I.D.) Gasket, Stator (Used only on Std. poi nt ign.) Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) Plug, Cover				·
I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) Fuel Cap (Red Plastic)(1.75" I.D.) Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	I.D.) 301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (1.75" I.D.) Fuel Cap (Red Plastic) (1.75" I.D.) Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) 338A 31291 Plug, Cover				
Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) Solution In the profile of	301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (1.75" I.D.) Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 320 610938 338A 31291 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)	30171	101715		
required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	required) (1.5" I.D.) 301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 320 610938 Regulator (7 Amp) 338A 31291 Plug, Cover				•
301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (1.75" I.D.) Gasket, Stator (Used only on Std. poi nt ign.) Screw, 10-32 x 1/2"	301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic) (1.75" I.D.) Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 320 610938 Regulator (7 Amp) 338A 31291 Fuel Cap (Red Plastic) (1.75" I.D.) Gasket, Stator (Used only on Std. poi nt ign.) Screw, 10-32 x 1/2" Regulator (7 Amp) Plug, Cover	301A	33032		
as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) 338A 31291 Plug, Cover				required) (1.5" I.D.)
as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	as required) (1.5" I.D.) 301A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) 313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) 338A 31291 Plug, Cover	301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) 338A 31291 Plug, Cover				
313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2"	313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) 319 28820 Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) 338A 31291 Plug, Cover	301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
319 28820 Screw, 10-32 x 1/2"	319 28820 Screw, 10-32 x 1/2" 320 610938 Regulator (7 Amp) 338A 31291 Plug, Cover				
·	320 610938 Regulator (7 Amp) 338A 31291 Plug, Cover				
	338A 31291 Plug, Cover				·
	301 30000 3016W, TOIX 1-30, 1/4-20 X 1/2				
301 30000 3016W, 101A 1-30, 1/4-20 A 1/2		301	0000		OHOW, 101A 1-00, 1/T-20 A 1/2

Ref #	Part Number	Qty	Description
375	610979		Magneto (w/ring gear) (12 Volt, 7 Amp) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3
378	30547A 610767A 632054		Breaker Points (Use with Std. point i gn.) Condenser Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 164 for breakdown or Fiche18B, Grid F-6)
	730226 35824		SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional