


	Part Number Qty	
1	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
2	27652	Pin, Dowel
	30968	Nipple, Oil drain
	30969	Cap, Oil drain
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	650494	Screw, 6-40 x 5/16"
	30700	Yoke, Governor
16	33454	Governor Lever Assy.
17	29916	Clamp, Governor lever
18	650548	Screw, 8-32 x 5/16"
	32630	Seal, Oil
	29536	Blower Housing Baffle (Without electric starter knockout)
20	20000	(Use as required)
		(Ose as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
		• •
	650561	Screw, 1/4-20 x 5/8"
30	33459A	Crankshaft (Incl. 108 & 109)
35	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
	34543	Piston, Pin & Ring Set (Std.) (3-3/16 ")
	34544	Piston, Pin & Ring Set (.010" OS)
40	34545	Piston, Pin & Ring Set (.020" OS)
41	34031B	Piston & Pin Ass'y. (Std.)(3-3/16")(I ncl.43)
41	34032B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34033B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34037	Ring Set (Std.) (3-3/16" Bore)
	34038	Ring Set (.010" OS)
	34039	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650662C	Bolt, Connecting rod (2 pieces)
47	650662C	Bolt, Connecting rod (2 pieces)
	34034	Lifter, Valve
	34242	Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	34126	Bracket, Grommet mounting
	650760	Screw, 8-32 x 3/8"
63	28545	Grommet, Plastic
65	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33367B	Cover, Cylinder (Incl. 71, 75 & 80)
	33368	Bushing, Crankshaft
	27642	Plug, Oil drain
	31950	Seal, Oil
	31845	Shaft, Mechanical governor
81	30590A	Washer, Flat
82	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
04	650833	
00	000000	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
87	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
87 89		Screw, 1/4-20 x 1-11/16" (Use as requ ired) Key, Flywheel Washer, Belleville


	Part Number	Qty	
93	8116		Nut, Hex
101	610118		Cover, Spark plug
103	650489		Screw, 1/4-20 x 5/8"
	29783		Pin, Crankshaft gear (Only serviceable when gear is pinned
	20.00		to crank.)
	33245		Gear, Crankshaft
	34240		Ground Wire
119	34041A		* Gasket, Cylinder head
120	34030A		Head, Cylinder
125	27878A		Exhaust Valve (Std.) (Incl. 151)
	27880A		Exhaust Valve (1/32" OS) (Incl. 151)
	34035		Intake Valve (Std.) (Incl. 151)
	34036		Intake Valve (1/32" OS) (Incl. 151)
	650691		Washer (Do not use with No. 6021A scr ew.)
	650690		Washer, Belleville (Use as required)
	650727		Screw, 5/16-18 x 1-3/4 (Use as required)
130	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No 650691 washer.)
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
			but discard 650691 washer.)
130	650694A		Screw, 5/16-18 x 2" (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required )
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650890		Washer, Internal Lock
	33636		Resistor Spark Plug
	33369		Bracket, Governor gear
	650836		Screw, $10-24 \times 1/2$ "
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	27896A		* Gasket, Breather
	28423		Body, Breather
171	28424		Element, Breather
172	28425		Cover, Breather
173	35350		Tube, Breather
174	650128		Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
	30088A		Screw, 1/4-28 x 1"
	33263		* Gasket, Carburetor
	33877		Pipe, Intake
	33371		•
			Link, Governor lever
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	610973		Terminal Assy.
	33878		Link, Governor lever-to-throttle
	27793		Clip, Conduit
211	28942		Screw, 10-32 x 3/8"
222A			Pop Rivet (Can be purchased locally)
	650378		Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A		* Gasket, Intake pipe
	34145		Blower Housing (For electric starter)
	650788 20747B		Screw, 5/16-18 x 3/4"
262	29747B		Screw, 5/16-24 x 21/32"
005			
	33272B 34185A		Cover, Cylinder head Muffler

## HM100-159038C Engine Parts List #1


Ref #	Part Number Q	ty Description
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
281	33013	Cover, Starter bubble
282	650760	Screw, 8-32 x 7/16"
285A	33662	Hub & Screen Assy.
287	29752	Nut, 1/4-28
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
	26460	Fuel Line Clamp (Use as required)
	32961	Valve, Fuel shut-off
	650665	Screw, 1/4-15 x 7/8"
	34160A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
500	34100A	builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
004 4	22020	
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	31297	Dipstick (Incl. 307)
336	650765	Screw, 10-32 x 1/2"
337	34140	Cover, Carburetor
338	28942	Screw, Sems 10-32 x 3/8"
338A	31291	Plug, Cover
340	34154	Plate, Upper fuel tank mtg.
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	34141	Guard, Starter
	32576	Seal, Snow Guard
	650767	Screw, 8-32 x 27/64"
	34346	Decal, Instruction
	35274	Decal, Instruction
	631021	Inlet Needle, Seat & Clip Assy.
380	632038	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page 152 for breakdown or Fiche18B, Grid E-7)
400	33279G	* Gasket Set (Incl. items marked *)
	730225	SAE 30 4-Cycle Engine Oil (Quart)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional

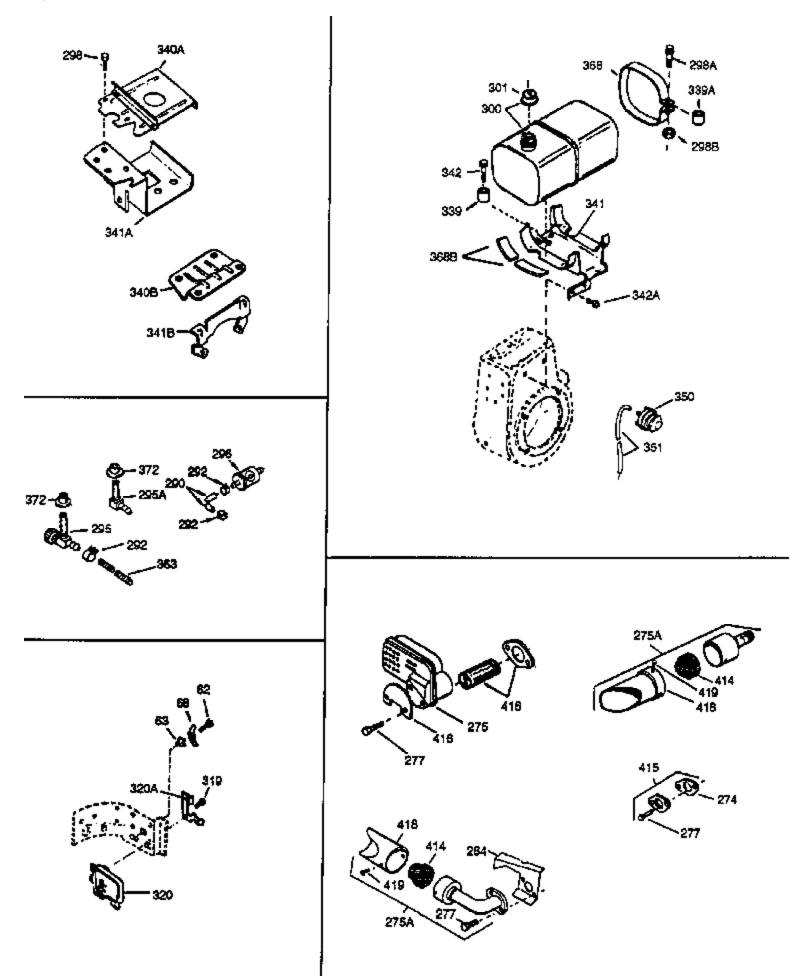

	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
62	650760		Screw, 8-32 x 3/8"
63	28545		Grommet, Plastic
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required )
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
274	35865		Gasket, Exhaust
	34185A		Muffler
	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
	33662		Hub & Screen Assy.
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	32961		Valve, Fuel shut-off
	650665		Screw, 1/4-15 x 7/8"
	34160A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
000			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
00171			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
3014	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	34140		Cover, Carburetor
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	570629A		Primer Assy.
	32180C		Line, Primer
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
/\ <b>\</b> \	35824		Muffler Optional

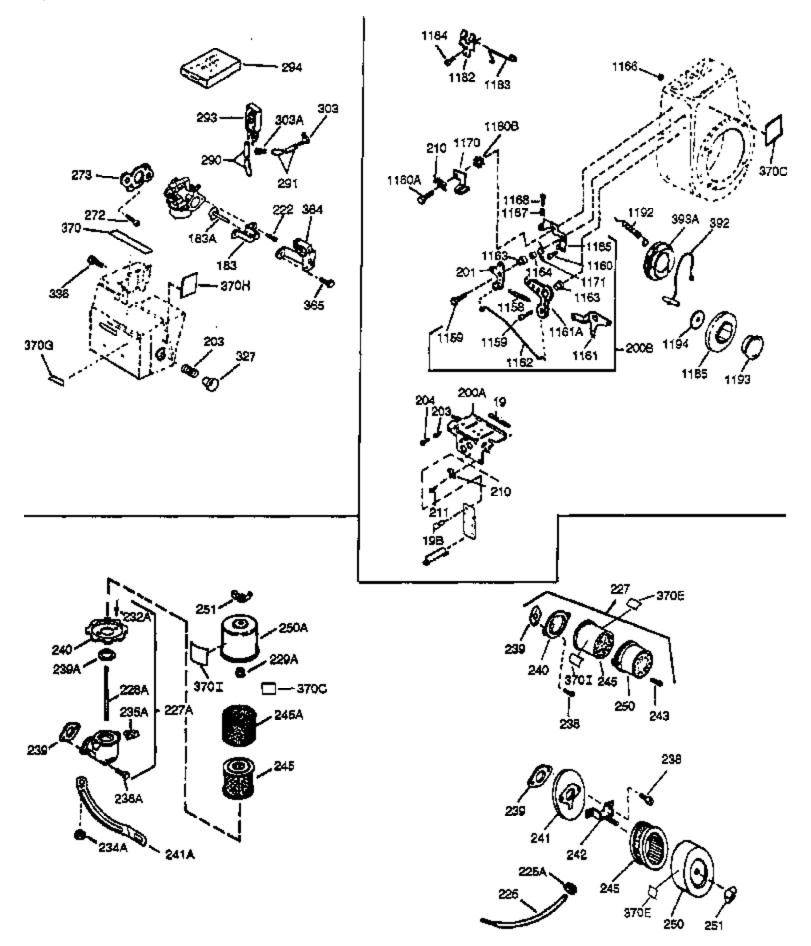

		Aty Description
37A	30322	Nut & Lockwasher, 8-32
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737	Screw, 1/4-20 x 1/2" (Use as required )
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	33461A	Control Bracket (Incl. 19, 203, 204 & 206)
	730152	Control Bracket (Incl. 13, 203, 204 & 200) Control Bracket (Incl.1158-1171)(As r eq.)
	31342	
		Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
222A		Pop Rivet (Can be purchased locally)
227	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
		required)
2054	33662	Hub & Screen Assy.
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As requ ired)
	30705	Fuel Line (Braided 16")(40cm)(As requ ired)
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair ki
		is used with the 35813 and 35800 fuel pumps.
204	25701	Fuel Dump Danair Kit NOTE: 24295 and 22715 (M/D) nump
294	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pump
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair ki
		is used with the 35813 and 35800 fuel pumps.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
0044	00000	
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use a
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
0011		as required) (1.5" I.D.)
0044	05055	
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	32958	Fitting, Fuel
	29673	* Gasket, Oil filler
	650765	Screw, 10-32 x 1/2"
	34140	Cover, Carburetor
338A	31291	Plug, Cover
	33377	Bracket, Carburetor cover mtg.
	650767	Screw, 8-32 x 27/64"
	34346	Decal, Instruction
	35274	Decal, Instruction
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
	33374	Spring Extension
	30312	Screw, 10-32 x 1/2"
1160	28820	Screw, 10-32 x 1/2"
1160	27070	Lockwasher
	34138	Bracket, Choke wire
	34139	Control, Choke wire
	650257	Screw 8-32 x 5/16"
1184	650257 33816	Screw, 8-32 x 5/16" Hub & Screen Assy.

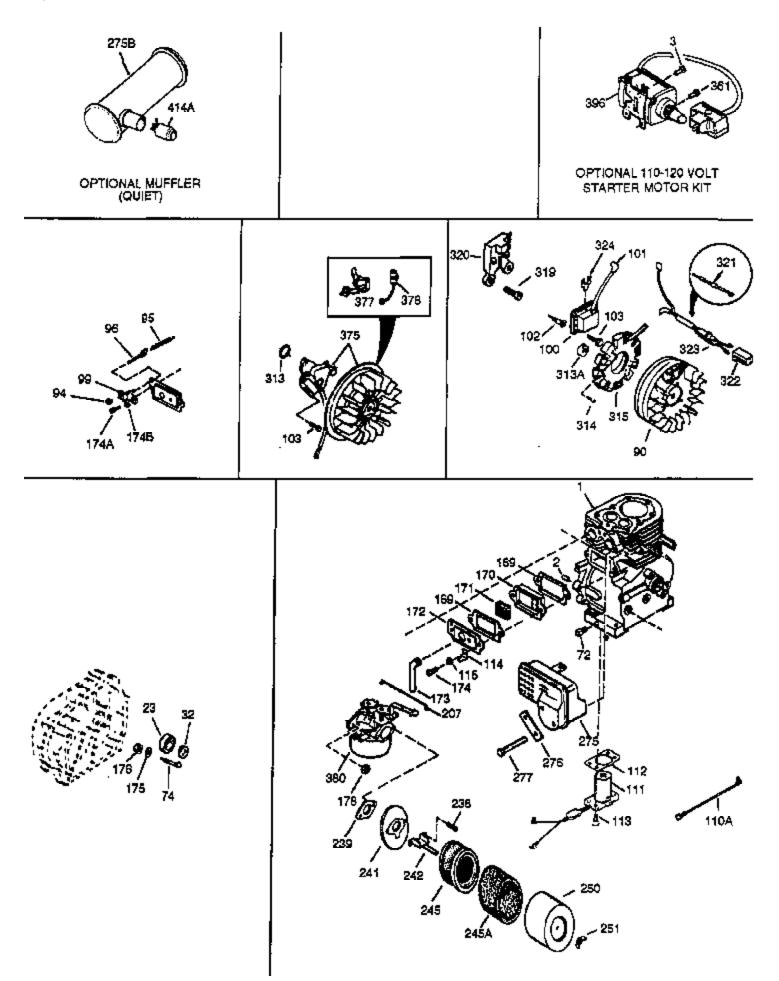

Ref #	Part Number Qty	Description
	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
2	27652	Pin, Dowel
37A	30322	Nut & Lockwasher, 8-32
72	27642	Plug, Oil drain
101	610118	Cover, Spark plug
	650489	Screw, 1/4-20 x 5/8"
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required )
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	
		Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
275	34185A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	
		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	33662	Hub & Screen Assy.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
201 0	24240	Fuel Can (Bad Diastia) (Spurt Desistant Lligh Drafile) (Llas
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	34140	Cover, Carburetor
	31291	Plug, Cover
	610848	Magneto (w/ring gear for 120 Volt sta rter) NOTE: The
515	010040	complete magneto is not available as an assembly.
		Themagneto number is shown for reference purpose only.
		Order component parts individually, as shown in parts list.
		(Refer to Division 5, Section B, page 28 for breakdown or
		Fiche 18B, Grid F-1
377	30547A	Breaker Points (Use with Std. point i gn.)
	30548B	Condenser
	632038	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page 152 for breakdown or Fiche18B, Grid E-7)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional