


1 3492 2 2763 15 3063 15B 6504 15A 3070 16 3345	652 699C	Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72) Pin, Dowel
15 306 15B 650 15A 3070 16 334	599C	
15B 6504 15A 3070 16 3344		
15B 6504 15A 3070 16 3344		Rod Assy., Governor (Incl. 15A & 15B)
15A 3070 16 334	1494	Screw, 6-40 x 5/16"
16 334		Yoke, Governor
		Governor Lever Assy.
17 299		Clamp, Governor lever
18 650	)548	Screw, 8-32 x 5/16"
20 3263	630	Seal, Oil
25 352	256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
25 295		Blower Housing Baffle (Without electric starter knockout) (Use as required)
26 650		Screw, 1/4-20 x 5/8"
30 3519	198	Crankshaft (Incl. 108 & 109)
35 2982		Screw, 10-32 x 3/4"
36 299		Lockwasher, #8 E.T.
37 292		Locknut, 10-32
		Nut & Lockwasher, 8-32
37A 3032		,
38 296		Ring, Retaining
40 348		Piston, Pin & Ring Set (Std.)(3-5/16")
40 3480	361A	Piston, Pin & Ring Set (.010" OS)
40 3480	362A	Piston, Pin & Ring Set (.020" OS)
41 3486		Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41 3480		Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41 3480		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42 348		
		Ring Set (Std.) (3-5/16" Bore)
42 348		Ring Set (.010" OS)
42 348		Ring Set (.020" OS)
43 278		Ring, Piston Pin retaining
45 3259	591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
46 6500	0662C	Bolt, Connecting rod (2 pieces)
47 6506		Bolt, Connecting rod (2 pieces)
48 340		Lifter, Valve
49 3424		Dipper, Oil
50 341		Camshaft (MCR)
60 332		Extension, Blower housing
65 650 <sup>-</sup>		Screw, 10-24 x 1/2"
69 3520	262	* Gasket, Flange
70 3336		Cover, Cylinder (Incl. 71, 75 & 80)
71 3330		Bushing, Crankshaft
72 276		Plug, Oil drain
75 319		Seal, Oil
80 318		Shaft, Mechanical governor
81 305		Washer, Flat
82 3059		Gear Assy., Governor (Incl. 81)
83 3058	588A	Spool, Governor
84 2919		Ring, Retaining
86 6508		Screw, 1/4-20 x 1-3/16 (Use as requir ed)
87 6508		Screw, 1/4-20 x 1-11/16" (Use as required)
89 3258		Key, Flywheel
90 6110		Flywheel
92 6508		Washer, Belleville
93 8110	16	Nut, Hex
100 3513		Solid State Assy.
102 6508		Stud, Solid state mounting
103 6508		Screw, Torx T-15, 10-24 x 1"


	Part Number Q 29783	<ul> <li>ty Description</li> <li>Pin, Crankshaft gear (Only serviceable when gear is pinned to crank.)</li> </ul>
		·
	33245	Gear, Crankshaft
119	34923A	* Gasket, Cylinder head
120	34030A	Head, Cylinder
125	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	
		Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No 650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
100		but discard 650691 washer.)
	650694A	Screw, $5/16-18 \times 2"$ (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required )
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
133	650890	Washer, Internal Lock
134	30747	Clip, Spark plug shorting
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x $1/2$ "
	35862	Seal Assy., Intake valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
169	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
172	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	33263	* Gasket, Carburetor
185	34707	Pipe, Intake
186	34661	Link, Governor lever
200	34664	Control Bracket (Incl.19,203, 204, 20 6 & 209)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	33878	Link, Governor lever-to-throttle
	650821	Screw, 10-32 x 1/2"
	27793	
222A		Pop Rivet (Can be purchased locally)
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
224	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
	33280A	Muffler
276	31588	Plate, Muffler locking
	35741	Plate, Muffler locking

## HM100-159042D Engine Parts List #1


Ref # F	Part Number C	ty Description
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	51002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
281 3		Cover, Starter bubble
	650760	Screw, 8-32 x 7/16"
285 3		Cup, Starter
286 3		Screen, Starter
287 2		Nut, 1/4-28
290 2		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290 3		Fuel Line (Braided 32")(80cm)(As required)
291 3		Fuel Line (Braided 16")(40cm)(As required)
292 2		Fuel Line Clamp (Use as required)
	650665	Screw, 1/4-15 x 7/8"
300 3	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were builtwith different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
301A 4	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A 3	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A 3	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
301A 3	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
306 2		* Gasket, Oil filler
310 3		Dipstick (Incl. 307)
338A 3		Plug, Cover
340 3		Plate, Upper fuel tank mtg.
341 3		Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
370 3		Decal, Instruction
370 3		Decal, Instruction
370A 3		Decal, Name
379 6	631021	Inlet Needle, Seat & Clip Assy.
380 6	532242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page A4-4 for breakdown or Fiche 18B, Grid D-3)
400 3	33279G	* Gasket Set (Incl. items marked *)
	730225	SAE 30 4-Cycle Engine Oil (Quart)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)

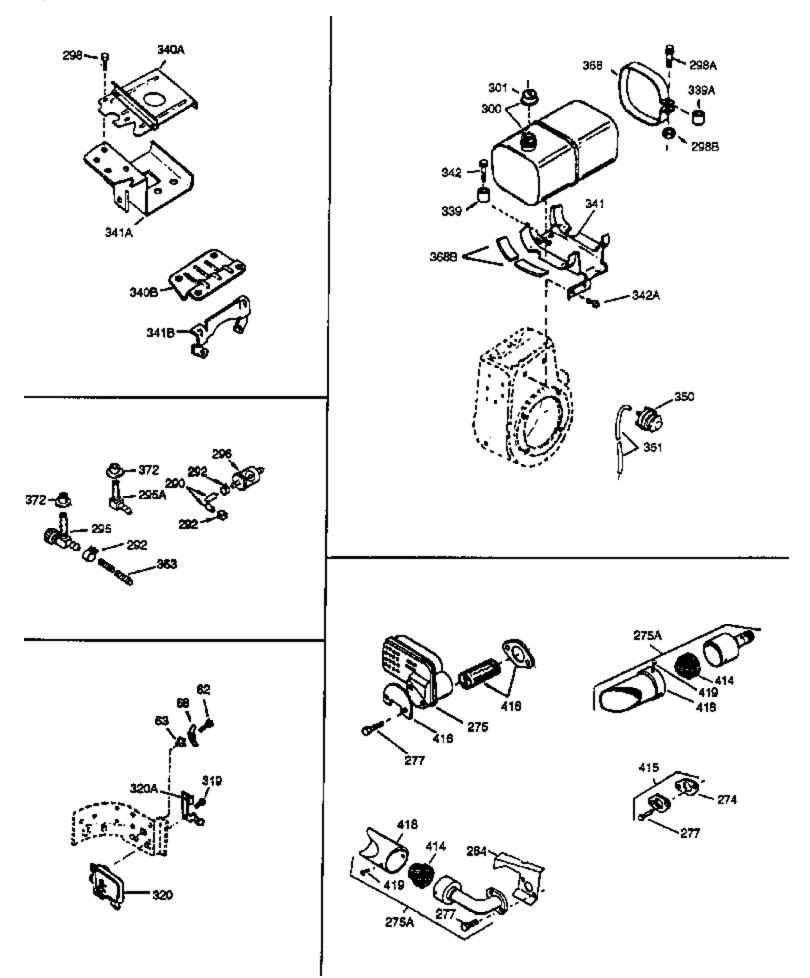

Ref #	Part Number Qty	Description
	30322	Nut & Lockwasher, 8-32
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required )
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
222A		Pop Rivet (Can be purchased locally)
	33269A	Cover, Air cleaner
	35865	Gasket, Exhaust
	33280A	Muffler
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As requ ired)
	26460	Fuel Line Clamp (Use as required)
	650665	Screw, 1/4-15 x 7/8"
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
2010	33032	Fuel Can (Red Directio) (Spurt Desigtant Law Profile) (Lise on
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
		required) (1.5 1.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
<b>२</b> ∩1∆	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	31291	Plug, Cover
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	33323	Opt.Muffler Screen (Mini-Bike applica tion)
	730130	Kit, Exhaust adapter (Incl. 274 & 277)
	33700	Cover & Tube, Muffler (use as require d)
	650578	Screw, 8-18 x 3/8" (use as required)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
		······································

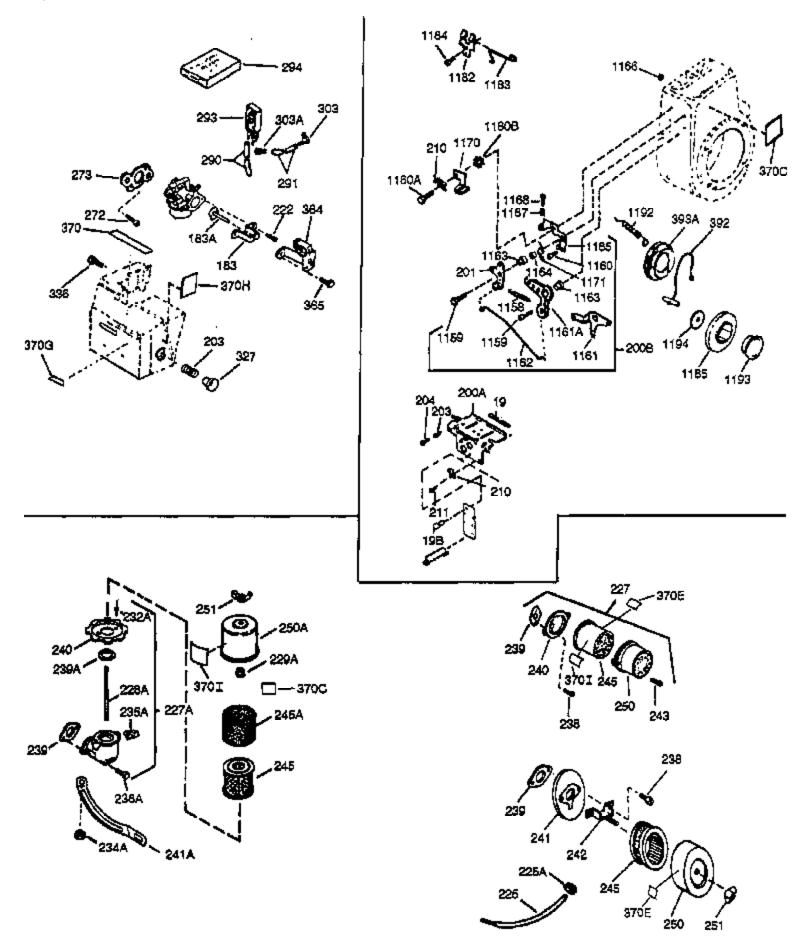

	Part Number	Qty	Description
	30322		Nut & Lockwasher, 8-32
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737		Screw, 1/4-20 x 1/2" (Use as required )
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	27793		Clip, Conduit
222A			Pop Rivet (Can be purchased locally)
227	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
			required)
238	28820		Screw, 10-32 x 1/2"
	27272A		
			* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
245	33268		Element, Air cleaner
250B	33269A		Cover, Air cleaner
251	650513		Nut, Wing 1/4-20
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As required)
293	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
00/4			,
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00117			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
303	32958		Fitting, Fuel
	29673		* Gasket, Oil filler
	31291		Plug, Cover
	34346		Decal, Instruction
	35274		Decal, Instruction
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
			Screw, 10-32 x 1/2"
1159	30312		
1159	30312 28820		Screw, 10-32 x 1/2"
1159 1160			
1159 1160 1160	28820		Screw, 10-32 x 1/2"

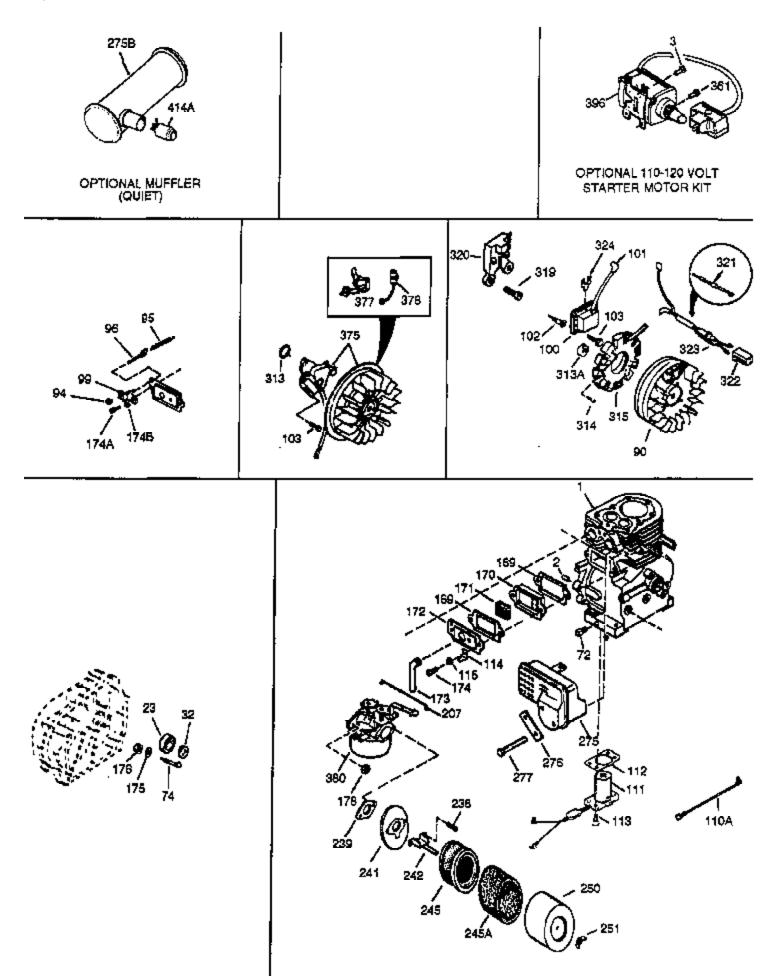

Ref # Part Numb	
1 34922A	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
2 27652	Pin, Dowel
37A 30322	Nut & Lockwasher, 8-32
72 27642	Plug, Oil drain
90 611090	Flywheel
100 35135	Solid State Assy.
102 650872	Stud, Solid state mounting
103 650814	Screw, Torx T-15, 10-24 x 1"
129 650727	Screw, 5/16-18 x 1-3/4 (Use as required)
131 650737	Screw, 1/4-20 x 1/2" (Use as required )
131 650738	Screw, 1/4-20 x 5/8 (Use as required)
131A 650713	Screw, 5/16-18 x 5/8"
169 27896A	* Gasket, Breather
170 28423	Body, Breather
171 28424	Element, Breather
172 28425	Cover, Breather
173 35350	Tube, Breather
174 650128	Screw, 10-24 x 1/2"
178 29752	Nut & Lockwasher, 1/4-28
207 33878	
	Link, Governor lever-to-throttle
222A	Pop Rivet (Can be purchased locally)
238 28820	Screw, 10-32 x 1/2"
239 27272A	* Gasket, Air cleaner
241 33266	Bracket, Air cleaner
242 33267	Bracket, Air cleaner
245 33268	Element, Air cleaner
250B 33269A	Cover, Air cleaner
251 650513	Nut, Wing 1/4-20
275B 391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
	mufflercan be used on any model.)
275 33280A	Muffler
276 31588	Plate, Muffler locking
276 35741	Plate, Muffler locking
277 650729	Screw, 5/16-18 x 3-3/16" (Use as required)
277 651002	Screw, 5/16-18 x 4-1/4" (Use as required)
301A 410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
301/1 4101418	I.D.)
	·
301A 33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
	required) (1.5" I.D.)
0014 04010	
301A 34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
	as required) (1.5" I.D.)
301A 35355	Fuel Cap (Red Plastic)(1.75" I.D.)
306 29673	* Gasket, Oil filler
313A 33876	Gasket, Stator (Used only on Std. poi nt ign.)
338A 31291	Plug, Cover
377 30547A	Breaker Points (Use with Std. point i gn.)
380 632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
	page A4-4 for breakdown or Fiche 18B, Grid D-3)
101 700000	
421 730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422 35824	Muffler Optional