


1	35371	Qty	Description Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652		Pin, Dowel
15B	650494		Screw, 6-40 x 5/16"
15A	30700		Yoke, Governor
15	30699C		Rod Assy., Governor (Incl. 15A & 15B)
	33454		Governor Lever Assy.
	29916		Clamp, Governor lever
	650548		Screw, 8-32 x 5/16"
	35319		Seal, Oil
	35256A		Blower Housing Baffle (With electric starter knockout) (Use
20			as required)
	35326		Baffle, Blower housing
25	29536		Blower Housing Baffle (Without electric starter knockout)
			(Use as required)
26	650561		Screw, 1/4-20 x 5/8"
	35372A		Crankshaft (Incl. 108 & 109)
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
	29216		Locknut, 10-32
	30322		Nut & Lockwasher, 8-32
	29642		
	34860A		Piston, Pin & Ring Set (Std.)(3-5/16")
	34861A		Piston, Pin & Ring Set (.010" OS)
	34862A		Piston, Pin & Ring Set (.020" OS)
	34863		Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864		Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A		Ring Set (Std.) (3-5/16" Bore)
	34867A		Ring Set (.010" OS)
	34868A		Ring Set (.020" OS)
43	27888		Ring, Piston Pin retaining
45	35373A		Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650908		Bolt, Connecting rod
47	650882		Connecting Rod Bolt (2 pcs. on early Specs.)
48	34034		Lifter, Valve
49	35374		Dipper, Oil
50	35375		Camshaft (MCR)
60	33273A		Extension, Blower housing
	650802		Screw, 1/4-20 x 5/8"
	650128		Screw, 10-24 x 1/2"
	35262		* Gasket, Flange
	35376		Cover, Cylinder (Incl. 71, 75 & 80)
	35377		Bushing, Crankshaft
	27642		Plug, Oil drain
	35319		Seal, Oil
	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
	35378		Gear Assy., Governor (Incl. 81)
	30588A		Spool, Governor
	29193		Ring, Retaining
	650833		Screw, 1/4-20 x 1-3/16 (Use as required)
	650832		Screw, 1/4-20 x 1-3/10 (Use as required) Screw, 1/4-20 x 1-11/16" (Use as required)
	32589		
			Key, Flywheel
	611090		Flywheel Washer Lock
	650880 650881		Washer, Lock
	650881 25125		Nut, 5/8-18
100	35135		Solid State Assy.


	Part Number	Description
102	650872	Stud, Solid state mounting
103	650814	Screw, Torx T-15, 10-24 x 1"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
109	33245	Gear, Crankshaft
	34923A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	
		Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
128	650690	Washer, Belleville (Use as required)
129	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No
		650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
100		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650737	Screw, 1/4-20 x 1/2" (Use as required )
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650890	Washer, Internal Lock
	30747	Clip, Spark plug shorting
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
150	27881	Spring, Valve
151	32581	Cap, Lower valve spring
169	27896A	* Gasket, Breather
170	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	33263	* Gasket, Carburetor
	34707	Pipe, Intake
	34661	Link, Governor lever
200	34664	Control Bracket (Incl.19,203, 204, 20 6 & 209)
203	31342	Spring, Compression
204	650549	Screw, 5-40 x 7/16"
	33878	Link, Governor lever-to-throttle
	650821	Screw, 10-32 x 1/2"
	27793	Clip, Conduit
210 222A	200	Pop Rivet (Can be purchased locally)
	650378	
		Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4"
262	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
265	33212D	

## HM100-159042H Engine Parts List #1


	Part Number	ty Description	
	31588	Plate, Muffler locking	
276	35741	Plate, Muffler locking	
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)	
277	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)	
281	33013	Cover, Starter bubble	
282	650760	Screw, 8-32 x 7/16"	
285	35287	Cup, Starter	
286	35446	Screen, Starter	
287	29752	Nut, 1/4-28	
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)	
	30962	Fuel Line (Braided 32")(80cm)(As required)	
	30705	Fuel Line (Braided 16")(40cm)(As required)	
	26460	Fuel Line Clamp (Use as required)	
	650665	Screw, 1/4-15 x 7/8"	
	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks v	vere
000	01100/1	builtwith different size fuel inlet openings. Tanks	
		1-3/16" I.D. opening use fuel cap 34210. Tanks w	
		1-1/2" I.D. opening use fuel cap 35355.	
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as requ	ired) (1.5"
		I.D.)	
201 0	33032	Fuel Cap (Pad Plastia) (Spurt Pagistant Law Pro	file) (Llee er
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Pro	lile) (Use as
		required) (1.5" I.D.)	
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Pro	ofile) (Use
		as required) (1.5" I.D.)	, (
0044	05055	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)	
	35554	Oil Fill Tube	
	35499	"O" Ring	
	35540	Clip, Fill tube	
	36205	Dipstick	
	35392	Plug, Starter	
338A	31291	Plug, Cover	
340	34154	Plate, Upper fuel tank mtg.	
341	34155	Bracket, Lower fuel tank mtg.	
342	650561	Screw, 1/4-20 x 5/8"	
	34686	Decal, Name	
	34346	Decal, Instruction	
	35274	Decal, Instruction	
	631021	Inlet Needle, Seat & Clip Assy.	
	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5,	Section A
		page A4-4 for breakdown or Fiche 18B, Grid D-3)	
		10,	
390	590633	Rewind Starter (Refer to Division 5, Section C, pa	ge 30 for
		breakdown or Fiche 18B, Grid G-1)	
100	33279G	* Gasket Set (Incl. items marked *)	
	730225 730226	SAE 30 4-Cycle Engine Oil (Quart) SAE 5W30 4-Cycle Engine Oil (Quart)	
404			
	35824	Muffler Optional	

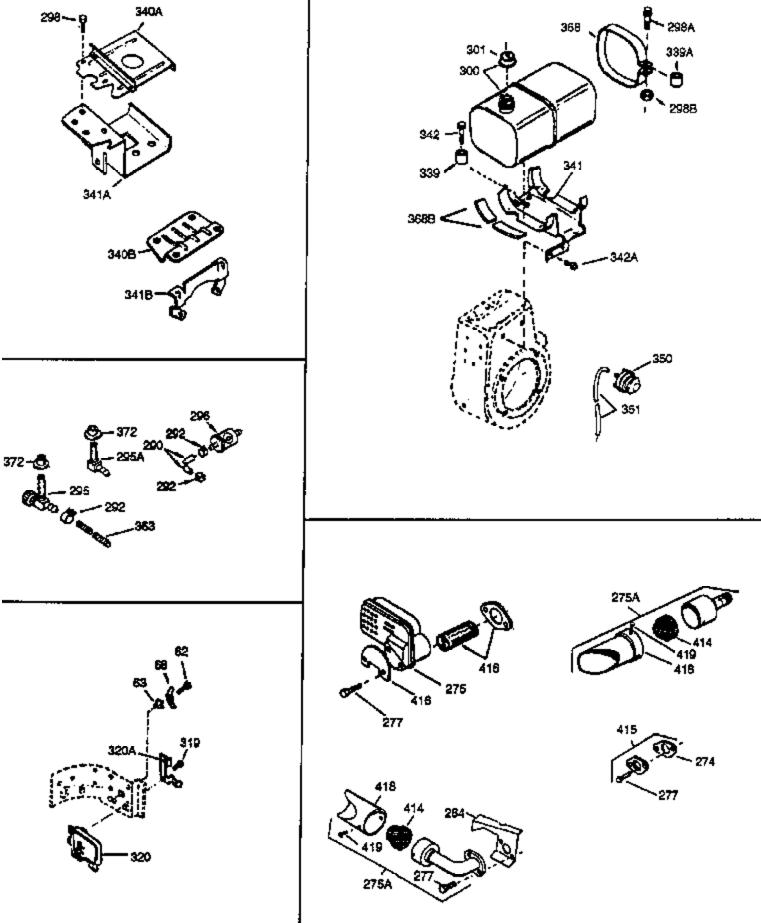

		Description
37A	30322	Nut & Lockwasher, 8-32
	650802	Screw, 1/4-20 x 5/8"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	Screw, 5/16-18 x 5/8"
131	650737	Screw, 1/4-20 x 1/2" (Use as required )
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
222A		Pop Rivet (Can be purchased locally)
250B	33269A	Cover, Air cleaner
274	35865	Gasket, Exhaust
275	33280A	Muffler
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
290	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As requ ired)
292	26460	Fuel Line Clamp (Use as required)
298	650665	Screw, 1/4-15 x 7/8"
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
3014	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
301A	410144D	I.D.)
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
201 0	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
301A	34210	as required) (1.5" I.D.)
		as required) (1.5 1.D.)
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
338A	31291	Plug, Cover
341	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	33323	Opt.Muffler Screen (Mini-Bike applica tion)
	730130	Kit, Exhaust adapter (Incl. 274 & 277 )
418	33700	Cover & Tube, Muffler (use as require d)
419	650578	Screw, 8-18 x 3/8" (use as required)
421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional

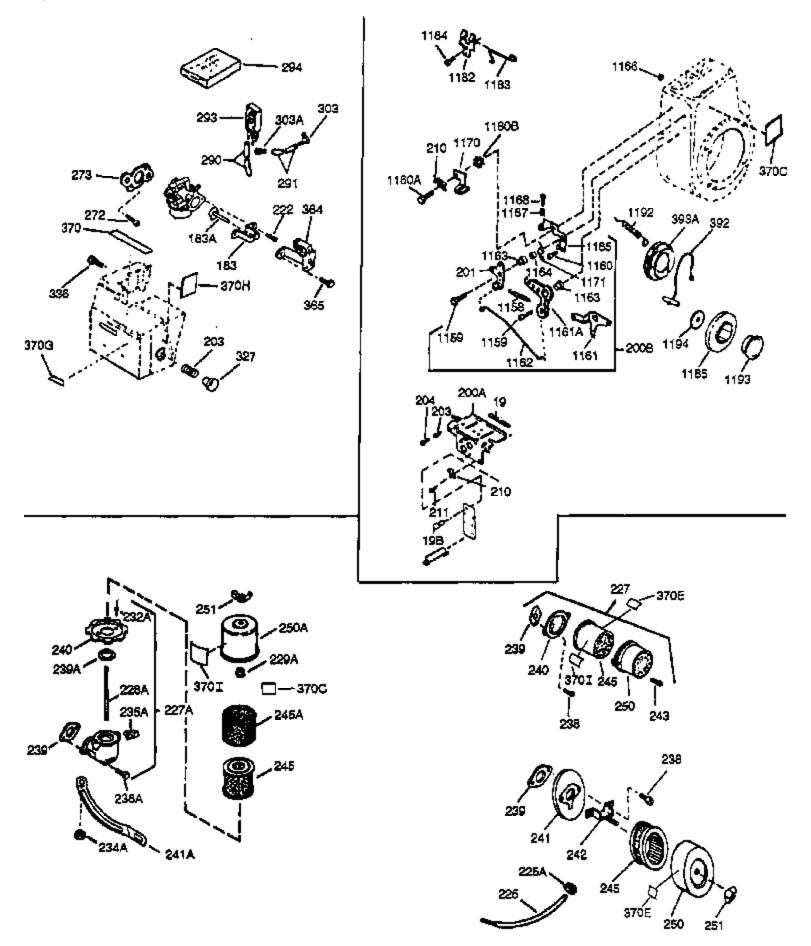

Ref # Part Number	Qty Description
37A 30322	Nut & Lockwasher, 8-32
64 650802	Screw, 1/4-20 x 5/8"
129 650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A 650713	Screw, 5/16-18 x 5/8"
131 650737	Screw, 1/4-20 x 1/2" (Use as required )
131 650738	Screw, 1/4-20 x 5/8 (Use as required)
200B 730152	Control Bracket (Incl.1158-1171)(As r eq.)
203 31342	Spring, Compression
203 51342 204 650549	Screw, 5-40 x 7/16"
210 27793	
	Clip, Conduit
222A	Pop Rivet (Can be purchased locally)
227 730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as required)
238 28820	Screw, 10-32 x 1/2"
239 27272A	* Gasket, Air cleaner
241 33266	Bracket, Air cleaner
242 33267	Bracket, Air cleaner
245 33268	Element, Air cleaner
250B 33269A	Cover, Air cleaner
251 650513	Nut, Wing 1/4-20
290 29774	
	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290 30962	Fuel Line (Braided 32")(80cm)(As required)
291 30705	Fuel Line (Braided 16")(40cm)(As required)
293 33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
	are replaced by 35813 and 35800 (WIP) pumps. The 33010
	(3000 series) repair kit is still available. The 35791 repair kit
	is used with the 35813 and 35800 fuel pumps.
294 35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
204 00701	are replaced by 35813 and 35800 (WIP) pumps. The 33010
	(3000 series) repair kit is still available. The 35791 repair kit
	is used with the 35813 and 35800 fuel pumps.
301A 410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
	I.D.)
301A 33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
001/1 00002	required) (1.5" I.D.)
301A 34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
	as required) (1.5" I.D.)
	Fuel Con (Bod Plactic)(4 ZE"   D)
301A 35355	Fuel Cap (Red Plastic)(1.75" I.D.)
303 32958	Fitting, Fuel
327 35392	Plug, Starter
338A 31291	Plug, Cover
370 34346	Decal, Instruction
370 35274	Decal, Instruction
421 730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422 35824	Muffler Optional
1159 30312	Screw, 10-32 x 1/2"
1160 28820	Screw, 10-32 x 1/2"
1160 27070	Lockwasher
1185 33816	Hub & Screen Assy.

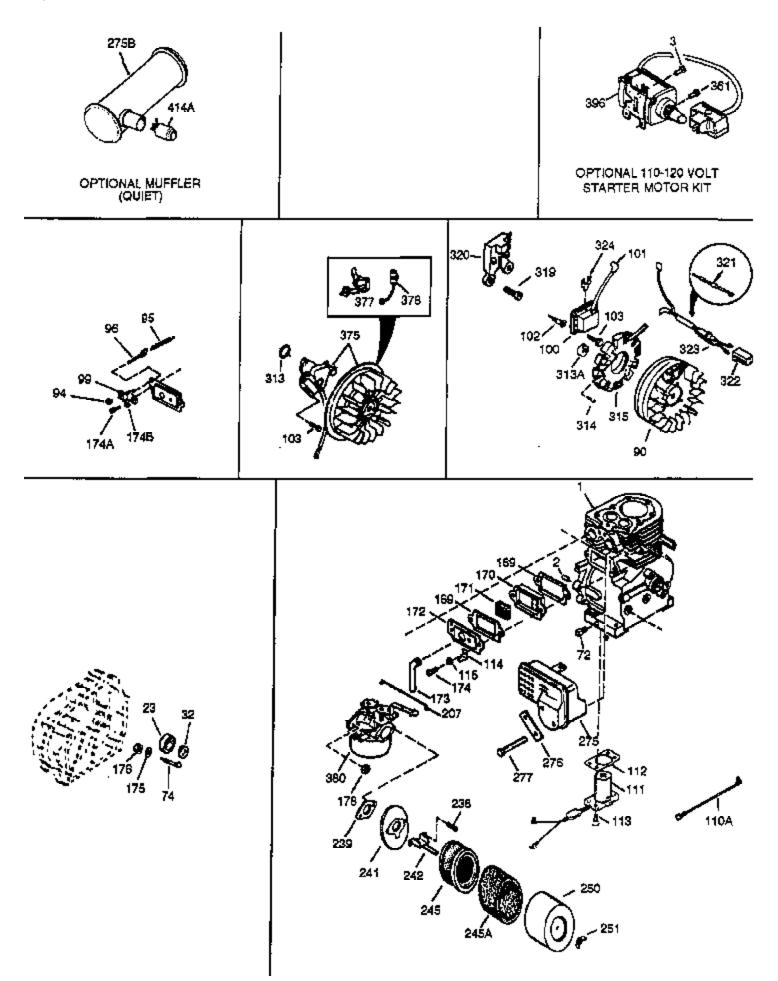

		Description
1	35371	Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652	Pin, Dowel
37A	30322	Nut & Lockwasher, 8-32
64	650802	Screw, 1/4-20 x 5/8"
	27642	Plug, Oil drain
	611090	Flywheel
	35135	Solid State Assy.
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
	650737	Screw, 1/4-20 x 1/2" (Use as required )
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
169	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
172	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
	33070	
222A	00000	Pop Rivet (Can be purchased locally)
	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
242	33267	Bracket, Air cleaner
245	33268	Element, Air cleaner
250B	33269A	Cover, Air cleaner
251	650513	Nut, Wing 1/4-20
	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
		• •
	33280A	Muffler
276	31588	Plate, Muffler locking
276	35741	Plate, Muffler locking
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
201 0	24210	Fuel Can (Red Diastia) (Spurt Desistant, High Drofile) (Lies
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
3014	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	
		Plug, Cover
	30547A	Breaker Points (Use with Std. point i gn.)
380	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page A4-4 for breakdown or Fiche 18B, Grid D-3)
101	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
421		
	35824	Muffler Optional