


		Qty Description
	35371	Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	650494	Screw, 6-40 x 5/16"
15A	30700	Yoke, Governor
16	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	33857	Spring Assy., Extension (Incl. 19B)
	35319	Seal, Oil
25	29536	Blower Housing Baffle (Without electric starter knockout) (Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
	35326	Baffle, Blower housing
26	650561	Screw, 1/4-20 x 5/8"
30	35495A	Crankshaft
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
	34861A	Piston, Pin & Ring Set (.010" OS)
40	34862A	Piston, Pin & Ring Set (.020" OS)
41	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	Ring Set (.010" OS)
	34868A	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
45	35373A	Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650908	Bolt, Connecting rod
47	650882	Connecting Rod Bolt (2 pcs. on early Specs.)
	34034	Lifter, Valve
	35374	
		Dipper, Oil
	35375	Camshaft (MCR)
	33273A	Extension, Blower housing
	650760	Screw, 8-32 x 3/8"
63	28545	Grommet, Plastic
65	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33626B	Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	27642	Plug, Oil drain
	33625	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
82	35378	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as required)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
90	611094	Flywheel (w/ring gear) (7 Amp)
90	611094 650880	Flywheel (w/ring gear) (7 Amp) Washer, Lock


		Aty Description
100	35135	Solid State Assy.
101	610118	Cover, Spark plug
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
	29783	
100	29/65	Pin, Crankshaft gear (Only serviceable when gear is pinned to crank.)
	33245	Gear, Crankshaft
110	35183	Wire, Ground
119	34923A	* Gasket, Cylinder head
120	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No
		650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650890	Washer, Internal Lock
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
	27881	Spring, Valve
151	32581	Cap, Lower valve spring
169	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	650517	Screw, 1/4-20 x 27/32"
	33263	* Gasket, Carburetor
	34661	Link, Governor lever
187	34349A	Flange, Carburetor mounting
187A	30196	Screw, 5/16-18 x 3/4"
200	34784	Control Bracket (Incl.19, 203, 204, 2 06, 209)
203	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	34785	Link, Governor lever-to-throttle
	650821	
		Screw, 10-32 x 1/2"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
222A		Pop Rivet (Can be purchased locally)
224	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
200		
261	650788	Screw, 5/16-18 x 3/4"

HM100-159050E Engine Parts List #1

	Part Number	Qty	Description
	33272B		Cover, Cylinder head
	35741		Plate, Muffler locking
277	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
285	35287		Cup, Starter
286	35194		Screen, Starter
287	29752		Nut, 1/4-28
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
000			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
			1-1/2 1.D. Open ing use rue cap 30000.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
3014	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use a
301A	33032		required) (1.5" I.D.)
			required) (1.5 1.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
201 4	25255		Fuel Con (Ded Directio)(1 75" D)
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	35941		Dipstick (Incl. 306)
	611097		Alternator Coil (7 Amp, D.C.)(Incl.32 2 & 323)
	34246		Clip, Ground wire
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
361	30063		Screw, Torx T-30, 1/4-20 x 1/2"
	34686		Decal, Name
370	34346		Decal, Instruction
370	35274		Decal, Instruction
	631021		Inlet Needle, Seat & Clip Assy.
	632406		Carburetor (Incl. 184 & 379) (Refer to Div. 5, Sec. A, page
			A3-8 for breakdown or Fiche 18B, Grid D-1)
005			
395	35763A		Electric Starter Motor (12 Volt) (Refer to service number
			stamped on end cap of motor, or on decal, for identification.
			Refer to Division 5, Section D for breakdown or Fiche 18B,
			Grid G-6)
400	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 50 4-Cycle Engine Oil (Quart)
	1 JULLU		ORE JYVJU 4-CYUE LIIUIIE VII (Qualt)
	35824		Muffler Optional

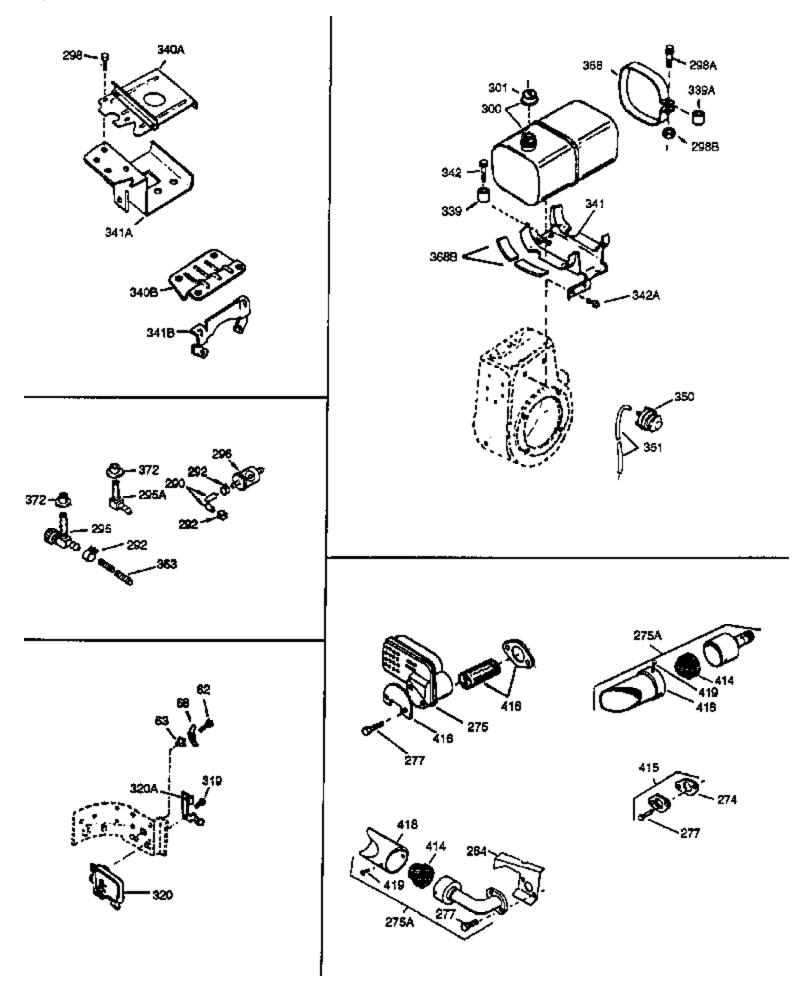


		Qty Description
37A	30322	Nut & Lockwasher, 8-32
62	650760	Screw, 8-32 x 3/8"
63	28545	Grommet, Plastic
68	33356	Tab, Ground terminal
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	34349A	Flange, Carburetor mounting
	30196	Screw, 5/16-18 x 3/4"
222A	00100	Pop Rivet (Can be purchased locally)
	33269A	Cover, Air cleaner
	35865	Gasket, Exhaust
	33714	
		Muffler (Incl. 284, 284A & 414)
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	34390	
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	26460	Fuel Line Clamp (Use as required)
	650665	Screw, 1/4-15 x 7/8"
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
001/1		I.D.)
		-
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
201 0	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
301A	34210	as required) (1.5" I.D.)
		as required) (1.5 1.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
306	29673	* Gasket, Oil filler
310B	35941	Dipstick (Incl. 306)
	611097	Alternator Coil (7 Ámp, D.C.)(Incl.32 2 & 323)
	650874	Screw, 10-32 x 15/32"
	611098	Regulator (7 Amp D.C.)
	31291	Plug, Cover
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	33323	Opt.Muffler Screen (Mini-Bike applica tion)
	730130	Kit, Exhaust adapter (Incl. 274 & 277)
	33700	Cover & Tube, Muffler (use as require d)
	CEOE70	$Sorow 0.10 \times 2/0"$ (use as required)
419	650578 720226	Screw, 8-18 x 3/8" (use as required)
419 421	650578 730226 35824	Screw, 8-18 x 3/8" (use as required) SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional

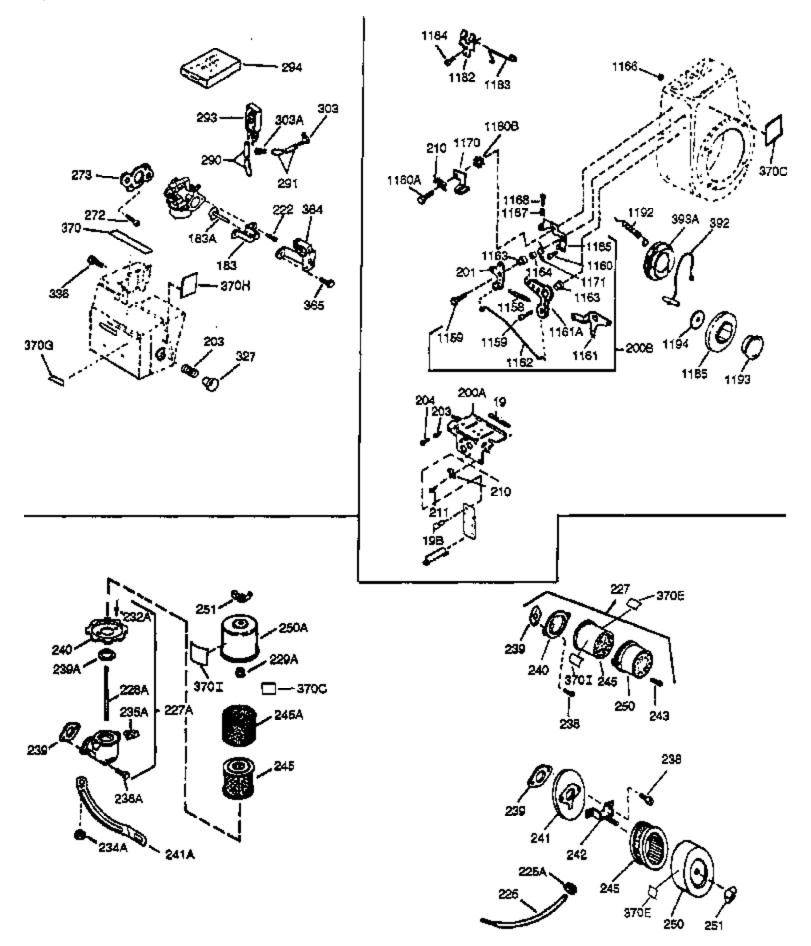

	Part Number	Qty	Description
	33857		Spring Assy., Extension (Incl. 19B)
	28942		Screw, 10-32 x 3/8"
	30322		Nut & Lockwasher, 8-32
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"
	34349A		Flange, Carburetor mounting
	30196		Screw, 5/16-18 x 3/4"
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	27793		
			Clip, Conduit
	28942		Screw, 10-32 x 3/8"
222A	05040		Pop Rivet (Can be purchased locally)
	35043		Tube Assy., Carburetor
	631334		Gasket, Carburetor
227	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
			required)
000	28820		Screw, 10-32 x 1/2"
	27272A		* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
	33269A		Cover, Air cleaner
	650513		Nut, Wing 1/4-20
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As requ ired)
291	30705		Fuel Line (Braided 16")(40cm)(As requ ired)
293	34385		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
	00745		
293	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
201	33010		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
294	33010		
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
201	00101		are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
0044	22022		
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
3014	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
001/1			as required) (1.5" I.D.)
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
303A	34237		Fitting, Fuel
303	32958		Fitting, Fuel
			-

Ref #	Part Number Qt	y Description
303	33713	Fitting, Fuel line elbow
306	29673	* Gasket, Oil filler
310B	35941	Dipstick (Incl. 306)
316	611097	Alternator Coil (7 Amp, D.C.)(Incl.32 2 & 323)
338A	31291	Plug, Cover
370	34346	Decal, Instruction
370	35274	Decal, Instruction
421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional
1159	30312	Screw, 10-32 x 1/2"
1160	28820	Screw, 10-32 x 1/2"
1160	27070	Lockwasher
1185	33816	Hub & Screen Assy.
316 338A 370 370 421 422 1159 1160 1160	611097 31291 34346 35274 730226 35824 30312 28820 27070	Alternator Coil (7 Amp, D.C.)(Incl.32 2 & 323) Plug, Cover Decal, Instruction Decal, Instruction SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional Screw, 10-32 x 1/2" Screw, 10-32 x 1/2" Lockwasher

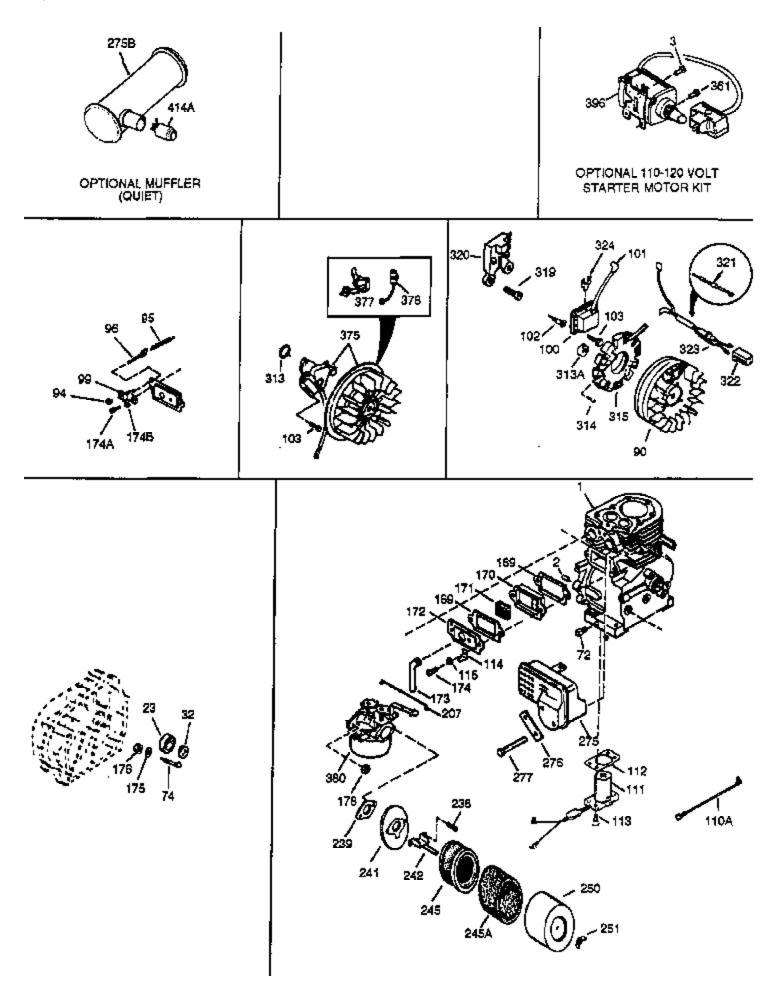

		Qty	
	35371		Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652		Pin, Dowel
23	33627		Bearing, Ball
	33628		Washer, Thrust
	30322		Nut & Lockwasher, 8-32
	27642		
			Plug, Oil drain
	31855		Retainer, Bearing
90	611094		Flywheel (w/ring gear) (7 Amp)
100	35135		Solid State Assy.
101	610118		Cover, Spark plug
	650872		Stud, Solid state mounting
	650814		Screw, Torx T-15, 10-24 x 1"
	650727		Screw, 5/16-18 x 1-3/4 (Use as required)
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
169	27896A		* Gasket, Breather
	28423		Body, Breather
	28424		Element, Breather
	28425		
			Cover, Breather
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
175	650778		Lockwasher
176	650580		Nut, Lock
187A	30196		Screw, 5/16-18 x 3/4"
	34349A		Flange, Carburetor mounting
	34785		Link, Governor lever-to-throttle
207 222A	34700		•
	00000		Pop Rivet (Can be purchased locally)
	28820		Screw, 10-32 x 1/2"
	27272A		* Gasket, Air cleaner
241	33266		Bracket, Air cleaner
242	33267		Bracket, Air cleaner
245	33268		Element, Air cleaner
	33269A		Cover, Air cleaner
	650513		Nut, Wing 1/4-20
2130	391026		Muffler (Incl. 284, 284A & 416) (This spark arrester
			mufflercan be used on any model.)
276	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
3014	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
5017	00002		required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
306	29673		* Gasket, Oil filler
	35941		Dipstick (Incl. 306)
	33876		Gasket, Stator (Used only on Std. poi nt ign.)
	650873		Screw, 1/4-20 x 3/4"
	611097		Alternator Coil (7 Amp, D.C.)(Incl.32 2 & 323)
	650874		Screw, 10-32 x 15/32"
	611098		Regulator (7 Amp D.C.)
322	610921		Connector, Body
	610824		Connector, Flat
			<i>,</i>

Ref #	Part Number Qty	/ Description
323	610922	Terminal, Female
324	33177	Terminal
338A	31291	Plug, Cover
361	30063	Screw, Torx T-30, 1/4-20 x 1/2"
377	30547A	Breaker Points (Use with Std. point i gn.)
380	632406	Carburetor (Incl. 184 & 379) (Refer to Div. 5, Sec. A, page A3-8 for breakdown or Fiche 18B, Grid D-1)
	730226 35824	SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional