



Ref #	Part Number Qt	y Description
	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
2	27652	Pin, Dowel
	650494	Screw, 6-40 x 5/16"
	30700	Yoke, Governor
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	32630	Seal, Oil Blauer Hausing Deffic (Mitheut clastic starter landlaut)
25	29536	Blower Housing Baffle (Without electric starter knockout) (Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use as required)
26	650561	Screw, 1/4-20 x 5/8"
	33720B	Crankshaft (Incl. 108 & 109)
	29826	Ścrew, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
	34543	Piston, Pin & Ring Set (Std.) (3-3/16 ")
	34544	
		Piston, Pin & Ring Set (.010" OS)
	34545	Piston, Pin & Ring Set (.020" OS)
	34031B	Piston & Pin Ass'y. (Std.)(3-3/16")(I ncl.43)
	34032B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34033B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34037	Ring Set (Std.) (3-3/16" Bore)
	34038	Ring Set (.010" OS)
	34039	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
45	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650662C	Bolt, Connecting rod (2 pieces)
47	650662C	Bolt, Connecting rod (2 pieces)
48	34034	Lifter, Valve
49	34242	Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33626B	Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	27642	Plug, Oil drain
	33625	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as required)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	650815	Washer, Belleville
	8116	Nut, Hex
101	27276	Cover, Spark plug
103	650489	Screw, 1/4-20 x 5/8"
	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
		,

Rei #	Part Number Qty	/ Description
109	33245	Gear, Crankshaft
119	34923A	* Gasket, Cylinder head
120	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
		650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650890	Washer, Internal Lock
	30747	
		Clip, Spark plug shorting
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
140	650836	Screw, 10-24 x 1/2"
149A	35862	Seal Assy., Intake valve
150	27881	Spring, Valve
	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	•
		Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
173	35350	Tube, Breather
174	650128	Screw, 10-24 x 1/2"
178	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	33263	* Gasket, Carburetor
	34707	Pipe, Intake
		•
	34661	Link, Governor lever
	34677	Control Bracket (Incl.19, 203, 204, 2 06, 209)
	31342	Spring, Compression
204	650549	Screw, 5-40 x 7/16"
207	33878	Link, Governor lever-to-throttle
209	650821	Screw, 10-32 x 1/2"
	32410	Knob, Speed control
222A	02110	Pop Rivet (Can be purchased locally)
	650378	
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
260	33375D	Blower Housing (For electric starter)
261	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
	33280A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)


		Description
	650760	Screw, 8-32 x 7/16"
	33662	Hub & Screen Assy.
287	29752	Nut, 1/4-28
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As requ ired)
	30705	Fuel Line (Braided 16")(40cm)(As requ ired)
292	26460	Fuel Line Clamp (Use as required)
	650665	Screw, 1/4-15 x 7/8"
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were builtwith different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	31297	Dipstick (Incl. 307)
338A		Plug, Cover
	34154	Plate, Upper fuel tank mtg.
341	34155	Bracket, Lower fuel tank mtg.
342	650561	Screw, 1/4-20 x 5/8"
370A	34686	Decal, Name
370	34346	Decal, Instruction
	35274	Decal, Instruction
	631021	Inlet Needle, Seat & Clip Assy.
380	631931A	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 150 for breakdown Grid E-5)
400	33279G	* Gasket Set (Incl. items marked *)
	730225	SAE 30 4-Cycle Engine Oil (Quart)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional

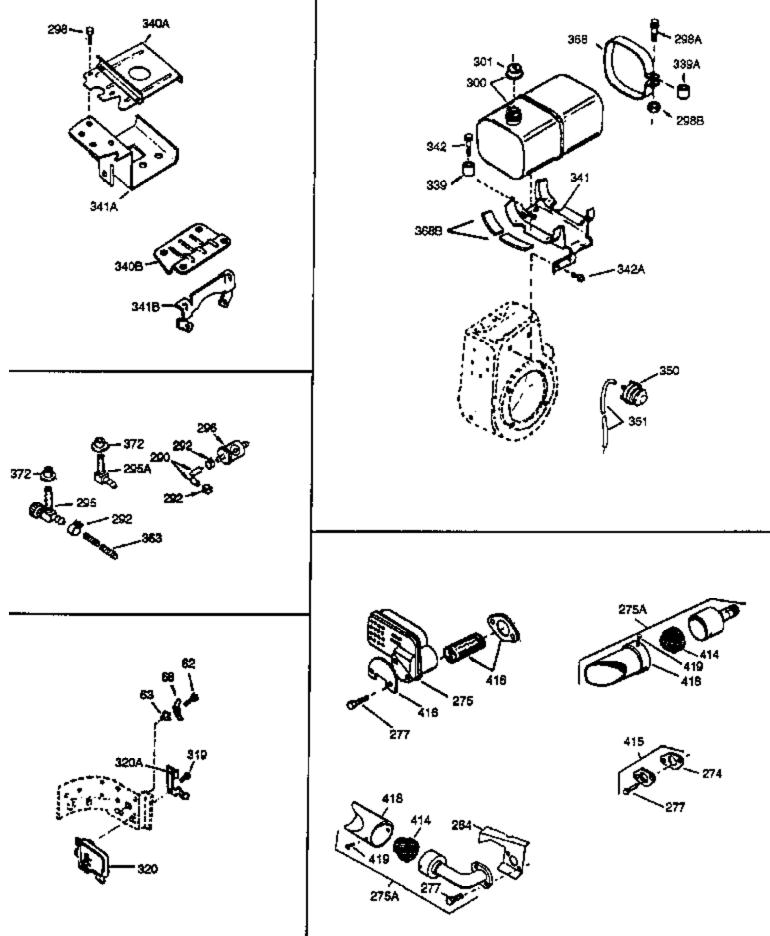

		/ Description
	30322	Nut & Lockwasher, 8-32
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
222A		Pop Rivet (Can be purchased locally)
	33269A	Cover, Air cleaner
	35865	Gasket, Exhaust
	33280A	Muffler
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
285A	33662	Hub & Screen Assy.
290	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fuel Line (Braided 32")(80cm)(As requ ired)
292	26460	Fuel Line Clamp (Use as required)
298	650665	Screw, 1/4-15 x 7/8"
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
3014	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
50 IA	4101 41 D	I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
२∩1 ∆	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
50 IA	34210	as required) (1.5" I.D.)
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	31291	Plug, Cover
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
414	33323	Opt.Muffler Screen (Mini-Bike applica tion)
415	730130	Kit, Exhaust adapter (Incl. 274 & 277)
418	33700	Cover & Tube, Muffler (use as require d)
	650578	Screw, 8-18 x 3/8" (use as required)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional

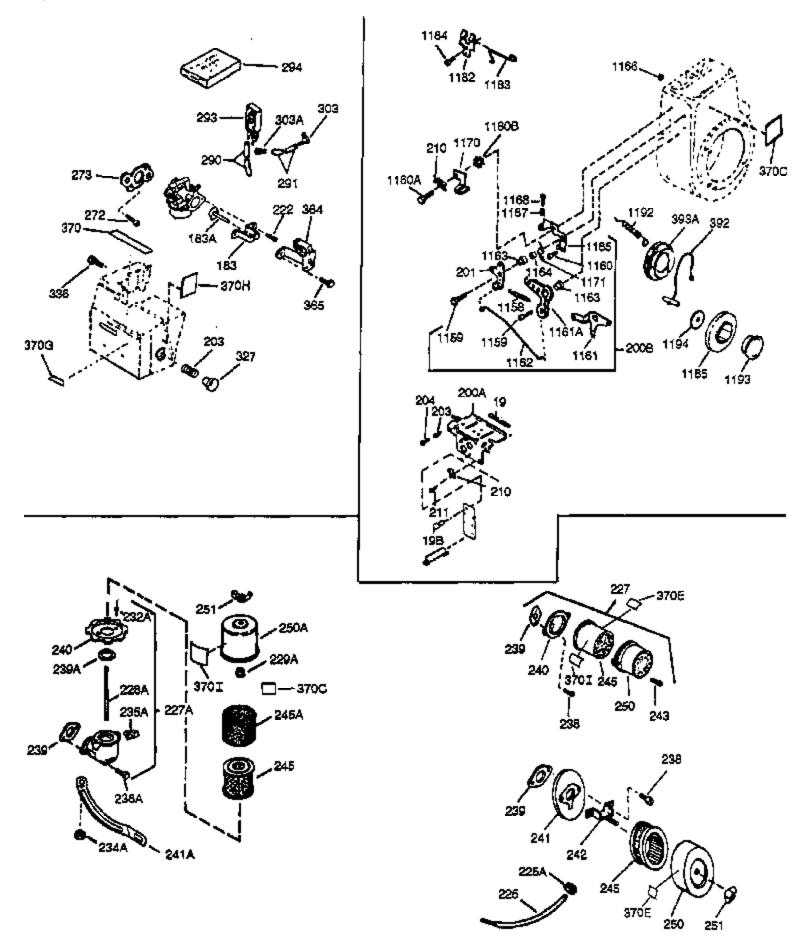

Ref #	Part Number	Qty Description
37A	30322	Nut & Lockwasher, 8-32
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	730152	Control Bracket (Incl.1158-1171)(As r eq.)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
222A		Pop Rivet (Can be purchased locally)
	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
	100121	required)
	28820	Screw, 10-32 x 1/2"
	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
242	33267	Bracket, Air cleaner
245	33268	Element, Air cleaner
250B	33269A	Cover, Air cleaner
251	650513	Nut, Wing 1/4-20
285A	33662	Hub & Screen Assy.
290	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
294	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
001/1		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
3014	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
001/1	34210	as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
303	32958	Fitting, Fuel
306	29673	* Gasket, Oil filler
338A	31291	Plug, Cover
	34346	Decal, Instruction
	35274	Decal, Instruction
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
	30312	Screw, 10-32 x 1/2"
	28820	Screw, 10-32 x 1/2"
	27070	Lockwasher
	33816	Hub & Screen Assy.
100		

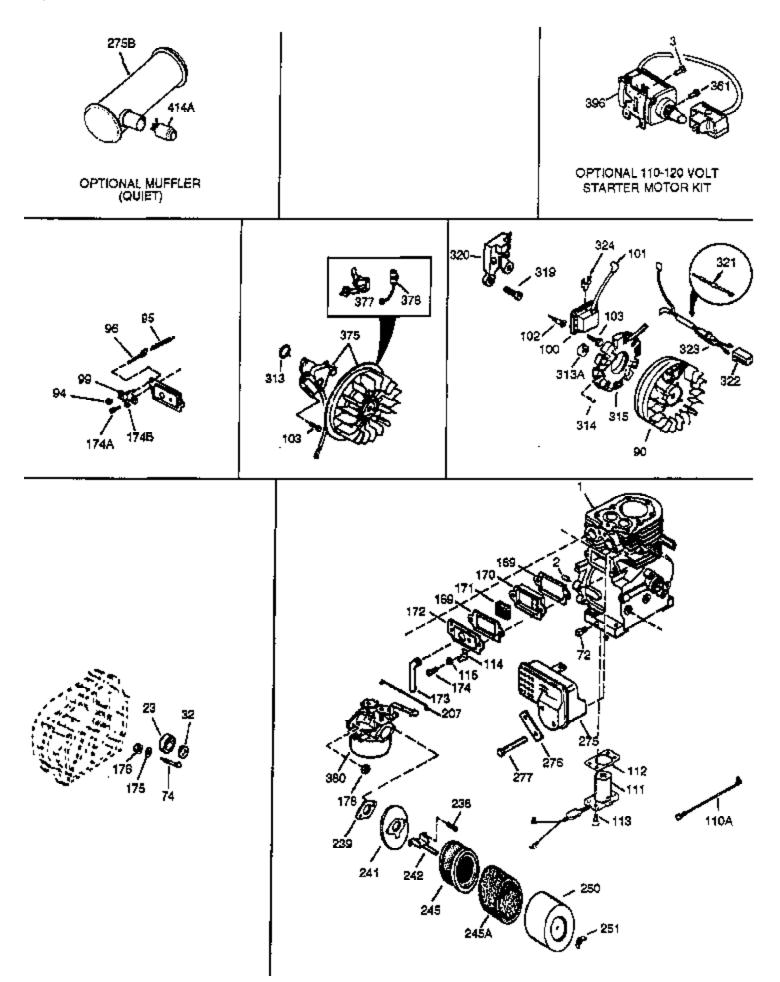

		Description
	34096C	Cylinder (Cl liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
2	27652	Pin, Dowel
23	33627	Bearing, Ball
	33628	Washer, Thrust
	30322	Nut & Lockwasher, 8-32
	27642	Plug, Oil drain
	31855	Retainer, Bearing
	27276	Cover, Spark plug
	650489	Screw, 1/4-20 x 5/8"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
169	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	
		Tube, Breather
	650128	Screw, 10-24 x 1/2"
	650778	Lockwasher
	650580	Nut, Lock
	29752	Nut & Lockwasher, 1/4-28
207	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
238	28820	Screw, 10-32 x 1/2"
239	27272A	* Gasket, Air cleaner
	33266	Bracket, Air cleaner
	33267	Bracket, Air cleaner
	33268	Element, Air cleaner
		•
	33269A	Cover, Air cleaner
	650513	Nut, Wing 1/4-20
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
275	33280A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	33662	Hub & Screen Assy.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
204 4	22022	Fuel Cap (Pad Diastia) (Spurt Desistant Law Profile) (Las as
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00 // (01210	as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
306	29673	* Gasket, Oil filler
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	Plug, Cover
	610842	Magneto NOTE: The complete magneto is not available as
575		an assembly. The magneto number is shown for reference
		purpose only. Order component parts individually, as shown
		in parts list. (Refer to Division 5, Section B, page 28 for
		breakdown or Fiche 18B, Grid F-1)
377	30547A	Breaker Points (Use with Std. point i gn.)
011		

Ref #	Part Number	Qty	Description
378	30548B		Condenser
380	631931A		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 150 for breakdown Grid E-5)
	730226 35824		SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional