




Ref #	Part Number	Qtv	Description
	35371		Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652		Pin, Dowel
	30699C		Rod Assy., Governor (Incl. 15A & 15B)
	650494		Screw, 6-40 x 5/16"
	30700		Yoke, Governor
	33454		Governor Lever Assy.
17	29916		Clamp, Governor lever
18	650548		Screw, 8-32 x 5/16"
20	35319		Seal, Oil
	35256A		Blower Housing Baffle (With electric starter knockout) (Use
20	0020071		as required)
			as required)
25	35326		Baffle, Blower housing
25	29536		Blower Housing Baffle (Without electric starter knockout)
			(Use as required)
	650561		Screw, 1/4-20 x 5/8"
30	35372A		Crankshaft (Incl. 108 & 109)
35	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
	29216		Locknut, 10-32
			·
	30322		Nut & Lockwasher, 8-32
	29642		Ring, Retaining
	34860A		Piston, Pin & Ring Set (Std.)(3-5/16")
40	34861A		Piston, Pin & Ring Set (.010" OS)
40	34862A		Piston, Pin & Ring Set (.020" OS)
41	34863		Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864		Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A		Ring Set (Std.) (3-5/16" Bore)
	34867A		Ring Set (.010" OS)
	34868A		Ring Set (.020" OS)
	27888		Ring, Piston Pin retaining
45	35373A		Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650908		Bolt, Connecting rod
47	650882		Connecting Rod Bolt (2 pcs. on early Specs.)
48	34034		Lifter, Valve
	35374		Dipper, Oil
	35375		Camshaft (MCR)
	33273A		Extension, Blower housing
	650802		
			Screw, 1/4-20 x 5/8"
	650128		Screw, 10-24 x 1/2"
	35262		* Gasket, Flange
	35376		Cover, Cylinder (Incl. 71, 75 & 80)
	35377		Bushing, Crankshaft
72	27642		Plug, Oil drain
75	35319		Seal, Oil
	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
	35378		Gear Assy., Governor (Incl. 81)
	30588A		Spool, Governor
			•
	29193		Ring, Retaining
	650833		Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832		Screw, 1/4-20 x 1-11/16" (Use as requ ired)
89	32589		Key, Flywheel
90	611091		Flywheel (w/ring gear)
	650880		Washer, Lock
	650881		Nut, 5/8-18
	35135		Solid State Assy.
100	00100		Cond State / 100y.


Ref #	Part Number Qty	Description
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
100	29703	to crank.)
		to crark.)
109	33245	Gear, Crankshaft
119	34923A	* Gasket, Cylinder head
120	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (3/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
		650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
100	000777	but discard 650691 washer.)
		,
	650694A	Screw, 5/16-18 x 2" (Use as required)
131	650737	Screw, 1/4-20 x 1/2" (Use as required )
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
133	650890	Washer, Internal Lock
	30747	Clip, Spark plug shorting
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	·
		Seal Assy., Intake valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
172	28425	Cover, Breather
173	35350	Tube, Breather
174	650128	Screw, 10-24 x 1/2"
178	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	33263	* Gasket, Carburetor
	34707	Pipe, Intake
	34661	Link, Governor lever
	34677	Control Bracket (Incl.19, 203, 204, 2 06, 209)
	31342	
		Spring, Compression
	650549	Screw, 5-40 x 7/16"
	33878	Link, Governor lever-to-throttle
	650821	Screw, 10-32 x 1/2"
	32410	Knob, Speed control
222A	050050	Pop Rivet (Can be purchased locally)
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
250B	33269A	Cover, Air cleaner
260	33375D	Blower Housing (For electric starter)
261	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
	33280A	Muffler
210		······································


	5 .N. 1	_	
	Part Number	Qty	Description
	31588		Plate, Muffler locking
	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33013		Cover, Starter bubble
	650760		Screw, 8-32 x 7/16"
	35287		Cup, Starter
	35446		Screen, Starter
	29752		Nut, 1/4-28
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
291	30705		Fuel Line (Braided 16")(40cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
204.4	440444D		,
<i>3</i> 01A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
2244	0.404.0		
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	31297		Dipstick (Incl. 307)
	35392		Plug, Starter
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33962		Decal, Control
	34346		Decal, Instruction
	35274		Decal, Instruction
	34686		Decal, Name
	631021		Inlet Needle, Seat & Clip Assy.
	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
300	UULLTL		page A4-4 for breakdown or Fiche 18B, Grid D-3)
			page A4-4 for breakdown of Fiche Tob, Glid D-3)
390	590633		Rewind Starter (Refer to Division 5, Section C, page 30 for
			breakdown or Fiche 18B, Grid G-1)
400	222700		•
	33279G 730335		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

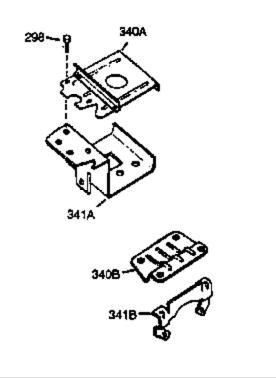


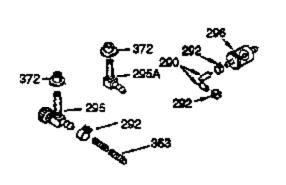


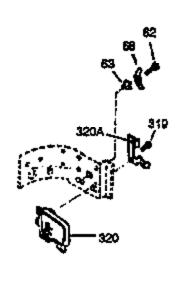


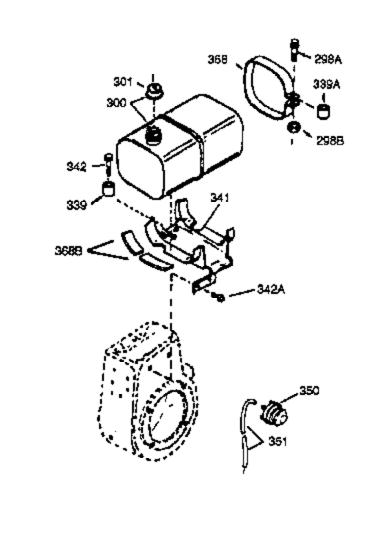

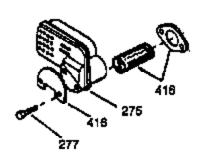  


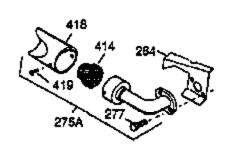






Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
64	650802		Screw, 1/4-20 x 5/8"
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required )
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
	35865		Gasket, Exhaust
	33280A		Muffler
	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
004 A	20000		
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
201 /	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
122			

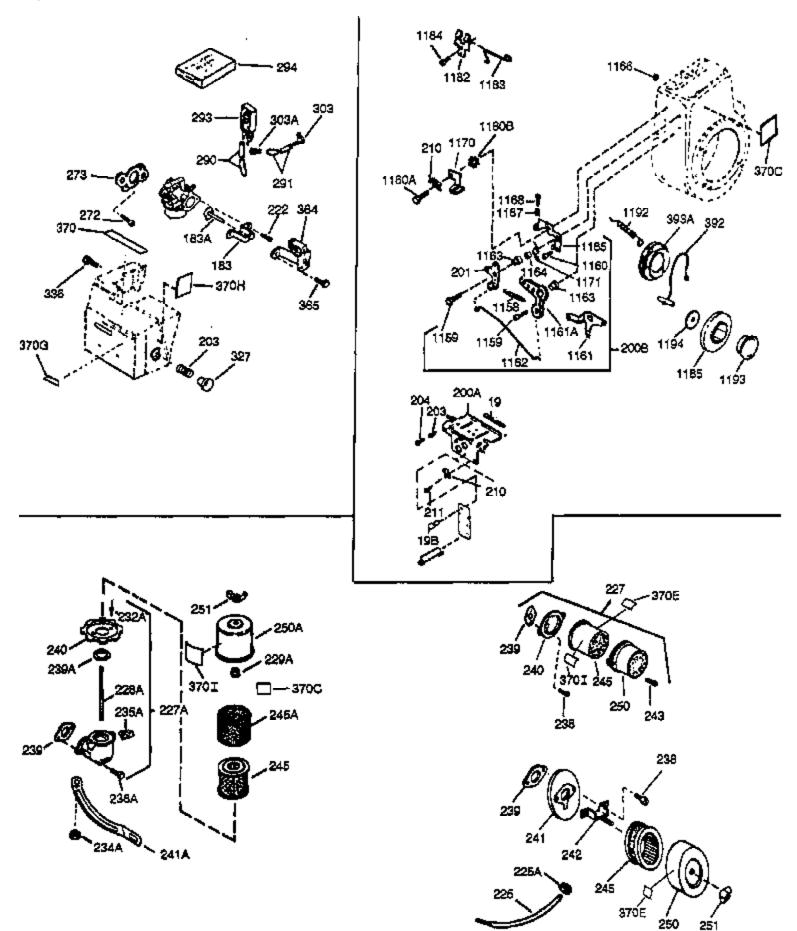

Ref #	Part Number	Qty	Description
37A 64 129 131A 131 200B 203 204 222A	30322 650802 650727 650713 650737 650738 730152 31342 650549	<u>a,y</u>	Nut & Lockwasher, 8-32 Screw, 1/4-20 x 5/8" Screw, 5/16-18 x 1-3/4 (Use as requir ed) Screw, 5/16-18 x 5/8" Screw, 1/4-20 x 1/2" (Use as required ) Screw, 1/4-20 x 5/8 (Use as required) Control Bracket (Incl.1158-1171)(As r eq.) Spring, Compression Screw, 5-40 x 7/16" Pop Rivet (Can be purchased locally) Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
238 239 241	28820 27272A 33266 33267		required)  Screw, 10-32 x 1/2"  * Gasket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner
245 250B 251 290 290 291	33268 33269A 650513 29774 30962 30705 33715		Element, Air cleaner Cover, Air cleaner Nut, Wing 1/4-20 Fuel Line (Braided 8-1/4")(21cm)(As r equired) Fuel Line (Braided 32")(80cm)(As required) Fuel Line (Braided 16")(40cm)(As required) Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
303 306 327 338A 370 370 421 422 1159 1160 1160	35355 32958 29673 35392 31291 34346 35274 730226 35824 30312 28820 27070 33816		Fuel Cap (Red Plastic)(1.75" I.D.) Fitting, Fuel * Gasket, Oil filler Plug, Starter Plug, Cover Decal, Instruction Decal, Instruction SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional Screw, 10-32 x 1/2" Screw, 10-32 x 1/2" Lockwasher Hub & Screen Assy.

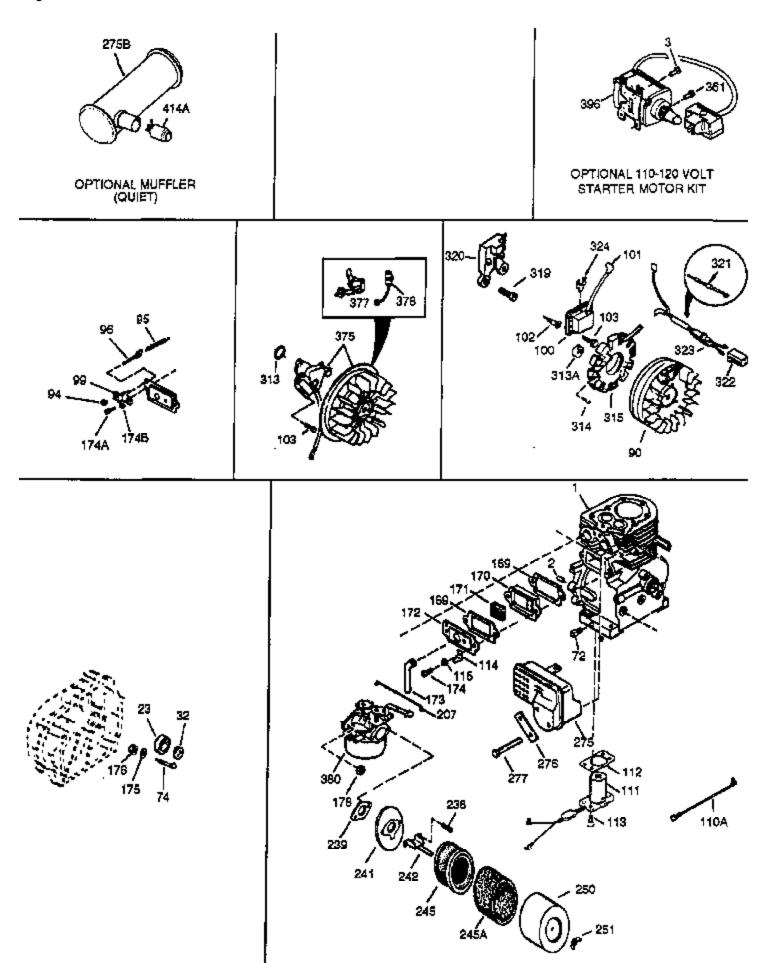

Ref #	Part Number Qt	/ Description
	35371	Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30322	Nut & Lockwasher, 8-32
	650802	Screw, 1/4-20 x 5/8"
	27642	Plug, Oil drain
	611091	Flywheel (w/ring gear)
	35135	Solid State Assy.
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
	650737	Screw, 1/4-20 x 1/2" (Use as required )
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
178	29752	Nut & Lockwasher, 1/4-28
207	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
238	28820	Screw, 10-32 x 1/2"
239	27272A	* Gasket, Air cleaner
241	33266	Bracket, Air cleaner
242	33267	Bracket, Air cleaner
245	33268	Element, Air cleaner
250B	33269A	Cover, Air cleaner
251	650513	Nut, Wing 1/4-20
	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
0==	000004	• ,
	33280A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
001/1	00002	required) (1.5" I.D.)
		. , ,
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
201Λ	35355	Fuel Cap (Ped Plastic)(1.75" LD.)
	29673	Fuel Cap (Red Plastic)(1.75" I.D.)  * Casket Oil filler
		* Gasket, Oil filler Casket, Stater (Used only on Std. poi at ign.)
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	31291	Plug, Cover  Progler Points (Llos with Std. point i.gn.)
	30547A 633343	Breaker Points (Use with Std. point i gn.)
380	632242	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page A4-4 for breakdown or Fiche 18B, Grid D-3)
421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
		•