



Ref #	Part Number	Qty	Description
1	34922A		Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652		Pin, Dowel
	650820		Screw, 1/4-20 x 1/2"
	650494		Screw, 6-40 x 5/16"
			-
	30699C		Rod Assy., Governor (Incl. 15A & 15B)
	30700		Yoke, Governor
	33454		Governor Lever Assy.
17	29916		Clamp, Governor lever
18	650548		Screw, 8-32 x 5/16"
20	32630		Seal, Oil
	29536		Blower Housing Baffle (Without electric starter knockout)
			(Use as required)
25	35256A		Blower Housing Baffle (With electric starter knockout) (Use
			as required)
20	050504		
	650561		Screw, 1/4-20 x 5/8"
	33365B		Crankshaft (Incl. 108 & 109)
35	29826		Screw, 10-32 x 3/4"
36	29918		Lockwasher, #8 E.T.
37	29216		Locknut, 10-32
37A	30322		Nut & Lockwasher, 8-32
	29642		Ring, Retaining
	34860A		Piston, Pin & Ring Set (Std.)(3-5/16")
	34861A		Piston, Pin & Ring Set (.010" OS)
	34862A		
			Piston, Pin & Ring Set (.020" OS)
	34863		Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864		Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A		Ring Set (Std.) (3-5/16" Bore)
42	34867A		Ring Set (.010" OS)
42	34868A		Ring Set (.020" OS)
43	27888		Ring, Piston Pin retaining
	32591C		Rod Assy., Connecting (Incl. 46, 47 & 49)
	650662C		Bolt, Connecting rod (2 pieces)
	650662C		Bolt, Connecting rod (2 pieces)
	34034		Lifter, Valve
	34242		
			Dipper, Oil
	34786		Camshaft (MCR) (Extended)
	33273A		Extension, Blower housing
	34126		Bracket, Grommet mounting
	650760		Screw, 8-32 x 3/8"
	28545		Grommet, Plastic
65	650128		Screw, 10-24 x 1/2"
69	35262		* Gasket, Flange
	34787		Cyl.Cover (Incl.74,75,80,175,176,311, 312)
	33368		Bushing, Crankshaft
	27642		Plug, Oil drain
	28926		Seal, Oil
	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
	30591		Gear Assy., Governor (Incl. 81)
	30588A		Spool, Governor
	29193		Ring, Retaining
	650833		Screw, 1/4-20 x 1-3/16 (Use as requir ed)
87	650832		Screw, 1/4-20 x 1-11/16" (Use as required)
89	32589		Key, Flywheel
	650815		Washer, Belleville
	8116		Nut, Hex
00			

		Qty Description
	610118	Cover, Spark plug
	650516	Screw, 1/4-20 x 1-1/8"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned to crank.)
109	33245	Gear, Crankshaft
	34240	Ground Wire
	34923A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse N 650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
	650694A	Screw, 5/16-18 x 2" (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
133	650890	Washer, Internal Lock
135	33636	Resistor Spark Plug
139	33369	Bracket, Governor gear
140	650836	Screw, 10-24 x 1/2"
149A	35862	Seal Assy., Intake valve
150	27881	Spring, Valve
151	32581	Cap, Lower valve spring
169	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	34587	Bracket, Choke
	33263	* Gasket, Carburetor
	33877	Pipe, Intake
	34667	Link, Governor lever
	34677	Control Bracket (Incl.19, 203, 204, 2 06, 209)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	610973	Terminal Assy.
	33878	Link, Governor lever-to-throttle
	650821 22410	Screw, 10-32 x 1/2" Knob Shood control
	32410	Knob, Speed control
	34586	Rod, Choke
	35438	Knob, Control
	28820	Screw, 10-32 x 1/2"
222A	050070	Pop Rivet (Can be purchased locally)
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	34822A	Blower Housing


Ref # Part Number	Qty Description
261 650788	Screw, 5/16-18 x 3/4"
262 29747B	Screw, 5/16-24 x 21/32"
265 33272B	Cover, Cylinder head
275C 35056	Muffler
276 31588	Plate, Muffler locking
276 35741	Plate, Muffler locking
277 650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277 651002	Screw, 5/16-18 x 4-1/4" (Use as required)
281 33013	Cover, Starter bubble
282 650760	Screw, 8-32 x 7/16"
285A 33662	Hub & Screen Assy.
287 29752	Nut, 1/4-28
	•
290 29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290 30962	Fuel Line (Braided 32")(80cm)(As required)
291 30705	Fuel Line (Braided 16")(40cm)(As required)
292 26460	Fuel Line Clamp (Use as required)
295 32961	Valve, Fuel shut-off
298 650665	Screw, 1/4-15 x 7/8"
300 34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
	builtwith different size fuel inlet openings. Tanks with the
	1-3/16" I.D. opening use fuel cap 34210. Tanks with the
	1-1/2" I.D. opening use fuel cap 35355.
301A 410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
	I.D.)
301A 33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
00117 00002	required) (1.5" I.D.)
301A 34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
	as required) (1.5" I.D.)
201 1 25255	Fuel Con (Pod Plantin)/1 75" I.D.)
301A 35355	Fuel Cap (Red Plastic)(1.75" I.D.)
305 33893A	
307 33590	"O" Ring
310 34011A	Dipstick (Incl. 307)
336 650765	Screw, 10-32 x 1/2"
337 35057A	Cover, Carburetor (Incl. 329)
338A 31291	Plug, Cover
338 28942	Screw, Sems 10-32 x 3/8"
340 34154	Plate, Upper fuel tank mtg.
341 34155	Bracket, Lower fuel tank mtg.
342 650561	Screw, 1/4-20 x 5/8"
359 34141	Guard, Starter
360 32576	Seal, Snow Guard
365 650767	Screw, 8-32 x 27/64"
370 34346	Decal, Instruction
370 35274	Decal, Instruction
370B 35344	Decal, Control
370D 33344 370C 34589	
	Decal, Choke
370D 34144	Decal, Primer
370A 34686	Decal, Name
379 631021	Inlet Needle, Seat & Clip Assy.
380 632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
	page 168 for breakdown or Fiche18B, Grid E-9)
	* Gasket Set (Incl. items marked *)
100 333700	
400 33279G 420 720225	
420 730225	SAE 30 4-Cycle Engine Oil (Quart)

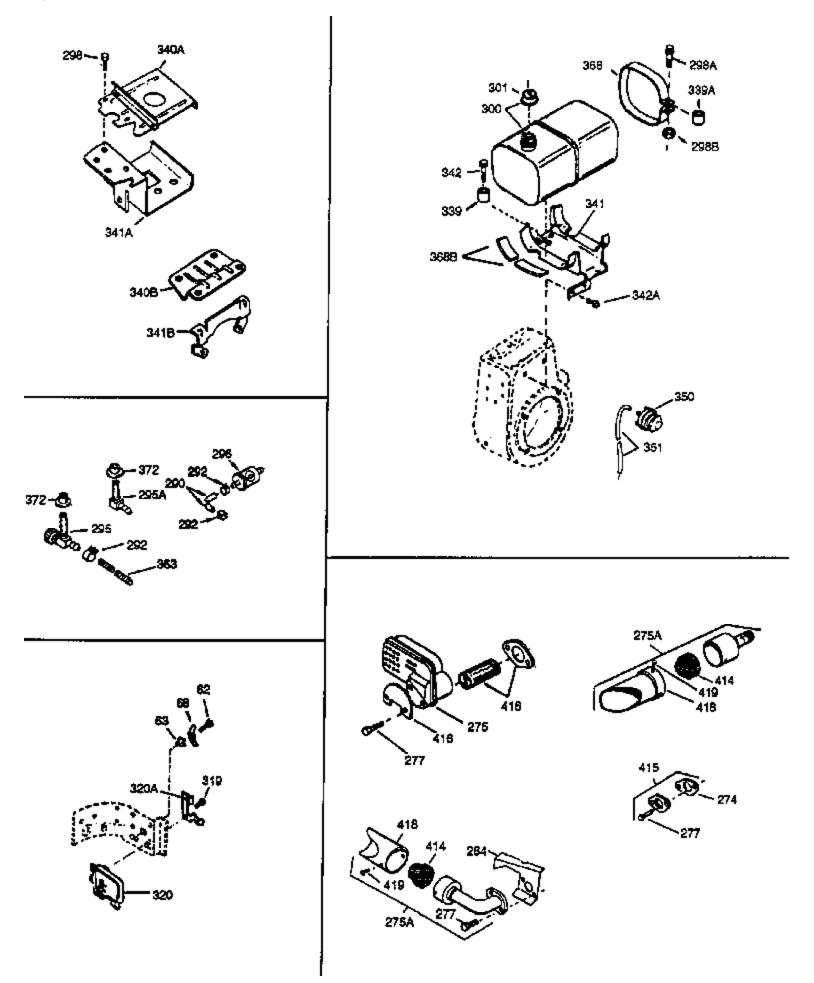

		Description
	30322	Nut & Lockwasher, 8-32
	650760	Screw, 8-32 x 3/8"
63	28545	Grommet, Plastic
129	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
222A		Pop Rivet (Can be purchased locally)
274	35865	Gasket, Exhaust
275C	35056	Muffler
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	33662	Hub & Screen Assy.
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	26460	Fuel Line Clamp (Use as required)
	32961	Valve, Fuel shut-off
	650665	Screw, 1/4-15 x 7/8"
	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
00171	00002	required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	35057A	Cover, Carburetor (Incl. 329)
	31291	Plug, Cover
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	570682	Primer Assy.
	32180C	Line, Primer
	34144	Decal, Primer
	33323	•
		Opt.Muffler Screen (Mini-Bike applica tion)
	730130	Kit, Exhaust adapter (Incl. 274 & 277)
	33700	Cover & Tube, Muffler (use as require d)
	650578 720226	Screw, 8-18 x 3/8" (use as required)
	730226 35824	SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional
	3778 //I	

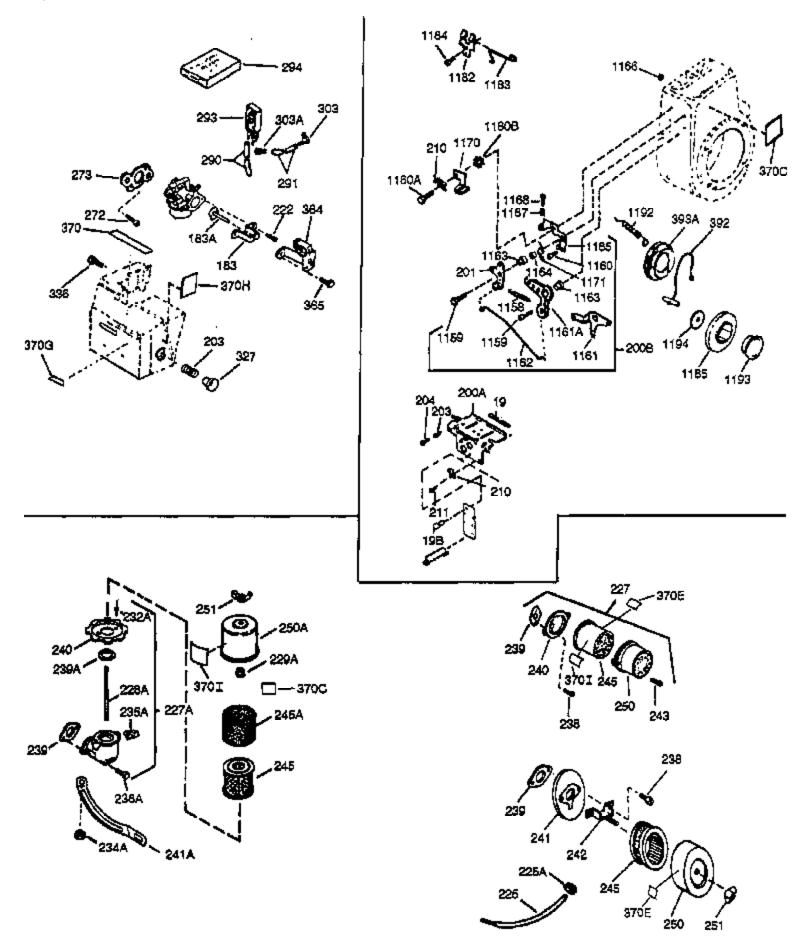

		/ Description
37A	30322	Nut & Lockwasher, 8-32
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	34587	Bracket, Choke
	730152	Control Bracket (Incl.1158-1171)(As r eq.)
	31342	Spring, Compression
204	650549	Screw, 5-40 x 7/16"
222A		Pop Rivet (Can be purchased locally)
222	28820	Screw, 10-32 x 1/2"
	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
	100121	required)
275C	35056	Muffler
285A	33662	Hub & Screen Assy.
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 32) (40cm) (As required)
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair k
		is used with the 35813 and 35800 fuel pumps.
294	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pump
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair ki
		is used with the 35813 and 35800 fuel pumps.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use a
00171	00002	required) (1.5" I.D.)
2014	04040	
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	32958	Fitting, Fuel
	650765	Screw, 10-32 x 1/2"
	35057A	
		Cover, Carburetor (Incl. 329)
	31291	Plug, Cover
	33377	Bracket, Carburetor cover mtg.
	650767	Screw, 8-32 x 27/64"
370C	34589	Decal, Choke
	34346	Decal, Instruction
	35274	Decal, Instruction
	34144	Decal, Primer
		-
	34414	Decal, Warning
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional
1159	30312	Screw, 10-32 x 1/2"
	28820	Screw, 10-32 x 1/2"
	27070	Lockwasher
		Hub & Screen Assy.
1185		HUD & SCIERD ASSV

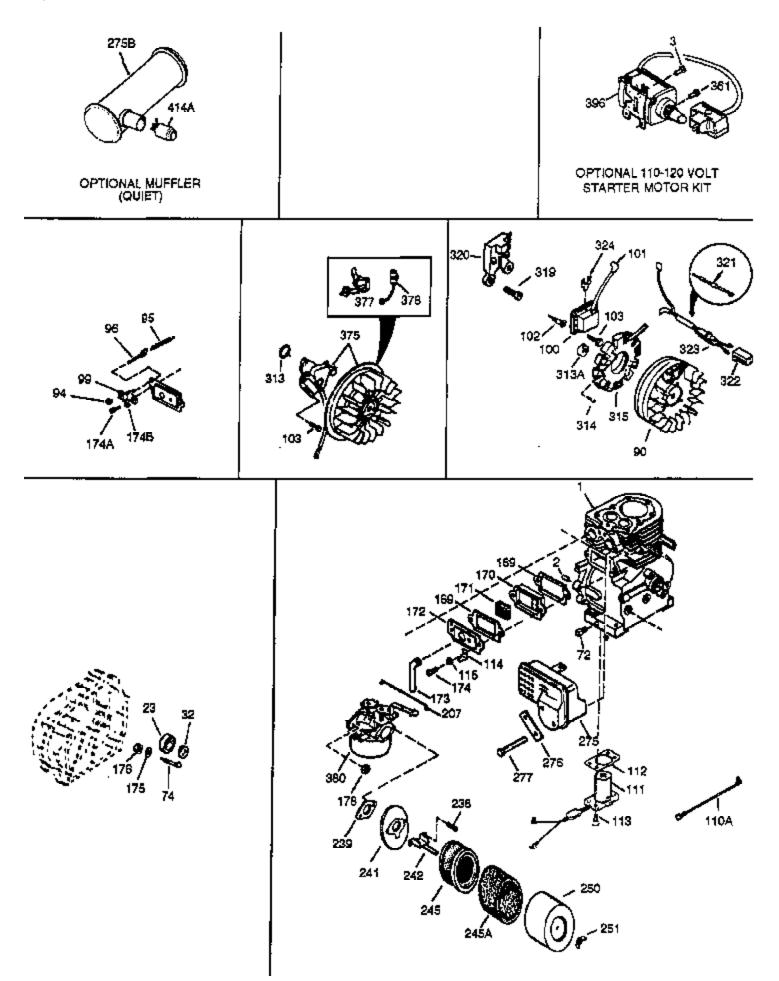

1 34922A 2 27652 3 650820 37A 30322 72 27642 101 610118 103 650516 129 650727 131 650737 131 650738 131A 650713 169 27896A 170 28423 171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A 275C 275C 35056	Cylinder (CI liner)($3-5/16"$)(Incl.2,2 0 & 72) Pin, Dowel Screw, 1/4-20 x 1/2" Nut & Lockwasher, $8-32$ Plug, Oil drain Cover, Spark plug Screw, 1/4-20 x 1-1/8" Screw, 5/16-18 x 1-3/4 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" * Gasket, Breather Body, Breather Element, Breather Element, Breather Cover, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle Pop Rivet (Can be purchased locally)
3 650820 37A 30322 72 27642 101 610118 103 650516 129 650727 131 650737 131 650738 131A 650713 169 27896A 170 28423 171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A	Screw, 1/4-20 x 1/2" Nut & Lockwasher, 8-32 Plug, Oil drain Cover, Spark plug Screw, 1/4-20 x 1-1/8" Screw, 5/16-18 x 1-3/4 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" * Gasket, Breather Body, Breather Element, Breather Element, Breather Cover, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
37A 30322 72 27642 101 610118 103 650516 129 650727 131 650738 131A 650713 169 27896A 170 28423 171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A	Nut & Lockwasher, 8-32 Plug, Oil drain Cover, Spark plug Screw, 1/4-20 x 1-1/8" Screw, 5/16-18 x 1-3/4 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" * Gasket, Breather Body, Breather Element, Breather Element, Breather Cover, Breather Tube, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
37A 30322 72 27642 101 610118 103 650516 129 650727 131 650738 131A 650713 169 27896A 170 28423 171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A	Nut & Lockwasher, 8-32 Plug, Oil drain Cover, Spark plug Screw, 1/4-20 x 1-1/8" Screw, 5/16-18 x 1-3/4 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" * Gasket, Breather Body, Breather Element, Breather Element, Breather Cover, Breather Tube, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
72 27642 101 610118 103 650516 129 650727 131 650737 131 650738 131A 650713 169 27896A 170 28423 171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A	Plug, Oil drain Cover, Spark plug Screw, 1/4-20 x 1-1/8" Screw, 5/16-18 x 1-3/4 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" * Gasket, Breather Body, Breather Element, Breather Element, Breather Cover, Breather Tube, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
101 610118 103 650516 129 650727 131 650737 131 650738 131A 650713 169 27896A 170 28423 171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A	Cover, Spark plug Screw, 1/4-20 x 1-1/8" Screw, 5/16-18 x 1-3/4 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" * Gasket, Breather Body, Breather Element, Breather Cover, Breather Tube, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
103 650516 129 650727 131 650737 131 650738 131A 650713 169 27896A 170 28423 171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A	Screw, 1/4-20 x 1-1/8" Screw, 5/16-18 x 1-3/4 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" * Gasket, Breather Body, Breather Element, Breather Cover, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
129 650727 131 650737 131 650738 131A 650713 169 27896A 170 28423 171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A	Screw, 5/16-18 x 1-3/4 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" * Gasket, Breather Body, Breather Body, Breather Element, Breather Cover, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
131 650737 131 650738 131A 650713 169 27896A 170 28423 171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A	Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" * Gasket, Breather Body, Breather Element, Breather Cover, Breather Tube, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
131 650738 131A 650713 169 27896A 170 28423 171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A	Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" * Gasket, Breather Body, Breather Element, Breather Cover, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
131A 650713 169 27896A 170 28423 171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A	Screw, 5/16-18 x 5/8" * Gasket, Breather Body, Breather Element, Breather Cover, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
169 27896A 170 28423 171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A	* Gasket, Breather Body, Breather Element, Breather Cover, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
170 28423 171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A	* Gasket, Breather Body, Breather Element, Breather Cover, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
170 28423 171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A	Body, Breather Element, Breather Cover, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
171 28424 172 28425 173 35350 174 650128 178 29752 207 33878 222A	Element, Breather Cover, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
172 28425 173 35350 174 650128 178 29752 207 33878 222A	Cover, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
173 35350 174 650128 178 29752 207 33878 222A	Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
174 650128 178 29752 207 33878 222A	Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
178 29752 207 33878 222A	Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle
207 33878 222A	Link, Governor lever-to-throttle
222A	
	Pop Rivet (Can be purchased locally)
275C 35056	
	Muffler
275B 391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
	mufflercan be used on any model.)
276 31588	Plate, Muffler locking
276 35741	Plate, Muffler locking
277 650729	Screw, 5/16-18 x 3-3/16" (Use as required)
277 651002	Screw, 5/16-18 x 4-1/4" (Use as required)
285A 33662	Hub & Screen Assy.
301A 410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
	I.D.)
301A 33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
	required) (1.5" I.D.)
2014 24210	Fuel Cap (Pad Plastia) (Spurt Pagistant High Profile) (Lag
301A 34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
	as required) (1.5" I.D.)
301A 35355	Fuel Cap (Red Plastic)(1.75" I.D.)
313A 33876	Gasket, Stator (Used only on Std. poi nt ign.)
337 35057A	
	Cover, Carburetor (Incl. 329)
338A 31291	Plug, Cover
370D 34144	Decal, Primer
375 610982	Magneto (w/ring gear) (12 Volt, 3 Amp) NOTE: The
	complete magneto is not available as an assembly.
	Themagneto number is shown for reference purpose only.
	Order component parts individually, as shown in parts list.
	(Refer to Division 5, Section B, page 36 for breakdown or
	Fiche 18B, Grid F-3
377 30547A	Breaker Points (Use with Std. point i gn.)
378 610767A	Condenser
380 632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
	page 168 for breakdown or Fiche18B, Grid E-9)
421 730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422 35824	Muffler Optional