




	5 (1)	
		/ Description
	34922A	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
3	650820	Screw, 1/4-20 x 1/2"
15B	650494	Screw, 6-40 x 5/16"
15	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	30700	Yoke, Governor
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
		•
	32630	Seal, Oil
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
25	30230A	• , ,
		as required)
26	650561	Screw, 1/4-20 x 5/8"
	33365B	Crankshaft (Incl. 108 & 109)
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	29216	·
		Locknut, 10-32
	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
40	34861A	Piston, Pin & Ring Set (.010" OS)
40	34862A	Piston, Pin & Ring Set (.020" OS)
41	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
41	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	Ring Set (.010" OS)
	34868A	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650662C	Bolt, Connecting rod (2 pieces)
	650662C	Bolt, Connecting rod (2 pieces)
48	34034	Lifter, Valve
49	34242	Dipper, Oil
50	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	34126	Bracket, Grommet mounting
	650760	Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	650128	
		Screw, 10-24 x 1/2" * Cooket Flance
	35262	* Gasket, Flange
	33367B	Cover, Cylinder (Incl. 71, 75 & 80)
	33368	Bushing, Crankshaft
72	27642	Plug, Oil drain
75	31950	Seal, Oil
80	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as required)
	650832	Screw, 1/4-20 x 1-11/16" (Use as requ ired)
	32589	Key, Flywheel
	650815	Washer, Belleville
93	8116	Nut, Hex


	D	
		/ Description
	610118	Cover, Spark plug
	650489	Screw, 1/4-20 x 5/8"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
109	33245	Gear, Crankshaft
	34240	Ground Wire
	34923A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
		650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
100	000711	but discard 650691 washer.)
		,
	650694A	Screw, 5/16-18 x 2" (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
133	650890	Washer, Internal Lock
135	33636	Resistor Spark Plug
139	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
		·
	30088A 34587	Screw, 1/4-28 x 1"
		Bracket, Choke
	33263	* Gasket, Carburetor
	33877	Pipe, Intake
	34667	Link, Governor lever
	34677	Control Bracket (Incl.19, 203, 204, 2 06, 209)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	610973	Terminal Assy.
	33878	Link, Governor lever-to-throttle
	650821	Screw, 10-32 x 1/2"
	32410	Knob, Speed control
	34586	Rod, Choke
220	35438	Knob, Control
222	28820	Screw, 10-32 x 1/2"
222A		Pop Rivet (Can be purchased locally)
223	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	34822A	Blower Housing
=00		3


	D this is	D : 6
		Description Servy 5/16 18 v 3/4"
	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
	35056	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33013	Cover, Starter bubble
	650760	Screw, 8-32 x 7/16"
	33662	Hub & Screen Assy.
	29752	Nut, 1/4-28
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As requ ired)
	30705	Fuel Line (Braided 16")(40cm)(As required)
	26460	Fuel Line Clamp (Use as required)
	32961	Valve, Fuel shut-off
	650665	Screw, 1/4-15 x 7/8"
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
001/1	1101110	I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
	- · · · · · ·	as required) (1.5" I.D.)
0044	05055	, , , ,
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	33893A	Oil Fill Tube
	33590	"O" Ring
	34011A	Dipstick (Incl. 307)
	650765	Screw, 10-32 x 1/2"
	35057A	Cover, Carburetor (Incl. 329)
	31291	Plug, Cover
	28942	Screw, Sems 10-32 x 3/8"
	34154	Plate, Upper fuel tank mtg.
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	34141	Guard, Starter
	32576	Seal, Snow Guard
	650767	Screw, 8-32 x 27/64"
	34346	Decal, Instruction
	35274	Decal, Instruction
	35344	Decal, Control
	34589	Decal, Choke
	34144	Decal, Primer
	34686	Decal, Name
	631021	Inlet Needle, Seat & Clip Assy.
380	632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page 168 for breakdown or Fiche18B, Grid E-9)
400	33279G	* Gasket Set (Incl. items marked *)
	730225	SAE 30 4-Cycle Engine Oil (Quart)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
122		

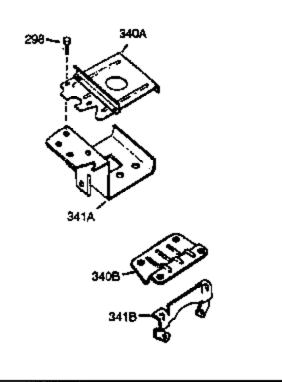


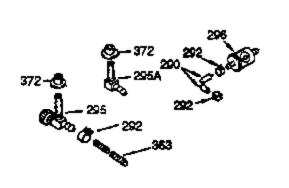


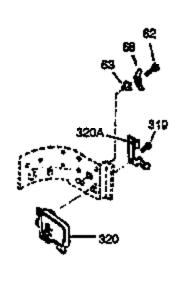

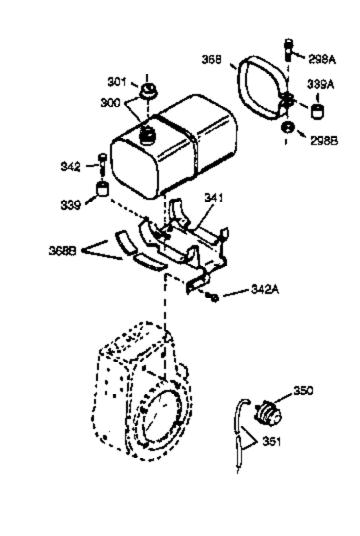

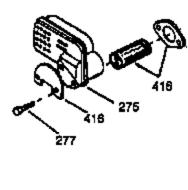


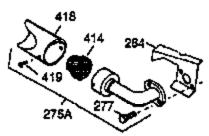

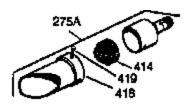



Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
62	650760		Screw, 8-32 x 3/8"
63	28545		Grommet, Plastic
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
222A			Pop Rivet (Can be purchased locally)
274	35865		Gasket, Exhaust
275C	35056		Muffler
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
285A	33662		Hub & Screen Assy.
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As requ ired)
292	26460		Fuel Line Clamp (Use as required)
295	32961		Valve, Fuel shut-off
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
3∩1∆	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
30 IA	4101410		I.D.)
			·
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00171	0.12.10		as required) (1.5" I.D.)
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	35057A		Cover, Carburetor (Incl. 329)
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	570682		Primer Assy.
	32180C		Line, Primer
	34144		Decal, Primer
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

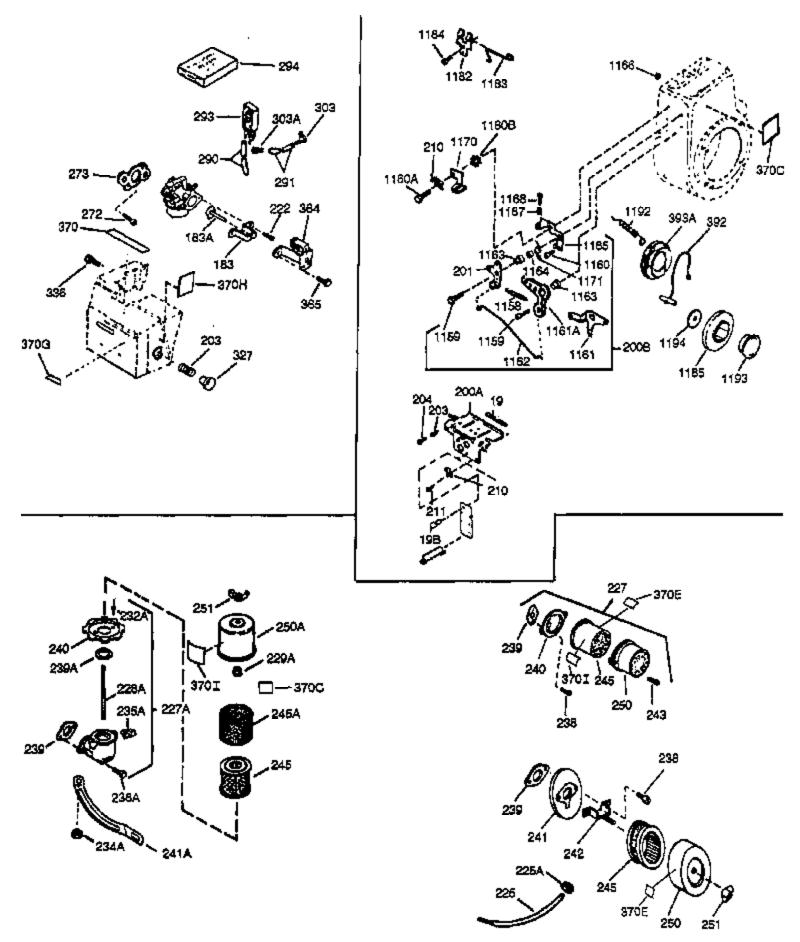

	Part Number	Qty	Description
	30322		Nut & Lockwasher, 8-32
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
183	34587		Bracket, Choke
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
222A			Pop Rivet (Can be purchased locally)
	28820		Screw, 10-32 x 1/2"
221	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as required)
2750	35056		Muffler
	33662		Hub & Screen Assy.
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As requ ired)
	30705		Fuel Line (Braided 16")(40cm)(As required)
293	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
00.4	05704		···
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
301Δ	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
30 IA	4101440		I.D.)
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
004.4	0.4040		. , , ,
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
3∩1∆	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	32958		Fitting, Fuel
	650765		Screw, 10-32 x 1/2"
	35057A		Cover, Carburetor (Incl. 329)
	31291		
			Plug, Cover
	33377		Bracket, Carburetor cover mtg.
	650767		Screw, 8-32 x 27/64"
	34589		Decal, Choke
	34346		Decal, Instruction
	35274		Decal, Instruction
370D	34144		Decal, Primer
370E	34414		Decal, Warning
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
	30312		Screw, 10-32 x 1/2"
	28820		Screw, 10-32 x 1/2"
	27070		Lockwasher
1183	33816		Hub & Screen Assy.



Ref #	Part Number C	ty Description
1	34922A	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652	Pin, Dowel
3	650820	Screw, 1/4-20 x 1/2"
37A	30322	Nut & Lockwasher, 8-32
	27642	Plug, Oil drain
	610118	Cover, Spark plug
	650489	Screw, 1/4-20 x 5/8"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 1/2 (Use as required)
	650713	
		Screw, 5/16-18 x 5/8" * Cooket Proofbor
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
207	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
275C	35056	Muffler
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
276	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	33662	Hub & Screen Assy.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
204.4	22022	
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
0044	04040	. , , ,
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
313A	33876	Gasket, Stator (Used only on Std. poi nt ign.)
337	35057A	Cover, Carburetor (Incl. 329)
338A	31291	Plug, Cover
	34144	Decal, Primer
	610848	Magneto (w/ring gear for 120 Volt sta rter) NOTE: The
0.0	0.100.10	complete magneto is not available as an assembly.
		Themagneto number is shown for reference purpose only.
		Order component parts individually, as shown in parts list.
		(Refer to Division 5, Section B, page 28 for breakdown or
		Fiche 18B, Grid F-1
277	30547A	
		Breaker Points (Use with Std. point i gn.)
	30548B	Condenser Corburgetor (Incl. 194. 8, 270) (Refer to Division F. Section A.
380	632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)
404	720006	
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional